




Repair Manual Jetta 2015 ➤

6-Speed Dual Clutch Transmission 02E

Engine ID	CBP A	CPLA	CPP A	CVC A	DEB A	DELA			
-----------	----------	------	----------	----------	----------	------	--	--	--

Edition 06.2017

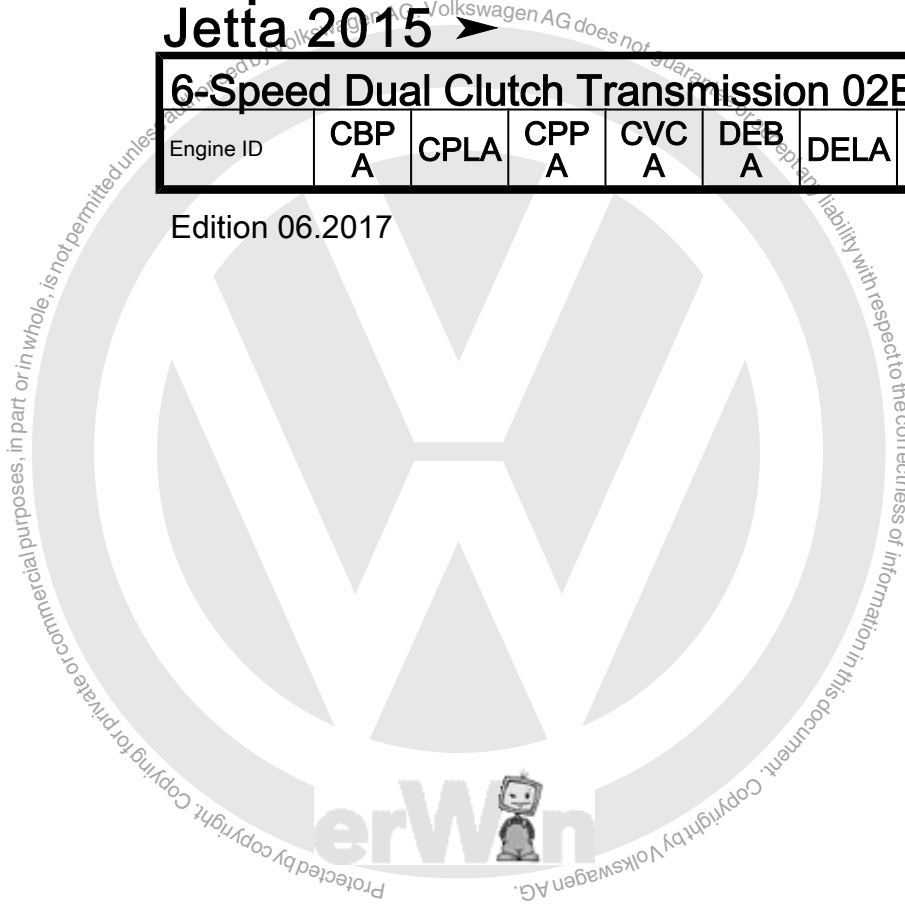



List of Workshop Manual Repair Groups

Repair Group

00 - General, Technical Data

30 - Clutch

34 - Controls, Housing

39 - Final Drive, Differential



Technical information should always be available to the foremen and mechanics, because their careful and constant adherence to the instructions is essential to ensure vehicle road-worthiness and safety. In addition, the normal basic safety precautions for working on motor vehicles must, as a matter of course, be observed.

All rights reserved.
No reproduction without prior agreement from publisher.




Contents

00 - General, Technical Data	1
1 Safety Precautions	1
1.1 General Safety Precautions	1
1.2 Safety Precautions when Working on Vehicles with Start/Stop System	1
1.3 Safety Precautions when Tow Starting and Towing	2
1.4 Safety Precautions during Road Test with Testing Equipment	2
2 Identification	3
2.1 Transmission Identification	3
3 Repair Information	5
3.1 General Information	5
3.2 Transmission Control Module Safety Functions	5
3.3 Guidelines for Clean Working Conditions	6
3.4 General Repair Information	6
4 Technical Data	9
4.1 Capacities	9
4.2 Transmission/Engine Allocation	9
5 Electrical Components	10
5.1 Overview - Electrical Components	10
30 - Clutch	11
1 Clutch	11
1.1 Overview - Dual Clutch	11
1.2 Clutch End Cover, Removing and Installing	13
1.3 Dual Clutch, Removing	18
1.4 Dual Clutch, Installing	20
2 Special Tools	26
34 - Controls, Housing	27
1 Mechatronic	27
1.1 Mechatronic, Removing and Installing	27
1.2 Transmission Input Speed Sensor G182 / Clutch Oil Temperature Sensor G509 , Removing and Installing	45
2 Selector Mechanism	46
2.1 Overview - Selector Mechanism	46
2.2 Selector Mechanism, Removing and Installing	48
2.3 Selector Lever Cable, Checking and Adjusting	55
2.4 Emergency Release from "P"	57
2.5 Selector Lever Handle, Removing and Installing	57
2.6 Button in Handle, Moving into Installation Position	60
2.7 Gearshift Mechanism, Checking	62
2.8 Selector Shaft Seal, Replacing	63
3 Transmission, Removing and Installing	65
3.1 Transmission, Removing	65
3.2 Transmission, Installing	84
3.3 Transmission Tightening Specifications	90
4 Subframe Mount	91
4.1 Overview - Subframe Mount	91
5 Transmission, Transporting	93
6 Transmission, Disassembling and Assembling	94
6.1 Overview - Transmission	94
7 Securing on Engine and Transmission Holder	99



8	Transmission Fluid Circuit	100
8.1	Transmission Fluid Cooler, Removing and Installing	100
8.2	Transmission Fluid Pump, Removing and Installing	102
8.3	Transmission Fluid Filter, Removing and Installing	104
9	Transmission Fluid	107
9.1	Transmission Fluid Level, Checking	107
9.2	Transmission Fluid, Draining and Filling	109
10	Special Tools	113
39 - Final Drive, Differential		116
1	Seals	116
1.1	Overview - Seals	116
1.2	Left Seal, Replacing	117
1.3	Right Seal, Replacing	118
2	Special Tools	121
3	Revision History	123

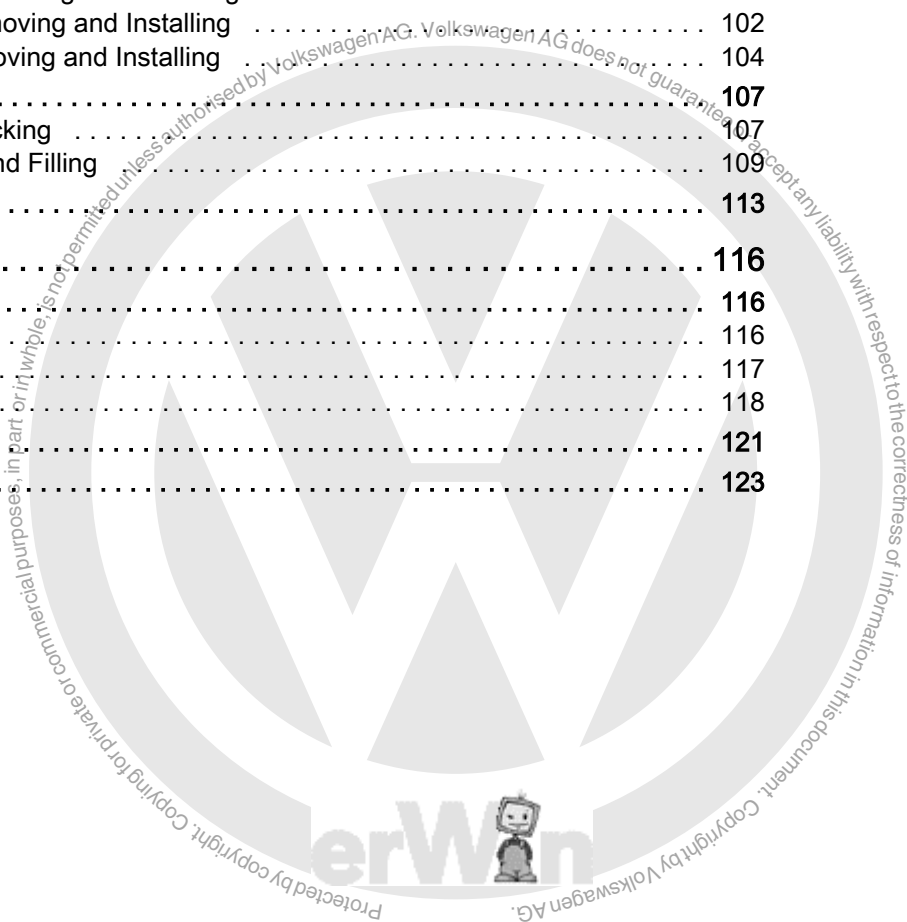



00 – General, Technical Data

1 Safety Precautions

(Edition 06.2017)

⇒ [“1.1 General Safety Precautions”, page 1](#)


⇒ [“1.2 Safety Precautions when Working on Vehicles with Start/Stop System”, page 1](#)

⇒ [“1.3 Safety Precautions when Tow Starting and Towing”, page 2](#)

⇒ [“1.4 Safety Precautions during Road Test with Testing Equipment”, page 2](#)

1.1 General Safety Precautions

Observe the following to avoid personal injury and vehicle damage:




WARNING

Risk of injury and accident by accidentally engaging a selector lever position with the engine running.

- ◆ *Move the selector lever into “P” and set the parking brake before working on a running engine.*

To prevent personal injury and damage to electrical and electronic components, observe the following:

- ◆ Only connect and disconnect test equipment when the ignition is off.




Caution

Risk of destroying electronic components when disconnecting the battery.

- ◆ *Follow the steps when disconnecting the battery.*
- ◆ *Always turn off the ignition before disconnecting the battery.*

- Disconnect the battery. Refer to ⇒ Electrical Equipment; Rep. Gr. 27 ; Battery; Battery, Disconnecting and Connecting .

1.2 Safety Precautions when Working on Vehicles with Start/Stop System

 **WARNING**

There is a risk of injury from unintended engine start.

The engine can start unexpectedly when the Start/Stop System is activated on the vehicle. A message in the instrument cluster indicates whether the Start/Stop System is activated.

- Deactivate the Start/Stop System: switch off the ignition.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$