

**I650M**  
**Tier 2**  
**Crawler Dozer**  
*PIN NGC107000 and above*

**SERVICE MANUAL**

**Part number 48048568**  
1<sup>st</sup> edition English  
April 2017





## **SERVICE MANUAL**

**1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Tier 2 [NGC107000 - ]**  
**1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Tier 2**  
**[NGC107000 - ]**  
**1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Tier 2**  
**[NGC107000 - ]**

# Contents

---

## INTRODUCTION

|   |      |
|---|------|
| Engine.....                                   | 10   |
| [10.001] Engine and crankcase .....           | 10.1 |
| [10.202] Air cleaners and lines .....         | 10.2 |
| [10.206] Fuel filters .....                   | 10.3 |
| [10.304] Engine lubrication system.....       | 10.4 |
| [10.310] Aftercooler.....                     | 10.5 |
| [10.400] Engine cooling system .....          | 10.6 |
| [10.414] Fan and drive .....                  | 10.7 |
| Hydrostatic drive.....                        | 29   |
| [29.218] Pump and motor components.....       | 29.1 |
| Brakes and controls .....                     | 33   |
| [33.110] Parking brake or parking lock .....  | 33.1 |
| [33.202] Hydraulic service brakes .....       | 33.2 |
| Hydraulic systems.....                        | 35   |
| [35.000] Hydraulic systems.....               | 35.1 |
| [35.300] Reservoir, cooler, and filters.....  | 35.2 |
| [35.104] Fixed displacement pump.....         | 35.3 |
| [35.105] Charge pump.....                     | 35.4 |
| [35.359] Main control valve.....              | 35.5 |
| [35.741] Dozer blade cylinders .....          | 35.6 |
| Tracks and track suspension .....             | 48   |
| [48.130] Track frame and driving wheels ..... | 48.1 |
| [48.100] Tracks .....                         | 48.2 |
| [48.134] Track tension units .....            | 48.3 |
| [48.138] Track rollers .....                  | 48.4 |

|   |           |
|---|-----------|
| [48.140] Dropbox and final drive .....  | 48.5      |
| [48.AAA] Tracks and track suspension generic sub-group .....                    | 48.6      |
| <b>Cab climate control .....</b>  | <b>50</b> |
| [50.100] Heating .....  | 50.1      |
| [50.104] Ventilation .....  | 50.2      |
| [50.200] Air conditioning .....   | 50.3      |
| <b>Electrical systems .....</b>   | <b>55</b> |
| [55.000] Electrical system .....  | 55.1      |
| [55.011] Fuel tank system .....   | 55.2      |
| [55.014] Engine intake and exhaust system .....                                 | 55.3      |
| [55.015] Engine control system .....  | 55.4      |
| [55.030] Service brake electrical system .....                                  | 55.5      |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system ..... | 55.6      |
| [55.100] Harnesses and connectors .....   | 55.7      |
| [55.201] Engine starting system .....   | 55.8      |
| [55.202] Cold start aid .....   | 55.9      |
| [55.301] Alternator .....   | 55.10     |
| [55.302] Battery .....  | 55.11     |
| [55.408] Warning indicators, alarms, and instruments .....                      | 55.12     |
| [55.512] Cab controls .....   | 55.13     |
| [55.518] Wiper and washer system .....  | 55.14     |
| [55.DTC] FAULT CODES .....  | 55.15     |
| <b>Dozer blade and arm .....</b>  | <b>86</b> |
| [86.110] Dozer blade .....  | 86.1      |
| [86.124] Dozer pushbeams and struts .....                                       | 86.2      |
| <b>Tools .....</b>  | <b>89</b> |
| [89.128] Ripper assembly .....  | 89.1      |
| <b>Platform, cab, bodywork, and decals .....</b>                                | <b>90</b> |

[90.160] Cab interior trim and panels..... 90.1  
[90.124] Pneumatically-adjusted operator seat..... 90.2  
[90.100] Engine hood and panels ..... 90.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$