

570ST Backhoe Loader

SERVICE MANUAL

Part number 48048556

English

September 2016

Replaces part number 48015881

© 2016 CNH Construction Equipment (India) Pvt Ltd. All rights reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

570ST

Link Product / Engine

Product	Market Product	Engine
570ST Four-Wheel Drive (4WD), 72kW Tier 3, Side shift	Asia Pacific	8045.45.748
570ST Two-Wheel Drive (2WD), 72kW Tier 3, Side shift	Latin America	8045.45.748
570ST Two-Wheel Drive (2WD), 72kW Tier 3, Side shift	Australia New Zealand	8045.45.748
570ST Four-Wheel Drive (4WD), 72kW Tier 3, Side shift	Latin America	8045.45.748
570ST Four-Wheel Drive (4WD), 72kW Tier 3, Side shift	Middle East Africa	8045.45.748
570ST Two-Wheel Drive (2WD), 72kW Tier 3, Side shift	Asia Pacific	8045.45.748
570ST Two-Wheel Drive (2WD), 72kW Tier 3, Side shift	Middle East Africa	8045.45.748
570ST Four-Wheel Drive (4WD), 72kW Tier 3, Side shift	Australia New Zealand	8045.45.748

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.254] Intake and exhaust manifolds and muffler	10.2
[10.400] Engine cooling system	10.3
Transmission	21
[21.100] Mechanical transmission lubrication system	21.1
[21.112] Power shuttle transmission.....	21.2
[21.134] Power shuttle transmission external controls	21.3
[21.154] Power shuttle transmission internal components	21.4
[21.700] Torque converter	21.5
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.124] Final drive hub, steering knuckles, and shafts	27.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2

[35.104] Fixed displacement pump	35.3
[35.359] Main control valve	35.4
[35.724] Front loader hydraulic system control	35.5
[35.701] Front loader arm hydraulic system	35.6
[35.723] Front loader bucket hydraulic system	35.7
[35.726] Excavator and backhoe hydraulic controls	35.8
[35.736] Boom hydraulic system	35.9
[35.737] Dipper hydraulic system	35.10
[35.738] Excavator and backhoe bucket hydraulic system	35.11
[35.739] Swing arm hydraulic system	35.12
[35.AAA] Hydraulic systems generic sub-group	35.13
Frames and ballasting	39
[39.129] Stabilizers	39.1
Steering	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels	44.1
[44.520] Rear wheels	44.2
[44.AAA] Wheels generic sub-group	44.3
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.100] Harnesses and connectors	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$