

# **580N**

## **Loader Backhoes**

# Service Manual

**Part Number**  
**71114480**  
1<sup>st</sup> Edition  
English 05/2015





## **SERVICE MANUAL**

**580N 4x2 - Without cab [HBZN580NEBAH02214 - ]**

**580N 4x2 - With cab [HBZN580NHBAH02549 - ]**

**580N 4x4 - Without cab [HBZN580NCCA03762 - ]**

**580N 4x4 - With cab [HBZN580NJBAH02348 - ]**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.110] Balancer and damper .....	10.2
[10.216] Fuel tanks .....	10.3
[10.218] Fuel injection system.....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls .....	21.2
[21.154] Power shuttle transmission internal components .....	21.3
[21.113] Powershift transmission .....	21.4
[21.155] Powershift transmission internal components.....	21.5
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
Brakes and controls .....	33
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
Hydraulic systems.....	35

[35.350] Safety and main relief valves .....	35.1
[35.736] Boom hydraulic system .....	35.2
[35.739] Swing arm hydraulic system .....	35.3
[35.703] Stabilizer hydraulic system.....	35.4
<b>Frames and ballasting .....</b>	<b>39</b>
[39.129] Stabilizers .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.216] Cylinders .....	41.1
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels .....	44.2
<b>Electrical systems .....</b>	<b>55</b>
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system .....	55.2
[55.301] Alternator.....	55.3
[55.512] Cab controls.....	55.4
[55.DTC] FAULT CODES.....	55.5
<b>Booms, dippers, and buckets .....</b>	<b>84</b>
[84.114] Boom pivoting support .....	84.1
[84.910] Boom .....	84.2
[84.912] Dipper arm .....	84.3
[84.100] Bucket.....	84.4
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.154] Cab doors and hatches .....	90.2
[90.114] Operator protections .....	90.3



It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$