

**580ST  
590ST  
695ST  
Stage IIIB  
Tractor Backhoe Loader**

**SERVICE MANUAL**

Part number 47847146

English

June 2015

Replaces part number 84568047A

© 2015 CNH Industrial America LLC. All Rights Reserved.

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**580ST T4  
590ST T4  
695ST T4**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
580ST T4	Europe	F5HFL413C*A001
590ST T4	Europe	F5HFL413B*A002
695ST T4	Europe	F5HFL413B*A002

# Contents

---

## INTRODUCTION

Machine completion and equipment .....	05
[05.102] Machine completion .....	05.1
Engine .....	10
[10.001] Engine and crankcase .....	10.1
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.2
[10.400] Engine cooling system .....	10.3
[10.304] Engine lubrication system .....	10.4
Transmission .....	21
[21.112] Power shuttle transmission .....	21.1
[21.134] Power shuttle transmission external controls .....	21.2
[21.104] Power shuttle transmission lubrication system .....	21.3
[21.154] Power shuttle transmission internal components .....	21.4
[21.113] Powershift transmission .....	21.5
[21.135] Powershift transmission external controls .....	21.6
[21.105] Powershift transmission lubrication system .....	21.7
[21.155] Powershift transmission internal components .....	21.8
[21.145] Gearbox internal components .....	21.9
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft .....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system .....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump .....	35.4
[35.102] Pump control valves.....	35.5
[35.350] Safety and main relief valves .....	35.6
[35.128] Auxiliary hydraulic function control .....	35.7
[35.355] Hydraulic hand control .....	35.8
[35.352] Hydraulic swing system .....	35.9
[35.724] Front loader hydraulic system control.....	35.10
[35.701] Front loader arm hydraulic system .....	35.11
[35.723] Front loader bucket hydraulic system .....	35.12
[35.726] Excavator and backhoe hydraulic controls.....	35.13
[35.736] Boom hydraulic system .....	35.14
[35.737] Dipper hydraulic system.....	35.15
[35.738] Excavator and backhoe bucket hydraulic system.....	35.16
[35.739] Swing arm hydraulic system .....	35.17
[35.703] Stabilizer hydraulic system.....	35.18
[35.740] Telescopic arm hydraulic system.....	35.19
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$