

**580ST
590ST
695ST
Stage IV
Tractor Backhoe Loader**

SERVICE MANUAL

Part number 48090752
English
February 2017

© 2017 CNH Industrial America LLC. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

580ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING, 580ST STAGE IV, STRAIGHT LOADER ARM (SLA), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD), 580ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), TWO-WHEEL DRIVE (2WD), 590ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD), 695ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING, 695ST STAGE IV, TOOL CARRIER (TC), CENTER PIVOT (CP), 695ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS)

Link Product / Engine

| Product | Market Product | Engine |
|--|----------------|----------------|
| 580ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING | Europe | F5BFL413B*C002 |
| 580ST STAGE IV, STRAIGHT LOADER ARM (SLA), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD) | Europe | F5BFL413B*C002 |
| 580ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), TWO-WHEEL DRIVE (2WD) | Europe | F5BFL413B*C002 |
| 590ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD) | Europe | F5BFL413A*B001 |
| 695ST STAGE IV, TOOL CARRIER (TC), CENTER PIVOT (CP) | Europe | F5BFL413A*B001 |
| 695ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING | Europe | F5BFL413A*B001 |
| 695ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS) | Europe | F5BFL413A*B001 |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.206] Fuel filters | 10.3 |
| [10.218] Fuel injection system..... | 10.4 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.5 |
| [10.400] Engine cooling system | 10.6 |
| [10.414] Fan and drive | 10.7 |
| Power coupling | 19 |
| [19.100] Drive shaft..... | 19.1 |
| Transmission | 21 |
| [21.112] Power shuttle transmission..... | 21.1 |
| [21.134] Power shuttle transmission external controls | 21.2 |
| [21.154] Power shuttle transmission internal components | 21.3 |
| [21.113] Powershift transmission | 21.4 |
| [21.135] Powershift transmission external controls..... | 21.5 |
| [21.105] Powershift transmission hydraulic components | 21.6 |
| [21.155] Powershift transmission internal components..... | 21.7 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.400] Non-powered front axle | 25.4 |
| Rear axle system | 27 |
| [27.100] Powered rear axle..... | 27.1 |

| | |
|---|-----------|
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| [27.450] Rear-powered steerable axle | 27.4 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| [33.110] Parking brake or parking lock | 33.2 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.104] Fixed displacement pump..... | 35.3 |
| [35.106] Variable displacement pump | 35.4 |
| [35.102] Pump control valves..... | 35.5 |
| [35.350] Safety and main relief valves | 35.6 |
| [35.357] Pilot system | 35.7 |
| [35.128] Auxiliary hydraulic function control | 35.8 |
| [35.355] Hydraulic hand control | 35.9 |
| [35.352] Hydraulic swing system | 35.10 |
| [35.724] Front loader hydraulic system control..... | 35.11 |
| [35.701] Front loader arm hydraulic system | 35.12 |
| [35.723] Front loader bucket hydraulic system | 35.13 |
| [35.726] Excavator and backhoe hydraulic controls..... | 35.14 |
| [35.736] Boom hydraulic system | 35.15 |
| [35.737] Dipper hydraulic system..... | 35.16 |
| [35.738] Excavator and backhoe bucket hydraulic system..... | 35.17 |
| [35.739] Swing arm hydraulic system | 35.18 |
| [35.703] Stabilizer hydraulic system | 35.19 |
| [35.740] Telescopic arm hydraulic system..... | 35.20 |
| Frames and ballasting | 39 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$