



SERVICE MANUAL

CRAWLER EXCAVATOR

CX700
TIER III

CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer.

| REVISION HISTORY | | | |
|------------------|------------|----------------------------------|-------------|
| Issue | Issue Date | Applicable Machines | Remarks |
| First Edition | 05-2006 | CX700 TIER III Crawler Excavator | 87551416 NA |
| Revision 1 | 07-2006 | CX700 TIER III Crawler Excavator | 87364111 NA |

CX700 Crawler Excavator

Table of Contents

| DIVISION/SECTION | SECTION N° | REFERENCE N° |
|---|------------|--------------|
| 1 GENERAL INFORMATION | | |
| Safety, general information and standard torque data | 1001 | 7-27691NA |
| General specifications and special torque setting | 1002 | 9-94060NA |
| Numerical value conversion table | 1003 | 9-35540 |
| 2 ENGINE | | |
| Radiator and engine removal and installation | 2001 | 9-94480NA |
| Engine specifications | * | |
| Disassembly and assembly of the engine | * | |
| 3 FUEL SYSTEM | | |
| Fuel tank, removal and installation | 3001 | 9-94470NA |
| Fuel engine system | * | |
| 4 ELECTRICAL SYSTEM | | |
| Electrical system, electrical and electronic troubleshooting | 4001 | 9-94700NA |
| Inspection and maintenance of batteries and connecting a booster battery | 4002 | 9-36830NA |
| Computer and engine controller, removal and installation | 4003 | 9-94510NA |
| 5 UNDERCARRIAGE | | |
| Removal and installation of tracks | 5001 | 9-36860NA |
| Rollers | 5003 | 9-94340NA |
| Sprocket | 5004 | 9-36890NA |
| Idler wheel and tension shock absorber | 5005 | 9-94350NA |
| 6 DRIVE TRAIN | | |
| Travel-motor reduction gear assembly, removal and installation | 6001 | 9-94440NA |
| Travel hydraulic motor, disassembly and assembly | 6002 | 9-94620NA |
| Swing reduction gear, removal and installation | 6003 | 9-94450NA |
| Swing reduction gear, disassembly and assembly | 6004 | 9-42630NA |
| Travel reduction gear, disassembly and assembly | 6005 | 9-94610NA |
| 7 UNDERCARRIAGE HYDRAULICS | | |
| 8 UPPERSTRUCTURE HYDRAULICS | | |
| Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components | 8000 | 9-94430NA |
| Specifications, troubleshooting, checks and hydraulic pressure settings | 8001 | 9-94080NA |
| Hydraulic reservoir removal and installation | 8002 | 9-94490NA |
| Main hydraulic pump and pilot pumps, removal and installation | 8003 | 9-94540NA |
| Main hydraulic control valve, removal and installation | 8004 | 9-94500NA |
| Attachment cylinders, removal and installation | 8005 | 9-94810NA |
| Hydraulic swivel, removal and installation | 8006 | 9-94600NA |
| Pilot blocs, removal and installation | 8007 | 9-94520NA |
| Swing motor, removal and installation | 8008 | 9-94420NA |
| Main hydraulic pump, disassembly and assembly | 8010 | 9-94590NA |
| Main hydraulic control valve, disassembly and assembly | 8011 | 9-94780NA |
| Attachment cylinders, disassembly and assembly | 8012 | 9-94580NA |
| Hand control levers, disassembly and assembly | 8013 | 9-94630NA |
| Foot control levers, disassembly and assembly | 8014 | 9-40991NA |
| Eight-solenoid valves, disassembly and assembly | 8015 | 9-42521NA |
| Caution valve, disassembly and assembly | 8016 | 9-94530NA |
| Safety valve | 8017 | 9-94690NA |
| Hydraulic swivel, disassembly and assembly | 8018 | 9-94410NA |
| Swing motor, disassembly and assembly | 8019 | 9-42530NA |

| DIVISION/SECTION | SECTION N° | REFERENCE N° |
|---|------------|--------------|
| Hydraulic functions..... | 8020 | 9-94090NA |
| Fan motor, removal and installation | 8022 | 9-94660NA |
| Fan motor, disassembly and assembly | 8023 | 9-94670NA |
| Fan pump, removal, disassembly, assembly and installation | 8024 | 9-94680NA |
| Hydraulic component functions..... | 8030 | 9-94130NA |
| 9 UPPERSTRUCTURE | | |
| Upperstructure, turntable and counterweight | 9002 | 9-94560NA |
| Boom, dipper and bucket | 9003 | 9-94570NA |
| Seat and seat belt | 9004 | 9-40960NA |
| Cab and cab equipment..... | 9005 | 9-94650NA |
| Air conditioning troubleshooting..... | 9006 | ██████████ |
| Air conditioning unit disassembly and assembly..... | 9007 | 9-94640NA |
| Air conditioning servicing | 9008 | ██████████ |
| Air conditioning components..... | 9009 | ██████████ |
| Removal and installation attachment, counterweight and side frame | 9010 | 9-94140NA |
| Large size hydraulic schematic | Pocket | 87519799 |
| Large size electrical schematic | Pocket | 87519792 |

* Consult the Engine Service Manual 9-36410NA

██████████ Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section

1001

SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$