

## 535-125 HiViz and 535-140 HiViz Personnel Platform (Supplement)

⇒ [Introduction \(1\)](#)

⇒ [Service Procedures \(29\)](#)

⇒ [Electrics \(51\)](#)

⇒ [Hydraulics \(159\)](#)



Publication No.  
**9813/1400-1**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.



---

**Notes:**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

<b>Contents</b>	<b>Page No.</b>
<b>Introduction</b>	
General Information .....	1
System Overview .....	2
<b>Safety Notices</b>	
Introduction .....	1
Important Information .....	2
Safety Check List .....	3
Safety Decals .....	16
<b>General Procedures</b>	
Introduction .....	1
Related Topics .....	3
Parking the Machine and Making it Safe .....	4
Boom Safety Strut (P1) .....	6
Boom Safety Strut (P2) .....	9
Venting the Hydraulic Pressure .....	12
Venting the Brake System Pressure .....	14
Connecting/Disconnecting Hydraulic Hoses .....	15
Quick Release Couplings .....	16
Hydraulic Contamination .....	18
Battery Disconnection/Connection .....	20
Battery Charging System Precautions .....	21
Removing and Replacing Components .....	22
Hydraulic Rams .....	24
Gas Hydraulic Bladder Accumulators .....	26
<b>Service Procedures</b>	
Introduction .....	29
RCU Engine Start Procedure .....	30
Fault Finding .....	31
Servicemaster Tools .....	34
Loadall Machine Diagnostics - User Guide .....	35
Manplatform Calibration - User Guide .....	36
Manplatform Enable - Machines with LLMC or MC .....	49
<b>Electrics</b>	
Fuses and Relays .....	51
Schematic Circuits .....	55
Component Location .....	76
Manplatform ECU Power and Earth Connections .....	80
Engine Start Operation - Cabin Mode .....	81
Engine Start Operation - Remote Mode .....	83
Machine Operation - Remote Mode .....	92
Longitudinal Load Moment Indicator (LLMI) Operation .....	99
Longitudinal Load Moment Control (LLMC) Operation .....	101
Control Valve Operation .....	104
Joystick Operation .....	109
Stabiliser Lever Operation .....	117
Rear Axle Lock (RAL) Operation .....	119
Emergency Pump Operation .....	122
Emergency Boom Operation .....	123
Harness Drawings .....	125
Removal and Replacement .....	145

---

<b>Contents</b>	<b>Page No.</b>
<b>Hydraulics</b>	
Specifications .....	159
Component Location .....	162
Hydraulic Operation and Schematics .....	164
Test Procedures .....	184
Removal and Replacement .....	190
Dismantle and Assemble .....	200



---

# Introduction

## General Information

### Machine Model

This manual supplement provides information for the JCB Work Platform, compatible with the following models in the JCB machine range:

- 535-125 HiViz with Manplatform
- 535-140 HiViz with Manplatform

### About this Supplement

This manual is a supplement to the JCB Loadall Service Manual. The information covers the machines specified fitted with the JCB Personnel Platform.

For Platform operation details and safety information refer to the applicable Machine Operator Supplement: **9821/2250**.

Only those areas of the machine which are different from the standard Loadall are dealt with here. For all other information refer to the applicable Loadall Service Manual:

- **9813/0950** for machines with Tier 3 Engine.

Unless specified otherwise, all references to 'Service Manual' in this supplement are to be taken as meaning the Service Manual specific to the standard machine.

Read the standard Service Manual and this supplement completely to familiarise yourself with the machine before carrying out any servicing procedures.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$