Service Manual



JS300, JS330, JS370 - Tracked Excavators - Tier 4i Isuzu Engine

Section 1 - General Information

Section 2 - Operator's Manual

Section B - Body and Framework

Section C - Electrics

Section E - Hydraulics

Section F - Transmission

Section J - Track and Running Gear

Section K - Engine



Publication No. **9813/5100-1**



World Class Customer Suppo

Section 1



General Information

Service Manual - JS300, JS330, JS370 - Tracked Excavators - Tier 4i Isuzu Engine

Section 1 - General Information

Section 2 - Operator's Manual

Section B - Body and Framework

Section C - Electrics

Section E - Hydraulics

Section F - Transmission

Section J - Track and Running Gear

Section K - Engine



Publication No. 9813/5100-1



World Class Customer Support



Section 1 - General Information

Notes:		

1-0 9813/5100-1 **1-0**



Section 1 - General Information

Contents Pag	e No.
Introduction	
Identifying Your Machine	1-1
Safety	
Introduction	1-3
Use	
Introduction	
Scope	1-6
Format	
Left Side, Right Side	
Hydraulic Schematic Codes	1-9
Routine Maintenance	
Maintenance Schedules	. 1-11
General Procedures	
Introduction	. 1-13
Parking the Machine and Making it Safe	. 1-14
Venting the Hydraulic Pressure	
Connecting/Disconnecting Hydraulic Hoses	. 1-16
Battery Disconnection/Connection	
Removing and Replacing Components	. 1-18
Battery Charging System Precautions	. 1-19
Gas Hydraulic Bladder Accumulators	. 1-20
Service Consumables	
Introduction	. 1-23
Sealing and Retaining Compounds	. 1-24
Torque Settings	
Introduction	. 1-25
Zinc Plated Fasteners and Dacromet Fasteners	. 1-26
Hydraulic Connections	. 1-30
`Positional Type' Hydraulic Adaptors	. 1-34
Service Tools	
Numerical List	. 1-35
To all Datail Defenses	4 00



Section 1 - General Information

Contents Page No.

1-ii 1-ii

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$