


# Komatsu Support Manual Blackhawk® Supplement

ORIGINAL INSTRUCTIONS

CEM03801B

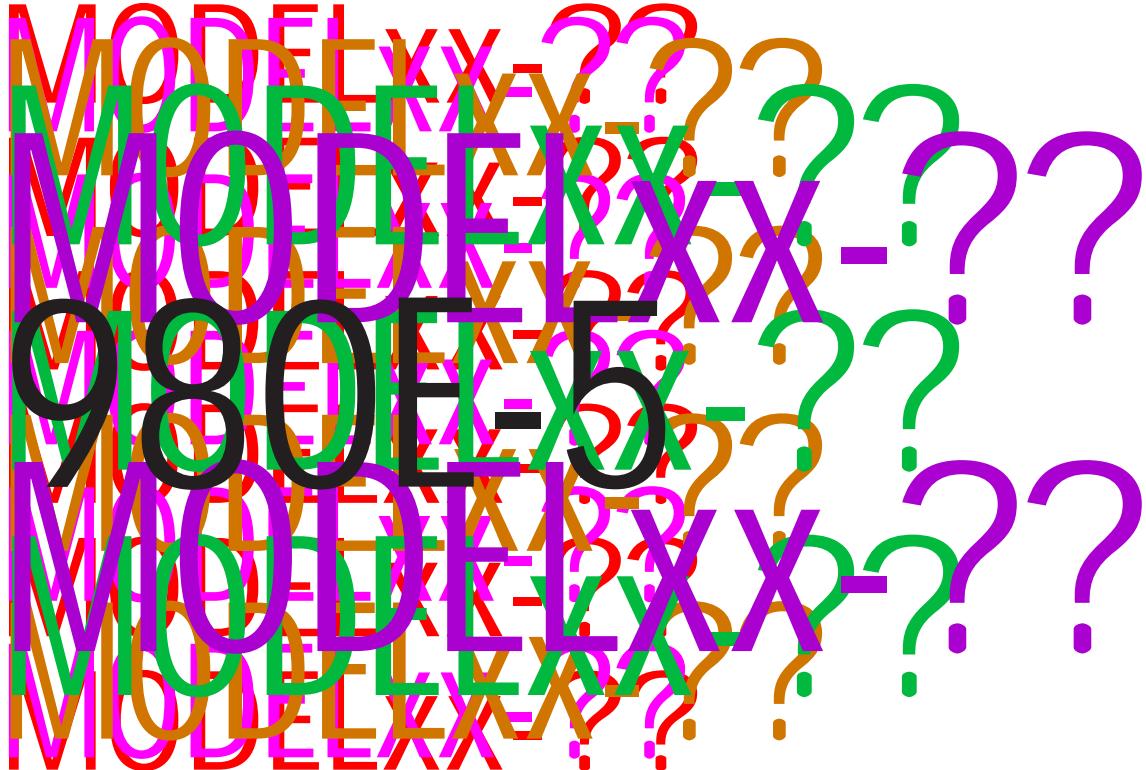

## DUMP TRUCK DESCRIPTION

SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS

MODEL XXXXXXXX	SER# and up
980E-5 XXX A50003-51 RA50054-136,	
MODEL XXXXXXXX	SER# and up
MODEL XXXXXXXX	SER# and up
PC228USLC-11FOX	SER# and up
MODEL XXXXXXXX	SER# and up
MODEL XXXXXXXX	SER# and up
MODEL XXXXXXXX	SER# and up

This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

**KOMATSU**

© Copyright 2024 Komatsu Ltd.  
or one of its subsidiaries  
All Rights Reserved  
Printed in the U.S.A.



# **00 CONTENTS AND FOREWORD**

# CONTENTS

<b>00 CONTENTS AND FOREWORD.....</b>	<b>00-1</b>
Foreword.....	00-17
How to Read the Shop Manual.....	00-17
Safety Alert Symbol and Signal Words.....	00-18
General Precautions Common to Operation and Maintenance.....	00-19
Preparations for Safe Operation.....	00-19
Fire and Explosion Prevention.....	00-21
Precautions When Getting On or Off the Machine.....	00-23
Precautions for Cab and Working Around Machine.....	00-26
Precautions for Diesel Exhaust Fluid (DEF).....	00-27
Operation Precautions.....	00-30
Precautions at Jobsite.....	00-30
Precautions in Starting Engine.....	00-31
Precautions During Operation.....	00-33
Maintenance Precautions.....	00-35
Precautions Before Inspection and Maintenance.....	00-35
Precautions During Inspection and Maintenance.....	00-40
Precautions for Electrical Equipment.....	00-47
Primary Causes of Wiring Harness Failure.....	00-48
Control Cabinet Capacitor Discharge.....	00-50
Hydraulic Equipment Precautions.....	00-51
<b>01 SPECIFICATIONS.....</b>	<b>01-1</b>
Specifications.....	01-2
Specifications: 980E-5.....	01-2
Weight Table: 980E-5.....	01-3
Recommended Fuel, Coolant, and Lubricant.....	01-5
Suspension Cylinder Oil and Nitrogen Specifications.....	01-5
Wheel Motor Oil Specifications.....	01-7
<b>10 STRUCTURE AND FUNCTION.....</b>	<b>10-1</b>
Steering System.....	10-2
Steering System Layout.....	10-2
Steering System Operation.....	10-2
Steering Bleeddown Manifold.....	10-4
Steering Control Unit.....	10-5
Steering Accumulators (Piston Type).....	10-6
Steering/Brake Pump Operation.....	10-6
Flow Amplifier Operation.....	10-8
Hoist System.....	10-16
Hoist System Layout.....	10-16
Hoist System Operation.....	10-17
Hoist Control Valve.....	10-18
Hoist Pilot Valve.....	10-20
Brake System.....	10-21
Service Brake System Layout.....	10-21
Hydraulic Brake Cabinet Layout.....	10-22
Service Brake Operation.....	10-23
Parking Brake Operation.....	10-24
Brake Lock Operation.....	10-24

Secondary Braking and Auto Apply.....	10-25
Electrical System, 24V.....	10-26
Battery Power Supply.....	10-26
Battery Disconnect Switches.....	10-27
Engine Starting System.....	10-28
Auxiliary Control Cabinet Components.....	10-29
Body-Up Switch.....	10-31
Hoist Limit Switch.....	10-32
Automatic Lubrication (Auto Lube) System.....	10-33
Automatic Lubrication (Auto Lube) Grease Pump and Reservoir.....	10-33
Automatic Lubrication (Auto Lube) System Operation.....	10-34
Suspensions.....	10-36
Engine Emissions After-Treatment System Operations.....	10-37
<b>20 STANDARD VALUE TABLE.....</b>	<b>20-1</b>
Standard Value Table.....	20-2
<b>30 TEST AND ADJUST.....</b>	<b>30-1</b>
Hydraulic Systems.....	30-2
Hydraulic System Checkout Procedures.....	30-2
Hydraulic System Checkout Sheet.....	30-14
Steering System Leakage Check.....	30-17
Toe-In Adjustment.....	30-18
Hoist Cylinder Leakage Test.....	30-19
Steering Cylinder Leakage Test.....	30-19
Checking the Steering/Brake Pump Control Pressures.....	30-20
Adjusting the Steering/Brake Pump Control Pressures.....	30-21
High Altitude Steering/Brake Pump Adjustment.....	30-23
Brake System.....	30-24
Brake System Checkout Procedures.....	30-24
Brake System Checkout Sheet: 980E-5.....	30-33
Brake System Leakage Check.....	30-39
Brake Piston Leakage Test.....	30-40
Parking Brake Piston Leakage Test.....	30-41
Brake Floating Seal Pressure Test.....	30-41
Oil Separation Seal Pressure Test (Air Pressure Method).....	30-42
Oil Separation Seal Pressure Test (Oil Pressure Method).....	30-42
Wet Disc Brake Bleeding Procedure.....	30-43
Parking Brake Bleeding Procedure.....	30-43
Wet Disc Brake Wear Inspection.....	30-44
Parking Brake Wear Inspection.....	30-46
Accumulators and Suspensions.....	30-47
Bladder Accumulator Charging Procedure.....	30-47
Bladder Accumulator Leakage Test.....	30-48
Bladder Accumulator Storage.....	30-49
Piston Accumulator Charging Procedure.....	30-50
Piston Accumulator Leakage Test.....	30-51
Piston Accumulator Storage.....	30-52
Check for Improper Suspension Charge.....	30-53
Suspension Oiling and Charging Procedures.....	30-54
Oiling and Charging Tools and Support Blocks.....	30-55
Nitrogen Charging Kit Installation.....	30-59
Nitrogen Charging Kit Removal.....	30-59
Front Suspension Oiling and Charging.....	30-60

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$