

Shop Manual

BULLDOZER

D155AX-7

SERIAL NUMBERS 90001 and up

KOMATSU

SHOP MANUAL

BULLDOZER

D155AX-7

Model Serial Number

D155AX-7 90001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-17
Important safety notice	00-17
How to read the shop manual	00-24
Explanation of terms for maintenance standard	00-26
Handling equipment of fuel system devices	00-28
Handling of intake system parts	00-29
Handling of hydraulic equipment	00-30
Method of disconnecting and connecting of push-pull type coupler	00-32
Handling of electrical equipment	00-35
How to read electric wire code	00-43
Precautions when performing operation	00-46
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-58
Conversion table	00-63
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specification	01-5
Weight table	01-13
Table of fuel, coolant, and lubricants	01-15
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVTG	10-6
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-15
EGR cooler	10-17
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Damper	10-27
Cooling system	10-29
Cooling fan pump	10-32
Cooling fan motor	10-42
Power train	10-50
Power train system	10-50
HSS system	10-53
Overall drawing of power train unit	10-55
Power train mount	10-57
Layout of power train hydraulic piping	10-59
Transmission, steering, and brake control	10-61
Universal joint	10-63
Torque converter and PTO	10-64
Torque converter control valve	10-72
Lockup clutch ECMV	10-73
Stator clutch ECMV	10-78
Transmission	10-82
Transmission ECMV	10-96
Main relief valve and torque converter relief valve	10-105
Transmission lubrication relief valve	10-107
Bevel gear shaft, HSS, and brake	10-108
Brake control valve	10-126

Brake ECMV	10-129
Brake solenoid valve	10-133
Sudden stop prevention valve	10-135
Final drive	10-137
Undercarriage and frame	10-140
Main frame	10-140
Suspension	10-142
Track frame and idler cushion	10-144
Hydraulic system	10-146
Hydraulic component layout	10-146
Work equipment control	10-149
Hydraulic tank	10-152
CLSS	10-154
Scavenging pump	10-158
Steering lubrication pump and power train pump	10-159
Work equipment and HSS pump	10-161
HSS motor	10-185
Control valve	10-193
Quick drop valve	10-231
Work equipment lock solenoid valve	10-237
Hydraulic oil cooler bypass valve	10-238
Accumulator	10-239
Self-pressure reducing valve	10-241
Work equipment	10-248
Cylinder stay	10-248
Blade	10-249
Ripper	10-250
Piston valve	10-252
Cab and its attachments	10-253
ROPS cab	10-253
Function	10-254
Cab mount	10-255
Electrical system	10-256
Engine control	10-256
Engine control system	10-257
Palm command control system	10-258
System operating lamp function	10-262
Battery disconnect switch function	10-264
Machine monitor system	10-266
KOMTRAX system	10-288
System component parts	10-290
Sensor	10-308
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system	20-16
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Sketch of tools for testing and adjusting	30-7
Engine and cooling system	30-9
Testing engine speed	30-9
Testing boost pressure	30-11
Testing exhaust gas temperature	30-12
Testing exhaust gas color	30-15
Adjusting valve clearance	30-17

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$