

Shop Manual

BULLDOZER

D155AX-8

SERIAL NUMBERS 100001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
PRECAUTIONS FOR DEF	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-78
STANDARD TIGHTENING TORQUE TABLE	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-19
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-22
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM	10-14
COMPONENT PARTS OF UREA SCR SYSTEM	10-32
BOOT-UP SYSTEM	10-41
SYSTEM OPERATING LAMP SYSTEM	10-41
BATTERY DISCONNECT SWITCH	10-43
ENGINE SYSTEM	10-45
LAYOUT DRAWING OF ENGINE SYSTEM	10-45
ENGINE CONTROL SYSTEM	10-47
AUTOMATIC IDLE STOP SYSTEM	10-50
COMPONENT PARTS OF ENGINE SYSTEM	10-53
COOLING SYSTEM	10-73
LAYOUT DRAWING OF COOLING SYSTEM	10-73
COMPONENT PARTS OF COOLING SYSTEM	10-75

CONTROL SYSTEM.....	10-91
LAYOUT DRAWING OF CONTROL SYSTEM	10-91
MACHINE MONITOR SYSTEM	10-92
KOMTRAX SYSTEM.....	10-95
COMPONENT PARTS OF CONTROL SYSTEM.....	10-96
HYDRAULIC SYSTEM.....	10-129
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-129
CLSS	10-130
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-133
POWER TRAIN SYSTEM	10-193
LAYOUT OF POWER TRAIN SYSTEM	10-193
OPERATION OF POWER TRAIN SYSTEM.....	10-196
TRANSMISSION, STEERING, AND BRAKE CONTROL	10-198
PALM COMMAND CONTROL SYSTEM.....	10-201
HSS SYSTEM.....	10-205
CENTRALIZED PRESSURE PICKUP PORT.....	10-208
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-210
WORK EQUIPMENT SYSTEM	10-290
WORK EQUIPMENT CONTROL	10-290
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-292
LAYOUT OF VARIABLE GIANT RIPPER.....	10-293
LAYOUT OF VARIABLE MULTI-SHANK RIPPER.....	10-294
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-295
UNDERCARRIAGE AND FRAME.....	10-312
MAIN FRAME	10-312
SUSPENSION	10-313
TRACK FRAME AND IDLER CUSHION	10-316
WORK EQUIPMENT.....	10-318
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-318
STRUCTURE OF CYLINDER STAY	10-320
STRUCTURE OF VARIABLE GIANT RIPPER.....	10-321
STRUCTURE OF VARIABLE MULTI-SHANK RIPPER	10-322
CAB AND ITS ATTACHMENTS	10-323
ROPS CAB	10-323
CAB MOUNT	10-324
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: D155AX-8	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14
STANDARD VALUE TABLE FOR MACHINE: D155AX-8	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-32
STANDARD VALUE TABLE FOR ELECTRICAL	20-34
STANDARD VALUE TABLE FOR ELECTRICITY	20-34
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-19
ENGINE AND COOLING SYSTEM.....	30-21
TEST ENGINE SPEED	30-21
TEST BOOST PRESSURE.....	30-25
TEST EXHAUST GAS TEMPERATURE	30-27
TEST EXHAUST GAS COLOR.....	30-30
TEST AND ADJUST VALVE CLEARANCE	30-32
TEST COMPRESSION PRESSURE.....	30-35

TEST BLOWBY PRESSURE	30-38
TEST ENGINE OIL PRESSURE	30-40
TEST EGR VALVE AND VGT OIL PRESSURE	30-42
TEST FUEL PRESSURE	30-44
TEST FUEL RETURN RATE AND LEAKAGE	30-46
BLEED AIR FROM FUEL SYSTEM	30-51
TEST FUEL CIRCUIT FOR LEAKAGE	30-53
HANDLE CYLINDER CUT-OUT MODE OPERATION	30-55
HANDLE NO-INJECTION CRANKING OPERATION	30-56
CLEAN FUEL DOSER	30-57
WRITE INJECTOR COMPENSATION VALUE TO ENGINE CONTROLLER	30-61
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER	30-67
TEST SCR RELATED FUNCTIONS	30-68
CLEAN AdBlue/DEF TANK	30-95
ADJUST DECELERATOR PEDAL	30-101
POWER TRAIN	30-104
TEST POWER TRAIN OIL PRESSURE	30-104
ADJUST TRANSMISSION OUTPUT SHAFT SPEED SENSOR	30-115
TEST BRAKE PERFORMANCE SIMPLY	30-116
TEST AND ADJUST BRAKE PEDAL	30-117
ADJUST PARKING BRAKE LEVER	30-120
MOVE MACHINE BY RELEASING PARKING BRAKE WHEN MACHINE DOES NOT TRAVEL	30-122
UNDERCARRIAGE AND FRAME	30-126
ADJUST IDLER CLEARANCE	30-126
TEST AND ADJUST TRACK TENSION	30-128
HYDRAULIC SYSTEM	30-129
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM	30-129
TEST AND ADJUST WORK EQUIPMENT AND HSS OIL PRESSURES	30-130
TEST OIL PRESSURE OF CONTROL CIRCUIT	30-135
TEST WORK EQUIPMENT LOCK SOLENOID VALVE OUTPUT PRESSURE	30-137
TEST RIPPER PIN PULLER SOLENOID VALVE OUTPUT PRESSURE	30-139
BLEED AIR FROM WORK EQUIPMENT AND HSS PUMP	30-141
TEST COOLING FAN SPEED	30-142
TEST COOLING FAN CIRCUIT OIL PRESSURE	30-143
BLEED AIR FROM COOLING FAN PUMP	30-145
TEST THE PARTS CAUSING HYDRAULIC DRIFT IN WORK EQUIPMENT	30-146
TEST INTERNAL OIL LEAKAGE OF WORK EQUIPMENT CYLINDER	30-148
BLEED AIR FROM WORK EQUIPMENT CYLINDERS	30-150
OPERATION WHEN WORK EQUIPMENT IS NOT EFFECTIVE	30-151
WORK EQUIPMENT	30-153
ADJUST WORK EQUIPMENT LOCK LEVER	30-153
CAB AND ITS ATTACHMENTS	30-155
TEST AND ADJUST OPERATOR'S CAB	30-155
ELECTRICAL SYSTEM	30-160
SET AND OPERATE MACHINE MONITOR	30-160
METHOD FOR STARTING UP KOMTRAX TERMINAL	30-286
ADJUST REARVIEW CAMERA ANGLE	30-291
HANDLE VOLTAGE CIRCUIT OF ENGINE CONTROLLER	30-292
HANDLE BATTERY DISCONNECT SWITCH	30-293
TEST DIODES	30-294
Pm CLINIC	30-295
Pm CLINIC SERVICE	30-295
40 TROUBLESHOOTING	40-1
CONTENTS	40-2
ABBREVIATION LIST	40-14
RELATED INFORMATION ON TROUBLESHOOTING	40-20
GENERAL TROUBLESHOOTING POINTS	40-20
TROUBLESHOOTING POINTS FOR UREA SCR SYSTEM	40-21

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$