

# Shop Manual

BULLDOZER

***D475A-8***

SERIAL NUMBERS 50001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-25
Foreword, Safety, Basic Information .....	00-28
How to Read the Shop Manual .....	00-28
Safety Notice for Operation .....	00-30
Precautions to Prevent Fire .....	00-38
Procedures If Fire Occurs .....	00-40
Precautions When You Discard Waste Materials .....	00-41
Precautions When You Handle Hydraulic Equipment .....	00-42
Precautions When You Disconnect and Connect Pipings .....	00-45
Precautions When You Handle Electrical Equipment .....	00-51
Precautions When You Handle Fuel System Equipment .....	00-53
Precautions When You Handle Intake System Equipment .....	00-54
Practical Use of KOMTRAX .....	00-55
Disconnect and Connect Push-Pull Type Coupler .....	00-56
Precautions for Disconnection and Connection of Connectors .....	00-60
Disconnect and Connect Deutsch Connector .....	00-64
How to Disconnect and Connect Slide Lock Type Connector .....	00-65
Disconnect and Connect Connector with Lock to Pull .....	00-67
Disconnect and Connect Connector with Lock to Push .....	00-68
Disconnect and Connect Connector with Housing to Rotate .....	00-70
How to Read the Codes for Electric Cable .....	00-71
Explanation of Terms for Maintenance Standard .....	00-75
Standard Tightening Torque Table .....	00-78
Conversion Table .....	00-85
01 Specification .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-5
Weight Table .....	01-15
Fuel, Coolant, Lubricant .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-6
Layout Drawing of Boot-up System .....	10-6
System Operating Lamp System .....	10-7
Battery Isolator .....	10-8
Engine System .....	10-10
Layout Drawing of Engine System .....	10-10
Engine Control System .....	10-12
Automatic Idle Stop System .....	10-15
Component Parts of Engine System .....	10-18
Cooling System .....	10-39
Layout Drawing of Cooling System .....	10-39
Specifications of Cooling System .....	10-41
Component Parts of Cooling System .....	10-42
Control System .....	10-63
Layout Drawing of Control System .....	10-63
Machine Monitor System .....	10-64
KOMTRAX Plus System .....	10-66
Component Parts of Control System .....	10-68
Hydraulic System .....	10-118
Layout Drawing of Hydraulic System .....	10-118
CLSS .....	10-119
Component Parts of Hydraulic System .....	10-122

Power Train System .....	10-175
Layout Drawing of Power Train System .....	10-175
Transmission, Steering, and Brake Control System .....	10-178
Palm Command Control System .....	10-182
Function of Gear Shift Mode .....	10-186
Centralized Pressure Pickup Port.....	10-189
Component Parts of Power Train System.....	10-191
Work Equipment System.....	10-249
Layout Drawing of Work Equipment System .....	10-249
Function of Work Equipment System .....	10-254
Component Parts of Work Equipment System .....	10-255
ICT System .....	10-266
Layout Drawing of ICT System.....	10-266
System Diagram of ICT Control System.....	10-267
Blade Control System .....	10-269
Smooth Start System .....	10-275
Slip Control System.....	10-277
Assist Control System .....	10-279
Straight Travel Correction System.....	10-281
Smooth Carry System .....	10-283
Component Parts of ICT System.....	10-285
Lifting System .....	10-299
Power Ladder System.....	10-299
Component Parts of Lifting System .....	10-302
Undercarriage and Frame .....	10-308
Main Frame.....	10-308
Suspension .....	10-310
Track Frame and Idler Cushion .....	10-312
Work Equipment .....	10-314
Structure of Front Work Equipment .....	10-314
Structure of Cylinder Stay .....	10-316
Structure of Variable Giant Ripper.....	10-317
Structure of Variable Multi-Shank Ripper.....	10-318
CAB Related Parts.....	10-319
ROPS.....	10-319
CAB .....	10-320
CAB Mount .....	10-321
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine D475A-8 .....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: D475A-8.....	20-8
Machine Posture and Procedures to Measure Performance .....	20-33
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6
Related Information on Testing and Adjusting .....	30-7
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting .....	30-16
Engine and Cooling System .....	30-19
Examine Engine Speed.....	30-19
Examine Boost Pressure.....	30-24
Examine Exhaust Gas Temperature .....	30-31
Examine Exhaust Gas Color .....	30-33
Examine Mass Air Flow and Temperature Sensor .....	30-40
Examine and Adjust Valve Clearance.....	30-45
Examine Compression Pressure .....	30-48

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$