

Shop Manual

BULLDOZER

D475A-8E0

SERIAL NUMBERS 50001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-24
Foreword, Safety, Basic Information	00-27
How to Read the Shop Manual	00-27
Safety Notice for Operation	00-29
Precautions to Prevent Fire	00-37
Procedures If Fire Occurs	00-39
Precautions When You Discard Waste Materials	00-40
Precautions When You Handle Hydraulic Equipment	00-41
Precautions When You Disconnect and Connect Pippings	00-44
Precautions When You Handle Electrical Equipment	00-50
Precautions When You Handle Fuel System Equipment	00-52
Precautions When You Handle Intake System Equipment	00-53
Practical Use of KOMTRAX	00-54
Disconnect and Connect Push-Pull Type Coupler	00-55
Precautions for Disconnection and Connection of Connectors	00-59
Disconnect and Connect Deutsch Connector	00-63
How to Disconnect and Connect Slide Lock Type Connector	00-64
Disconnect and Connect Connector with Lock to Pull	00-66
Disconnect and Connect Connector with Lock to Push	00-67
Disconnect and Connect Connector with Housing to Rotate	00-69
How to Read the Codes for Electric Cable	00-70
Explanation of Terms for Maintenance Standard	00-74
Standard Tightening Torque Table	00-77
Conversion Table	00-84
01 Specification	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-15
Fuel, Coolant, Lubricant	01-17
10 Structure and Function	10-1
Table of Contents	10-2
NOx Control System	10-5
Function of NOx Control System	10-5
Boot-up System	10-8
Layout Drawing of Boot-up System	10-8
System Operating Lamp System	10-9
Battery Isolator	10-10
Engine System	10-12
Layout Drawing of Engine System	10-12
Engine Control System	10-14
Automatic Idle Stop System	10-17
Component Parts of Engine System	10-20
Cooling System	10-41
Layout Drawing of Cooling System	10-41
Specifications of Cooling System	10-43
Component Parts of Cooling System	10-44
Control System	10-65
Layout Drawing of Control System	10-65
Machine Monitor System	10-66
KOMTRAX Plus System	10-68
Component Parts of Control System	10-70
Hydraulic System	10-120
Layout Drawing of Hydraulic System	10-120

CLSS	10-121
Component Parts of Hydraulic System.....	10-124
Power Train System.....	10-177
Layout Drawing of Power Train System	10-177
Transmission, Steering, and Brake Control System	10-180
Palm Command Control System	10-182
Function of Gear Shift Mode	10-186
Centralized Pressure Pickup Port.....	10-189
Component Parts of Power Train System.....	10-191
Work Equipment System.....	10-249
Layout Drawing of Work Equipment System	10-249
Function of Work Equipment System	10-254
Component Parts of Work Equipment System	10-255
Lifting System	10-266
Power Ladder System.....	10-266
Component Parts of Lifting System	10-269
Undercarriage and Frame	10-275
Main Frame.....	10-275
Suspension	10-277
Track Frame and Idler Cushion	10-279
Work Equipment	10-281
Structure of Front Work Equipment	10-281
Structure of Cylinder Stay	10-283
Structure of Variable Giant Ripper.....	10-284
Structure of Variable Multi-Shank Ripper.....	10-285
CAB Related Parts.....	10-286
ROPS.....	10-286
CAB	10-287
CAB Mount	10-288
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine D475A-8E0.....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: D475A-8E0	20-8
Machine Posture and Procedures to Measure Performance	20-30
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Related Information on Testing and Adjusting	30-7
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting	30-16
Engine and Cooling System.....	30-19
Examine Engine Speed.....	30-19
Examine Boost Pressure.....	30-24
Examine Exhaust Gas Temperature	30-31
Examine Exhaust Gas Color	30-33
Examine and Adjust Valve Clearance.....	30-40
Examine Compression Pressure	30-43
Examine Blowby Pressure	30-47
Examine Engine Oil Pressure	30-53
Examine EGR Valve and VGT Oil Pressure	30-56
Examine Fuel Pressure.....	30-59
Examine Fuel Return Rate and Leakage.....	30-62
Bleed Air from Fuel System.....	30-73
Examine Fuel Circuit for Leakage	30-75
Examine Low Pressure Circuit Devices.....	30-76
Handle Cylinder Cut-out Mode Operation.....	30-81

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$