

# Shop Manual

BULLDOZER

***D51EXi-24***  
***D51PXi-24***

SERIAL NUMBERS    D51EXi-B25001    and up  
                                 D51PXi-B25001

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
FOREWORD, SAFETY, BASIC INFORMATION .....	00-21
HOW TO READ THE SHOP MANUAL .....	00-21
SAFETY NOTICE FOR OPERATION .....	00-23
PRECAUTIONS TO PREVENT FIRE .....	00-31
ACTIONS IF FIRE OCCURS .....	00-33
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-34
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-35
PRECAUTIONS FOR DEF .....	00-36
STORE AdBlue/DEF .....	00-37
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-38
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-41
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-48
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-50
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-51
PRACTICAL USE OF KOMTRAX .....	00-52
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-53
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-57
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-61
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-64
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-67
HOW TO READ ELECTRICAL WIRE CODE .....	00-68
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-72
STANDARD TIGHTENING TORQUE TABLE .....	00-75
CONVERSION TABLE .....	00-82
ABBREVIATION LIST .....	00-87
01 SPECIFICATION .....	01-1
CONTENTS .....	01-2
SPECIFICATIONS .....	01-3
SPECIFICATION DRAWING .....	01-3
SPECIFICATIONS .....	01-7
WEIGHT TABLE .....	01-18
FUEL, COOLANT, LUBRICANT .....	01-22
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
UREA SCR SYSTEM .....	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-6
UREA SCR SYSTEM DIAGRAM .....	10-8
FUNCTION OF UREA SCR SYSTEM .....	10-9
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-26
BOOT-UP SYSTEM .....	10-35
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-35
SYSTEM OPERATING LAMP SYSTEM .....	10-36
BATTERY DISCONNECT SWITCH .....	10-38
ENGINE SYSTEM .....	10-39
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-39
ENGINE CONTROL SYSTEM .....	10-41
AUTOMATIC IDLE STOP SYSTEM .....	10-47
COMPONENT PARTS OF ENGINE SYSTEM .....	10-50
COOLING SYSTEM .....	10-68
LAYOUT DRAWING OF COOLING SYSTEM .....	10-68
COOLING FAN CONTROL SYSTEM .....	10-70
COMPONENT PARTS OF COOLING SYSTEM .....	10-73

CONTROL SYSTEM.....	10-82
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-82
MACHINE MONITOR SYSTEM .....	10-83
KOMTRAX SYSTEM.....	10-84
COMPONENT PARTS OF CONTROL SYSTEM.....	10-85
HYDRAULIC SYSTEM.....	10-120
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-120
CLSS .....	10-121
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-124
POWER TRAIN SYSTEM .....	10-156
LAYOUT DRAWING OF HST SYSTEM .....	10-156
OPERATION OF HST SYSTEM.....	10-157
STEERING AND BRAKE CONTROL SYSTEM .....	10-159
HST CONTROL SYSTEM.....	10-161
PARKING BRAKE CONTROL SYSTEM .....	10-172
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-175
WORK EQUIPMENT SYSTEM .....	10-211
WORK EQUIPMENT CONTROL .....	10-211
LAYOUT DRAWING OF FRONT WORK EQUIPMENT .....	10-213
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-214
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-215
ICT SYSTEM .....	10-231
LAYOUT DRAWING OF ICT SYSTEM.....	10-231
SYSTEM DIAGRAM OF ICT CONTROL SYSTEM .....	10-233
BLADE CONTROL SYSTEM .....	10-235
ASSIST CONTROL SYSTEM .....	10-240
BACK GRADE MODE SYSTEM .....	10-242
CUT CONTROL SYSTEM.....	10-244
SMOOTH START SYSTEM .....	10-257
SLIP CONTROL SYSTEM .....	10-259
SPEED CONTROL SYSTEM.....	10-261
STRAIGHT TRAVEL CORRECTION SYSTEM .....	10-263
QUICK SURFACE CONTROL SYSTEM.....	10-267
SYSTEM OF TRIANGULATED SURFACE FROM AS-BUILT.....	10-269
2 SURFACES SELECTION CONTROL SYSTEM.....	10-271
LIFT LAYER CONTROL SYSTEM .....	10-273
2D LASER MACHINE CONTROL SYSTEM .....	10-276
COMPONENT PARTS OF ICT SYSTEM .....	10-278
UNDERCARRIAGE AND FRAME.....	10-304
MAIN FRAME .....	10-304
SUSPENSION .....	10-305
TRACK FRAME AND IDLER CUSHION .....	10-308
WORK EQUIPMENT.....	10-310
STRUCTURE OF FRONT WORK EQUIPMENT (Serial No.: B25001 to B25300) .....	10-310
STRUCTURE OF FRONT WORK EQUIPMENT (Serial No.: B25301 and up) .....	10-311
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-312
CAB AND ITS ATTACHMENTS .....	10-313
ROPS CAB .....	10-313
CAB MOUNT .....	10-315
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: D51EXI-24 .....	20-3
STANDARD VALUE TABLE FOR ENGINE: D51PXI-24 .....	20-7
STANDARD VALUE TABLE FOR MACHINE.....	20-11
STANDARD VALUE TABLE FOR MACHINE: D51EXI-24 .....	20-11
STANDARD VALUE TABLE FOR MACHINE: D51PXI-24 .....	20-28
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-43

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$