

# Shop Manual

BULLDOZER

***D65EX -17***

***D65PX -17***

***D65WX -17***

SERIAL NUMBERS      D65EX- 1001  
                                 D65PX- 1001      and up  
                                 D65WX- 1001



# BULLDOZER

**D65EX-17**  
**D65PX-17**  
**D65WX-17**

Model	Serial Number
-------	---------------

D65EX-17	1001 and up
D65PX-17	1001 and up
D65WX-17	1001 and up

---

## 00 Index and foreword

---

---

**Index** (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-15
Important safety notice .....	00-15
How to read the shop manual .....	00-20
Explanation of terms for maintenance standard .....	00-22
Handling equipment of fuel system devices .....	00-24
Handling of intake system parts .....	00-25
Handling of hydraulic equipment .....	00-26
Method of disconnecting and connecting of push-pull type coupler .....	00-28
Handling of electrical equipment .....	00-31
How to read electric wire code .....	00-39
Precautions when performing operation .....	00-42
Standard tightening torque table .....	00-47
List of abbreviation .....	00-53
Conversion table .....	00-58
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specifications .....	01-6
Weight table .....	01-30
Table of fuel, coolant and lubricants .....	01-38
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
Damper .....	10-6
Cooling system .....	10-8
Cooling fan pump .....	10-10
Cooling fan motor .....	10-24
Power train .....	10-32
Power train .....	10-32
HSS system .....	10-35
Overall drawing of power train unit .....	10-37
Power train mount .....	10-39
Power train hydraulic piping drawing .....	10-40
Transmission, steering, and brake control .....	10-42
Universal joint .....	10-44
Torque converter and PTO .....	10-45
Transmission .....	10-51
Transmission control valve .....	10-64
Forward and reverse clutch ECMV and gear shift clutch ECMV .....	10-66
Lockup clutch ECMV .....	10-73
Main relief valve and torque converter relief valve .....	10-77
Transmission lubricating oil relief valve .....	10-80
Bevel gear shaft, HSS, and brake .....	10-81
Brake valve .....	10-102
Final drive .....	10-106
Undercarriage and frame .....	10-110
Main frame .....	10-110
Suspension .....	10-112
Track frame and idler cushion .....	10-114
Hydraulic system .....	10-116
Hydraulic component layout .....	10-116
Work equipment control .....	10-120
Hydraulic tank .....	10-122
CLSS .....	10-124

Scavenging pump .....	10-128
Steering lubricating oil pump and power train pump.....	10-129
HSS pump.....	10-130
HSS motor .....	10-150
Control valve .....	10-159
Blade PPC valve.....	10-186
Ripper PPC valve.....	10-194
Quick drop valve .....	10-199
Work equipment lock solenoid valve .....	10-202
Pitch selector solenoid valve .....	10-207
Angle control EPC valve .....	10-208
Hydraulic oil cooler bypass valve.....	10-213
PPC accumulator.....	10-214
Work equipment .....	10-215
Work equipment.....	10-215
Ripper.....	10-218
Piston valve.....	10-219
Cab and its attachments.....	10-221
ROPS cab .....	10-221
Cab mount .....	10-223
Electrical system .....	10-224
Engine control system .....	10-224
Cooling system control system.....	10-227
Palm command control system.....	10-229
Machine monitor system.....	10-233
KOMTRAX system.....	10-253
System component parts .....	10-256
Sensor.....	10-271
20 Standard value tables.....	20-1
Table of contents .....	20-2
Standard service value table.....	20-3
Standard value table for engine .....	20-3
Standard value table for machine .....	20-5
30 Testing and adjusting .....	30-1
Table of contents .....	30-2
Related information on testing and adjusting .....	30-4
Tools for testing, adjusting, and troubleshooting.....	30-4
Engine and cooling system.....	30-8
Testing engine speed .....	30-8
Measuring boost pressure.....	30-10
Measuring exhaust gas temperature.....	30-11
Measuring exhaust gas color.....	30-13
Test mass air flow and temperature sensor .....	30-14-1
Measuring and adjusting valve clearance .....	30-15
Measuring compression pressure .....	30-17
Measuring blowby pressure .....	30-19
Measuring engine oil pressure.....	30-21
Measuring EGR valve and KVGT oil pressure.....	30-22
Releasing remaining pressure from fuel system .....	30-23
Measuring fuel pressure .....	30-24
Measuring fuel delivery, return rate and leakage .....	30-31
Handling cylinder cutout mode operation.....	30-35
Handling no-injection cranking operation.....	30-36
Bleeding air from fuel system .....	30-37
Testing fuel circuit for leakage .....	30-38
Testing and adjusting air conditioner compressor belt tension .....	30-39
Check alternator belt, replace.....	30-40
Check auto-tensioner, replace.....	30-42
Adjusting fuel dial and decelerator pedal .....	30-44

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$