

Shop Manual

BULLDOZER

D71EXi -24

D71EXi -24E0

D71PXi-24

D71PXi-24E0

SERIAL NUMBERS

D71EXi-70002

D71PXi-70002

and up

00 INDEX AND FOREWORD

INDEX

| | |
|--|-------|
| 00 INDEX AND FOREWORD | 00-1 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-22 |
| HOW TO READ THE SHOP MANUAL | 00-22 |
| SAFETY NOTICE FOR OPERATION | 00-24 |
| PRECAUTIONS TO PREVENT FIRE | 00-32 |
| ACTIONS IF FIRE OCCURS | 00-34 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-35 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS | 00-36 |
| PRECAUTIONS FOR DEF | 00-37 |
| STORE AdBlue/DEF | 00-38 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-39 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS | 00-42 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT | 00-49 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-51 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-52 |
| PRACTICAL USE OF KOMTRAX | 00-53 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-54 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-58 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-62 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-63 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... | 00-65 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-66 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-68 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-69 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD | 00-73 |
| STANDARD TIGHTENING TORQUE TABLE | 00-76 |
| CONVERSION TABLE | 00-83 |
| ABBREVIATION LIST | 00-88 |
| 01 SPECIFICATION | 01-1 |
| CONTENTS | 01-2 |
| SPECIFICATIONS | 01-3 |
| SPECIFICATION DRAWING | 01-3 |
| SPECIFICATIONS | 01-9 |
| WEIGHT TABLE | 01-25 |
| FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA) | 01-31 |
| FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION) | 01-33 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| UREA SCR SYSTEM | 10-6 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-6 |
| UREA SCR SYSTEM DIAGRAM | 10-8 |
| FUNCTION OF UREA SCR SYSTEM | 10-9 |
| COMPONENT PARTS OF UREA SCR SYSTEM | 10-25 |
| BOOT-UP SYSTEM | 10-34 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM | 10-34 |
| SYSTEM OPERATING LAMP SYSTEM | 10-35 |
| BATTERY DISCONNECT SWITCH | 10-37 |
| ASSISTANCE VALVE FOR STARTUP | 10-38 |
| ENGINE SYSTEM | 10-39 |
| LAYOUT DRAWING OF ENGINE SYSTEM | 10-39 |
| ENGINE CONTROL SYSTEM | 10-41 |
| ENGINE AUTOMATIC WARM-UP SYSTEM | 10-46 |
| AUTOMATIC IDLE STOP SYSTEM | 10-47 |
| COMPONENT PARTS OF ENGINE SYSTEM | 10-50 |
| COOLING SYSTEM | 10-69 |

| | |
|--|--------|
| LAYOUT DRAWING OF COOLING SYSTEM | 10-69 |
| COOLING FAN CONTROL SYSTEM..... | 10-71 |
| COOLING SYSTEM..... | 10-73 |
| CONTROL SYSTEM..... | 10-84 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-84 |
| MACHINE MONITOR SYSTEM | 10-85 |
| KOMTRAX SYSTEM..... | 10-87 |
| CONTROL SYSTEM..... | 10-88 |
| HYDRAULIC SYSTEM..... | 10-129 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-129 |
| CLSS | 10-130 |
| HYDRAULIC SYSTEM..... | 10-134 |
| POWER TRAIN SYSTEM | 10-171 |
| LAYOUT DRAWING OF HST SYSTEM | 10-171 |
| OPERATION OF HST SYSTEM..... | 10-172 |
| STEERING AND BRAKE CONTROL SYSTEM | 10-174 |
| HST CONTROL SYSTEM..... | 10-176 |
| PARKING BRAKE CONTROL SYSTEM | 10-187 |
| POWER TRAIN SYSTEM | 10-190 |
| WORK EQUIPMENT SYSTEM | 10-232 |
| WORK EQUIPMENT CONTROL | 10-232 |
| LAYOUT DRAWING OF FRONT WORK EQUIPMENT..... | 10-234 |
| LAYOUT DRAWING OF FIXED MULTI-SHANK RIPPER..... | 10-235 |
| WORK EQUIPMENT SYSTEM | 10-236 |
| ICT SYSTEM | 10-257 |
| LAYOUT DRAWING OF ICT SYSTEM..... | 10-257 |
| SYSTEM DIAGRAM OF ICT CONTROL SYSTEM | 10-259 |
| BLADE CONTROL SYSTEM | 10-261 |
| ASSIST CONTROL SYSTEM | 10-265 |
| BACK GRADE MODE SYSTEM | 10-267 |
| CUT CONTROL SYSTEM..... | 10-269 |
| SMOOTH START SYSTEM | 10-282 |
| SLIP CONTROL SYSTEM | 10-284 |
| SPEED CONTROL SYSTEM..... | 10-286 |
| STRAIGHT TRAVEL CORRECTION SYSTEM | 10-288 |
| QUICK SURFACE CONTROL SYSTEM..... | 10-292 |
| SYSTEM OF TRIANGULATED SURFACE FROM AS-BUILT..... | 10-294 |
| 2 SURFACES SELECTION CONTROL SYSTEM..... | 10-296 |
| LIFT LAYER CONTROL SYSTEM | 10-298 |
| HST SPEED RANGE CONTROL SYSTEM | 10-300 |
| COMPONENT PARTS OF WORK EQUIPMENT CONTROLLER | 10-302 |
| UNDERCARRIAGE AND FRAME..... | 10-327 |
| MAIN FRAME | 10-327 |
| SUSPENSION | 10-328 |
| TRACK FRAME AND IDLER CUSHION | 10-331 |
| WORK EQUIPMENT..... | 10-333 |
| STRUCTURE OF FRONT WORK EQUIPMENT..... | 10-333 |
| STRUCTURE OF FIXED MULTI-SHANK RIPPER..... | 10-334 |
| CAB RELATED PARTS..... | 10-335 |
| ROPS CAB | 10-335 |
| CAB MOUNT | 10-337 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| STANDARD VALUE TABLE FOR ENGINE | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE: D71EXI-24 | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE: D71EXI-24E0..... | 20-7 |
| STANDARD VALUE TABLE FOR ENGINE: D71PXI-24 | 20-11 |
| STANDARD VALUE TABLE FOR ENGINE: D71PXI-24E0..... | 20-15 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$