

Shop Manual

BULLDOZER

D85EX -18

D85PX -18

SERIAL NUMBERS 22001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-19
HOW TO READ THE SHOP MANUAL	00-19
SAFETY NOTICE FOR OPERATION	00-21
PRECAUTIONS TO PREVENT FIRE	00-29
ACTIONS IF FIRE OCCURS	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-32
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-33
PRECAUTIONS FOR DEF	00-34
STORE AdBlue/DEF	00-35
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-36
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-38
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-44
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-46
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-47
PRACTICAL USE OF KOMTRAX	00-48
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-49
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-53
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-63
HOW TO READ ELECTRICAL WIRE CODE	00-64
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-68
ABBREVIATION LIST	00-71
STANDARD TIGHTENING TORQUE TABLE	00-76
CONVERSION TABLE	00-83
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-7
WEIGHT TABLE	01-20
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-26
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-5
LAYOUT DRAWING OF UREA SCR SYSTEM	10-5
UREA SCR SYSTEM DIAGRAM	10-8
FUNCTION OF UREA SCR SYSTEM	10-9
COMPONENT PARTS OF UREA SCR SYSTEM	10-25
BOOT-UP SYSTEM	10-34
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-34
SYSTEM OPERATING LAMP SYSTEM	10-35
BATTERY DISCONNECT SWITCH	10-37
ENGINE SYSTEM	10-39
LAYOUT DRAWING OF ENGINE SYSTEM	10-39
ENGINE CONTROL SYSTEM	10-41
AUTOMATIC IDLE STOP SYSTEM	10-46
COMPONENT PARTS OF ENGINE SYSTEM	10-49
COOLING SYSTEM	10-67
LAYOUT DRAWING OF COOLING SYSTEM	10-67
COOLING FAN CONTROL SYSTEM	10-69
COMPONENT PARTS OF COOLING SYSTEM	10-72

CONTROL SYSTEM.....	10-89
LAYOUT DRAWING OF CONTROL SYSTEM	10-89
MACHINE MONITOR SYSTEM	10-90
KOMTRAX SYSTEM.....	10-91
COMPONENT PARTS OF CONTROL SYSTEM.....	10-92
HYDRAULIC SYSTEM.....	10-122
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-122
CLSS	10-123
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-126
POWER TRAIN SYSTEM	10-177
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-177
OPERATION OF POWER TRAIN SYSTEM.....	10-179
TRANSMISSION, STEERING, AND BRAKE CONTROL	10-180
PALM COMMAND CONTROL SYSTEM.....	10-183
HSS SYSTEM.....	10-187
CENTRALIZED PRESSURE PICKUP PORT.....	10-190
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-192
WORK EQUIPMENT SYSTEM	10-253
WORK EQUIPMENT CONTROL	10-253
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-256
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-257
LAYOUT OF VARIABLE MULTI-SHANK RIPPER	10-258
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-259
UNDERCARRIAGE AND FRAME.....	10-282
MAIN FRAME	10-282
SUSPENSION	10-283
TRACK FRAME AND IDLER CUSHION	10-287
WORK EQUIPMENT.....	10-289
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-289
STRUCTURE OF CYLINDER STAY	10-291
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-292
STRUCTURE OF VARIABLE MULTI-SHANK RIPPER	10-293
CAB AND ITS ATTACHMENTS	10-294
ROPS CAB	10-294
CAB MOUNT	10-296
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: D85EX-18	20-3
STANDARD VALUE TABLE FOR ENGINE: D85PX-18	20-6
STANDARD VALUE TABLE FOR MACHINE.....	20-9
STANDARD VALUE TABLE FOR MACHINE: D85EX-18	20-9
STANDARD VALUE TABLE FOR MACHINE: D85PX-18	20-26
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-41
STANDARD VALUE TABLE FOR ELECTRICAL	20-44
STANDARD VALUE TABLE FOR ELECTRICITY	20-44
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-11
ENGINE AND COOLING SYSTEM.....	30-12
TEST ENGINE SPEED	30-12
TEST BOOST PRESSURE.....	30-16
TEST EXHAUST GAS TEMPERATURE	30-18
TEST EXHAUST GAS COLOR.....	30-20
TEST AND ADJUST VALVE CLEARANCE	30-23
TEST COMPRESSION PRESSURE.....	30-26

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$