

Shop Manual

FORKLIFT TRUCK

FH100-1

FH120-1

FH135-1

FH160-1

SERIAL NUMBERS

FH100-7001

FH120-7001

FH135-7001

FH160-7001

and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD

- INDEX 00-2
- LIST OF ABBREVIATIONS 00-17
- FOREWORD, SAFETY AND GENERAL INFORMATION 00-22
 - HOW TO READ THE SHOP MANUAL 00-22
 - PRECAUTIONS RELATED TO WORK SAFETY 00-25
 - FIRE PREVENTION 00-34
 - IF A FIRE BREAKS OUT 00-36
 - ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS 00-37
 - INSTRUCTIONS FOR WASTE DISPOSAL 00-38
 - HANDLING INSTRUCTIONS OF DEF 00-39
 - REGARDING STORAGE OF DEF 00-40
 - REGARDING HANDLING OF DEF IN COLD WEATHER 00-40
 - INSTRUCTIONS FOR HANDLING HYDRAULIC COMPONENTS 00-41
 - INSTRUCTIONS FOR DISCONNECTING AND CONNECTING PIPING 00-43
 - INSTRUCTIONS FOR HANDLING ELECTRIC COMPONENTS 00-51
 - INSTRUCTIONS FOR HANDLING FUEL SYSTEM COMPONENTS 00-53
 - INSTRUCTIONS FOR HANDLING INTAKE SYSTEM COMPONENTS 00-54
 - PRECAUTIONS FOR REPLACING HST CONTROLLER AND MONITOR PANEL 00-55
 - USE OF KOMTRAX 00-56
 - DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER 00-57
 - INSTRUCTIONS FOR DISCONNECTING AND CONNECTING CONNECTORS 00-61
 - HOW TO DISCONNECT AND CONNECT DT CONNECTORS 00-66
 - HOW TO DISCONNECT AND CONNECT SLIDE LOCK TYPE CONNECTORS 00-67
 - HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE PULLING LOCK 00-69
 - HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE PRESSING LOCK 00-70
 - HOW TO DISCONNECT AND CONNECT CONNECTORS THAT REQUIRE TURNING HOUSING 00-72
 - HOW TO READ ELECTRIC WIRE CODE 00-73
 - EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-79
 - STANDARD TIGHTENING TORQUE TABLE 00-81
 - UNIT CONVERSION TABLE 00-88

01 SPECIFICATION

- LIST OF ABBREVIATIONS 01-3
- SPECIFICATIONS 01-8
 - SPECIFICATION DRAWING 01-8
 - SPECIFICATIONS 01-16
 - WEIGHT TABLE 01-32
 - FUEL, COOLANT, AND LUBRICANT 01-36

10 STRUCTURE AND FUNCTION

- LIST OF ABBREVIATIONS 10-5
- UREA SCR SYSTEM 10-10
 - UREA SCR SYSTEM COMPONENT LAYOUT DRAWING 10-10
 - UREA SCR SYSTEM DIAGRAM 10-13
 - FUNCTION OF UREA SCR SYSTEM 10-14
 - UREA SCR SYSTEM COMPONENTS 10-24
- STARTING SYSTEM 10-33
 - STARTING SYSTEM COMPONENT LAYOUT DRAWING 10-33
 - SYSTEM OPERATING LAMP SYSTEM 10-34
 - PREHEATING SYSTEM 10-35
- ENGINE SYSTEM 10-37
 - ENGINE SYSTEM COMPONENT LAYOUT DRAWING 10-37
 - ENGINE CONTROL SYSTEM 10-38
 - AUTOMATIC ENGINE STOP SYSTEM 10-40
 - AUTOMATIC ENGINE POWER CONTROL SYSTEM 10-43
 - ENGINE SYSTEM COMPONENTS 10-46

COOLING SYSTEM	10-61
COOLING SYSTEM COMPONENT LAYOUT DRAWING	10-61
CONTROL SYSTEM	10-63
CONTROL SYSTEM COMPONENT LAYOUT DRAWING	10-63
MONITOR PANEL SYSTEM	10-65
REARVIEW MONITOR SYSTEM	10-66
KOMTRAX SYSTEM	10-67
SEAT BELT INTERLOCK SYSTEM	10-68
CONTROL SYSTEM COMPONENTS	10-70
HYDRAULIC SYSTEM	10-101
HYDRAULIC SYSTEM COMPONENT LAYOUT DRAWING	10-101
CLSS	10-102
HYDRAULIC SYSTEM COMPONENTS	10-104
POWER TRAIN SYSTEM	10-134
POWER TRAIN SYSTEM COMPONENT LAYOUT DRAWING	10-134
TRAVEL SPEED LIMIT SYSTEM	10-136
DIRECTIONAL LEVER NEUTRAL ALARM SYSTEM	10-137
TRAVEL INTERLOCK SYSTEM	10-138
POWER TRAIN SYSTEM COMPONENTS	10-140
WORK EQUIPMENT SYSTEM	10-171
WORK EQUIPMENT SYSTEM COMPONENT LAYOUT DRAWING	10-171
STRUCTURE OF VALVE CONTROL	10-172
LIFT INTERLOCK SYSTEM	10-173
WORK EQUIPMENT SYSTEM COMPONENTS	10-175
STEERING SYSTEM	10-181
STEERING SYSTEM COMPONENT LAYOUT DRAWING	10-181
ELECTRONIC PROPORTIONAL ACTIVE CONTROL STEERING (EPACS) SYSTEM	10-182
STEERING COLUMN	10-184
STEERING SYSTEM COMPONENT	10-185
BRAKE SYSTEM	10-191
BRAKE SYSTEM COMPONENT LAYOUT DRAWING	10-191
PARKING BRAKE REMINDER SYSTEM	10-192
PARKING BRAKE DRAGGING PREVENTION SYSTEM	10-194
BRAKE SYSTEM COMPONENTS	10-196
UNDERCARRIAGE AND FRAME	10-206
STRUCTURE OF FRAME	10-206
TIRE	10-207
WORK EQUIPMENT	10-208
STRUCTURE OF WORK EQUIPMENT	10-208
CAB AND ITS ATTACHMENTS	10-209
CAB	10-209
20 STANDARD VALUE TABLE	
LIST OF ABBREVIATIONS	20-3
STANDARD VALUE TABLE FOR ENGINE	20-8
STANDARD VALUE TABLE FOR ENGINE FH100-1	20-8
STANDARD VALUE TABLE FOR ENGINE FH120-1	20-11
STANDARD VALUE TABLE FOR ENGINE FH135-1	20-14
STANDARD VALUE TABLE FOR ENGINE: FH160-1	20-17
STANDARD VALUE TABLE FOR MACHINE	20-20
STANDARD VALUE TABLE FOR MACHINE: FH100-1	20-20
STANDARD VALUE TABLE FOR MACHINE: FH120-1	20-27
STANDARD VALUE TABLE FOR MACHINE: FH135-1	20-34
STANDARD VALUE TABLE FOR MACHINE: FH160-1	20-41
30 TESTING AND ADJUSTING	
PRECAUTIONS BEFORE WORK	30-6
LIST OF ABBREVIATIONS	30-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$