

# Shop Manual

MOTOR GRADER

**GD535-5**

SERIAL NUMBERS 1001 and up

**KOMATSU**



---

# 00 Index and foreword

---

## Table of contents

00 Index and foreword	
Table of contents .....	00-2
Acronyms .....	00-12
Foreword and general information .....	00-17
Safety notice .....	00-17
How to read the shop manual .....	00-22
Explanation of terms for maintenance standard .....	00-24
Handling of electric equipment and hydraulic components .....	00-26
Handling of connectors newly used for engines .....	00-35
How to read electric wire code .....	00-38
Precautions when carrying out work .....	00-41
Method of disassembling and connecting push-pull type coupler .....	00-44
Standard tightening torque table .....	00-47
Conversion table .....	00-51
01 Specification	
Acronyms .....	01-2-1
Specifications .....	01-3
Specification drawing (Canopy specification) .....	01-3
Specification drawing (Cab specification) .....	01-3-1
Specifications (Canopy specification) .....	01-4
Specifications (Cab specification) .....	01-9-1
Weight table .....	01-10
Table of fuel, coolant, and lubricants .....	01-11
10 Structure and function	
Acronyms .....	10-3-1
Engine and cooling system .....	10-4
Cooling system .....	10-4
Fan drive .....	10-6
Power train system .....	10-7
Power train system drawing .....	10-7
Power train piping drawing .....	10-8
Transmission control .....	10-9
Torque converter .....	10-10
Transmission .....	10-14
Transmission control valve .....	10-33
ECMV .....	10-35
Main relief valve and torque converter relief valve .....	10-42
Front axle .....	10-44
Rear axle .....	10-47
Differential (Non-differential specification) .....	10-48
Differential (Differential lock specification) .....	10-50
Differential lock solenoid valve .....	10-53
Final drive .....	10-54
Tandem drive .....	10-56
Steering system .....	10-59
Steering piping drawing .....	10-59
Priority valve .....	10-60
Steering valve .....	10-65
Brake system .....	10-73
Hydraulic piping drawing of brake system .....	10-73
Brake valve .....	10-74
Brake circuit accumulator .....	10-79
Brake circuit accumulator charge valve .....	10-80
Wheel brake .....	10-86

Parking brake solenoid valve and lifter lock pin solenoid valve .....	10-87
Parking brake .....	10-88
Undercarriage and frame .....	10-89
Frame .....	10-89
Tire .....	10-90
Hydraulic system .....	10-92
Hydraulic system .....	10-92
Hydraulic piping drawing of work equipment .....	10-94
Work equipment control .....	10-96
Hydraulic tank .....	10-97
Work equipment pump and steering pump .....	10-98
Power train pump .....	10-99
Power train pump and differential lock pump .....	10-100
Brake pump .....	10-101
Control valve .....	10-102
Functions and valve operations .....	10-104
Hydraulic cylinder .....	10-105
Swivel joint .....	10-106
Pilot check valve .....	10-107
Work equipment system .....	10-110
Circle and drawbar .....	10-110
Blade .....	10-112
Lifter .....	10-114
Circle rotation motor .....	10-116
Circle rotation gear .....	10-118
Cab and its attachments .....	10-120
ROPS canopy .....	10-120
ROPS cab .....	10-121
Electrical system .....	10-122
Machine monitor .....	10-122
Automatic gear shift control system .....	10-133
Transmission controller .....	10-140
Engine controller .....	10-143
KOMTRAX system .....	10-146
KOMTRAX terminal .....	10-147
Engine starting circuit .....	10-149
Engine stop circuit .....	10-151
Preheating circuit .....	10-152
Sensors .....	10-153
Engine power mode selector circuit .....	10-162
20 Standard value table .....	
Acronyms .....	20-3
Standard value table .....	20-8
Standard value table for engine .....	20-8
Standard value table for machine .....	20-10
30 Testing and adjusting .....	
Acronyms .....	30-4
Tools for testing, adjusting, and troubleshooting .....	30-9
Tools for testing, adjusting, and troubleshooting .....	30-9
Engine and cooling system .....	30-16
Testing engine speed .....	30-16
Testing boost pressure .....	30-18
Testing exhaust gas temperature .....	30-20
Testing exhaust gas color .....	30-22
Adjusting valve clearance .....	30-24
Testing compression pressure .....	30-26
Testing blowby pressure .....	30-29

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$