

# Shop Manual

MOTOR GRADER

***GD955-7***

SERIAL NUMBERS 10001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-28
How to Read the Shop Manual .....	00-28
Safety Notice for Operation .....	00-30
Precautions to Prevent Fire .....	00-38
Procedures If Fire Occurs .....	00-40
Precautions for Disposing of Waste Materials .....	00-41
Procedures for Exhaust Gas Regulations .....	00-42
Precautions for DEF .....	00-43
Store DEF .....	00-44
Precautions When You Handle Hydraulic Equipment .....	00-45
Precautions When You Disconnect and Connect Pipings .....	00-48
Precautions When You Handle Electrical Equipment .....	00-55
Precautions When You Handle Fuel System Equipment .....	00-57
Precautions When You Handle Intake System Equipment .....	00-58
Practical Use of KOMTRAX .....	00-59
Disconnect and Connect Push-Pull Type Coupler .....	00-60
Precautions for Disconnection and Connection of Connectors .....	00-64
How to Disconnect and Connect Deutsch Connector .....	00-68
How to Disconnect and Connect Slide Lock Type Connector .....	00-69
How to Disconnect and Connect Connector with Lock to Pull .....	00-71
How to Disconnect and Connect Connector with Lock to Push .....	00-72
How to Disconnect and Connect Connector with Housing to Rotate .....	00-74
Standard Tightening Torque Table .....	00-75
Conversion Table .....	00-82
Abbreviation List .....	00-87
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-5
Weight Table .....	01-13
Fuel, Coolant, Lubricant .....	01-14
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-7
Layout Drawing of Urea SCR System .....	10-7
Urea SCR System Diagram .....	10-10
Function of Urea SCR System .....	10-11
Component Parts of Urea SCR System .....	10-21
Boot-up System .....	10-30
Layout Drawing of Boot-up System .....	10-30
System Operating Lamp System .....	10-33
Battery Disconnect Switch .....	10-34
Starting Motor Disconnect Switch .....	10-35
Preheating System .....	10-36
Engine Shutdown Secondary Switch .....	10-38
Emergency Engine Stop Switch .....	10-39
External Power Supply Engine Preheater .....	10-40
Engine System .....	10-42
Layout Drawing of Engine System .....	10-42
Engine Control System .....	10-44
Engine Power Mode Selector System .....	10-49
Automatic Idle Stop System .....	10-50
RPM Set .....	10-52
Component Parts of Engine System .....	10-56

Cooling System.....	10-79
Layout Drawing of Cooling System .....	10-79
Cooling Fan Control System .....	10-81
Component Parts of Cooling System .....	10-84
Control System .....	10-99
Layout Drawing of Control System .....	10-99
Machine Monitor System.....	10-101
Rearview Monitor System .....	10-103
KOMTRAX Plus System .....	10-104
Machine Lock-out System.....	10-106
Seating Switch System .....	10-110
Component Parts of Control System .....	10-112
Hydraulic System .....	10-174
Layout Drawing of Hydraulic System.....	10-174
CLSS .....	10-175
Component Parts of Hydraulic System.....	10-179
Power Train System.....	10-222
Layout Drawing of Power Train System .....	10-222
Operation of Power Train System .....	10-225
Transmission Control System.....	10-226
Transmission Protection Function .....	10-229
Component Parts of Power Train System.....	10-230
Steering System.....	10-290
Layout Drawing of Steering System .....	10-290
Secondary Steering System.....	10-292
Steering Column .....	10-293
Steering Lever System.....	10-294
Component Parts of Steering System .....	10-298
Work Equipment System.....	10-305
Layout Drawing of Work Equipment System .....	10-305
Work Equipment Control System .....	10-308
Work Equipment Lock System .....	10-309
Component Parts of Work Equipment System .....	10-311
Brake System.....	10-325
Layout Drawing of Brake System .....	10-325
Parking Brake Control System .....	10-327
Component Parts of Brake System .....	10-328
Auto-Greasing System.....	10-344
Layout Drawing of Auto-Greasing System.....	10-344
Auto-Greasing System Diagram.....	10-350
Auto-Greasing System .....	10-353
Service Center .....	10-357
Service Center .....	10-357
Function of Service Center.....	10-358
KOWA Oil Sampling System .....	10-359
Layout Drawing of KOWA Oil Sampling System.....	10-359
Function of KOWA Oil Sampling System.....	10-360
Undercarriage and Frame .....	10-361
Frame and Center Hinge Pin.....	10-361
Tires.....	10-362
Work Equipment .....	10-364
Bearing Type Circle and Drawbar.....	10-364
Blade .....	10-367
Lifter.....	10-369
Ripper .....	10-370
CAB Related Parts.....	10-371
ROPS CAB .....	10-371
CAB Mount .....	10-372

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$