

Shop Manual

MOTOR GRADER

GD955-7E0

SERIAL NUMBERS 70001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-27
How to Read the Shop Manual	00-27
Safety Notice for Operation	00-29
Precautions to Prevent Fire	00-37
Procedures If Fire Occurs	00-39
Precautions for Disposing of Waste Materials	00-40
Procedures for Exhaust Gas Regulations	00-41
Precautions for DEF	00-42
Store DEF	00-43
Precautions When You Handle Hydraulic Equipment	00-44
Precautions When You Disconnect and Connect Pipings	00-47
Precautions When You Handle Electrical Equipment	00-54
Precautions When You Handle Fuel System Equipment	00-56
Precautions When You Handle Intake System Equipment	00-57
Practical Use of KOMTRAX	00-58
Disconnect and Connect Push-Pull Type Coupler	00-59
Precautions for Disconnection and Connection of Connectors	00-63
How to Disconnect and Connect Deutsch Connector	00-67
How to Disconnect and Connect Slide Lock Type Connector	00-68
How to Disconnect and Connect Connector with Lock to Pull	00-70
How to Disconnect and Connect Connector with Lock to Push	00-71
How to Disconnect and Connect Connector with Housing to Rotate	00-73
Standard Tightening Torque Table	00-74
Conversion Table	00-81
Abbreviation List	00-86
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-13
Fuel, Coolant, Lubricant	01-14
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-7
Layout Drawing of Urea SCR System	10-7
Urea SCR System Diagram	10-10
Function of Urea SCR System	10-11
Component Parts of Urea SCR System	10-22
Boot-up System	10-31
Layout Drawing of Boot-up System	10-31
System Operating Lamp System	10-34
Battery Disconnect Switch	10-35
Starting Motor Disconnect Switch	10-36
Preheating System	10-37
Engine Shutdown Secondary Switch	10-39
Emergency Engine Stop Switch	10-40
External Power Supply Engine Preheater	10-41
Engine System	10-43
Layout Drawing of Engine System	10-43
Engine Control System	10-45
Engine Power Mode Selector System	10-50
Automatic Idle Stop System	10-51
RPM Set	10-53
Component Parts of Engine System	10-57

Cooling System.....	10-80
Layout Drawing of Cooling System	10-80
Cooling Fan Control System	10-82
Component Parts of Cooling System	10-85
Control System	10-100
Layout Drawing of Control System	10-100
Machine Monitor System.....	10-102
Rearview Monitor System	10-104
KOMTRAX Plus System	10-105
Machine Lock-out System.....	10-107
Seating Switch System	10-111
Component Parts of Control System	10-113
Hydraulic System	10-175
Layout Drawing of Hydraulic System.....	10-175
CLSS	10-176
Component Parts of Hydraulic System.....	10-180
Power Train System.....	10-223
Layout Drawing of Power Train System	10-223
Operation of Power Train System	10-226
Transmission Control System.....	10-227
Transmission Protection Function	10-230
Component Parts of Power Train System.....	10-231
Steering System.....	10-291
Layout Drawing of Steering System	10-291
Secondary Steering System.....	10-293
Steering Column	10-294
Steering Lever System.....	10-295
Component Parts of Steering System	10-299
Work Equipment System.....	10-306
Layout Drawing of Work Equipment System	10-306
Work Equipment Control System	10-309
Work Equipment Lock System	10-310
Component Parts of Work Equipment System	10-312
Brake System.....	10-326
Layout Drawing of Brake System	10-326
Parking Brake Control System	10-328
Component Parts of Brake System	10-329
Auto-Greasing System.....	10-345
Layout Drawing of Auto-Greasing System.....	10-345
Auto-Greasing System Diagram.....	10-351
Auto-Greasing System	10-354
Service Center	10-358
Service Center	10-358
Function of Service Center.....	10-359
KOWA Oil Sampling System	10-360
Layout Drawing of KOWA Oil Sampling System.....	10-360
Function of KOWA Oil Sampling System.....	10-361
Undercarriage and Frame	10-362
Frame and Center Hinge Pin.....	10-362
Tires.....	10-363
Work Equipment	10-365
Bearing Type Circle and Drawbar.....	10-365
Blade	10-368
Lifter.....	10-370
Ripper	10-371
CAB Related Parts.....	10-372
ROPS CAB	10-372
CAB Mount	10-373

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$