

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**HB215LC-3**

**SERIAL NUMBERS**      70009 and up  
                                 K70001 and up



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-22
FOREWORD, SAFETY, BASIC INFORMATION .....	00-28
HOW TO READ THE SHOP MANUAL.....	00-28
SAFETY NOTICE FOR OPERATION.....	00-30
PRECAUTIONS PARTICULARLY FOR HYBRID MACHINES.....	00-38
PRECAUTIONS TO PREVENT FIRE.....	00-39
ACTIONS IF FIRE OCCURS .....	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-43
PRECAUTIONS FOR DEF.....	00-44
STORE AdBlue/DEF .....	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT.....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR MAINTENANCE OF HYBRID SYSTEM.....	00-58
PRECAUTIONS AGAINST HIGH VOLTAGE AND HIGH TEMPERATURE.....	00-59
PRECAUTIONS FOR NORMAL CHECK AND MAINTENANCE.....	00-60
PRECAUTIONS FOR THE MACHINE NOT TO BE TIPPED OVER AND FOR HYBRID COMPO- NENTS NOT TO BE DAMAGED .....	00-61
PRECAUTIONS FOR THE MACHINE NOT TO BE SUBMERGED.....	00-62
PRECAUTIONS FOR THE COLD SEASON.....	00-63
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT.....	00-64
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT.....	00-65
PRACTICAL USE OF KOMTRAX.....	00-66
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER.....	00-67
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-71
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR.....	00-75
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR.....	00-76
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-78
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-79
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . .....	00-81
HOW TO READ THE CODES (SYMBOLS) FOR ELECTRIC CABLE.....	00-82
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-88
STANDARD TIGHTENING TORQUE TABLE.....	00-91
CONVERSION TABLE.....	00-98
01 SPECIFICATIONS .....	01-1
CONTENTS.....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-16
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION).....	01-18
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS.....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM.....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-17
FUNCTION OF UREA SCR SYSTEM.....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-30
BOOT-UP SYSTEM.....	10-39
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-39

SYSTEM OPERATING LAMP SYSTEM .....	10-40
BATTERY DISCONNECT SWITCH .....	10-42
ENGINE SYSTEM .....	10-43
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-43
ENGINE CONTROL SYSTEM .....	10-45
AUTO-DECELERATION SYSTEM .....	10-48
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-50
OVERHEAT PREVENTION SYSTEM .....	10-52
TURBOCHARGER PROTECTION SYSTEM .....	10-56
AUTOMATIC IDLE STOP SYSTEM .....	10-58
COMPONENT PARTS OF ENGINE SYSTEM .....	10-62
COOLING SYSTEM.....	10-77
LAYOUT DRAWING OF COOLING SYSTEM .....	10-77
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH .....	10-79
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-81
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
HYBRID SYSTEM.....	10-85
LAYOUT DRAWING OF HYBRID SYSTEM .....	10-85
SYSTEM DIAGRAM OF HYBRID SYSTEM.....	10-86
STRUCTURE OF HYBRID SYSTEM .....	10-87
HYBRID PROTECTION SYSTEM.....	10-88
COOLING SYSTEM OF HYBRID COMPONENTS .....	10-90
INTERLOCK SYSTEM OF HYBRID COMPONENTS .....	10-91
WORKER PROTECTION SYSTEM FOR WHEN DISASSEMBLING THE HYBRID COMPONENTS .....	10-92
COMPONENT PARTS OF HYBRID SYSTEM .....	10-94
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-101
MACHINE MONITOR SYSTEM .....	10-104
KomVision SYSTEM .....	10-106
KOMTRAX SYSTEM.....	10-110
COMPONENT PARTS OF CONTROL SYSTEM.....	10-111
HYDRAULIC SYSTEM.....	10-146
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-146
CLSS .....	10-151
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-168
PUMP AND VALVE CONTROL SYSTEM .....	10-174
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-177
WORK EQUIPMENT SYSTEM .....	10-260
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-260
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-264
PPC LOCK SYSTEM .....	10-266
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-267
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-269
TOOL CONTROL SYSTEM .....	10-271
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-273
SWING SYSTEM.....	10-311
LAYOUT DRAWING OF SWING SYSTEM .....	10-311
SWING CONTROL SYSTEM DIAGRAM .....	10-314
COMPONENT PARTS OF SWING SYSTEM.....	10-318
TRAVEL SYSTEM.....	10-322
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-322
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-326
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-328
UNDERCARRIAGE AND FRAME.....	10-349
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-349
WORK EQUIPMENT.....	10-351
STRUCTURE OF WORK EQUIPMENT .....	10-351

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$