

Shop Manual

**HYDRAULIC
EXCAVATOR**

HB215LC-3

SERIAL NUMBERS

70009 and up

K70202 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-22
FOREWORD, SAFETY, BASIC INFORMATION	00-28
HOW TO READ THE SHOP MANUAL.....	00-28
SAFETY NOTICE FOR OPERATION.....	00-30
PRECAUTIONS PARTICULARLY FOR HYBRID MACHINES.....	00-38
PRECAUTIONS TO PREVENT FIRE.....	00-39
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-43
PRECAUTIONS FOR DEF.....	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT.....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR MAINTENANCE OF HYBRID SYSTEM.....	00-58
PRECAUTIONS AGAINST HIGH VOLTAGE AND HIGH TEMPERATURE.....	00-59
PRECAUTIONS FOR NORMAL CHECK AND MAINTENANCE.....	00-60
PRECAUTIONS FOR THE MACHINE NOT TO BE TIPPED OVER AND FOR HYBRID COMPO- NENTS NOT TO BE DAMAGED	00-61
PRECAUTIONS FOR THE MACHINE NOT TO BE SUBMERGED.....	00-62
PRECAUTIONS FOR THE COLD SEASON.....	00-63
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT.....	00-64
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT.....	00-65
PRACTICAL USE OF KOMTRAX.....	00-66
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER.....	00-67
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-71
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR.....	00-75
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR.....	00-76
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-78
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-79
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE	00-81
HOW TO READ THE CODES (SYMBOLS) FOR ELECTRIC CABLE.....	00-82
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-88
STANDARD TIGHTENING TORQUE TABLE.....	00-91
CONVERSION TABLE.....	00-98
01 SPECIFICATIONS	01-1
CONTENTS.....	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION).....	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS.....	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM.....	10-12
UREA SCR SYSTEM DIAGRAM	10-17
FUNCTION OF UREA SCR SYSTEM.....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-30
BOOT-UP SYSTEM.....	10-39
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-39

SYSTEM OPERATING LAMP SYSTEM	10-40
BATTERY DISCONNECT SWITCH	10-41
ENGINE SYSTEM	10-42
LAYOUT DRAWING OF ENGINE SYSTEM	10-42
ENGINE CONTROL SYSTEM	10-44
AUTO-DECELERATION SYSTEM	10-47
ENGINE AUTOMATIC WARM-UP SYSTEM	10-49
OVERHEAT PREVENTION SYSTEM	10-51
TURBOCHARGER PROTECTION SYSTEM	10-55
AUTOMATIC IDLE STOP SYSTEM	10-57
COMPONENT PARTS OF ENGINE SYSTEM	10-61
COOLING SYSTEM.....	10-76
LAYOUT DRAWING OF COOLING SYSTEM	10-76
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-78
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-80
COMPONENT PARTS OF COOLING SYSTEM.....	10-83
HYBRID SYSTEM.....	10-84
LAYOUT DRAWING OF HYBRID SYSTEM	10-84
SYSTEM DIAGRAM OF HYBRID SYSTEM.....	10-85
STRUCTURE OF HYBRID SYSTEM	10-86
HYBRID PROTECTION SYSTEM.....	10-87
COOLING SYSTEM OF HYBRID COMPONENTS	10-89
INTERLOCK SYSTEM OF HYBRID COMPONENTS	10-90
WORKER PROTECTION SYSTEM FOR WHEN DISASSEMBLING THE HYBRID COMPONENTS	10-91
COMPONENT PARTS OF HYBRID SYSTEM	10-93
CONTROL SYSTEM.....	10-100
LAYOUT DRAWING OF CONTROL SYSTEM	10-100
MACHINE MONITOR SYSTEM	10-103
KomVision SYSTEM	10-104
COMPONENT PARTS OF CONTROL SYSTEM.....	10-108
HYDRAULIC SYSTEM.....	10-147
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-147
CLSS	10-152
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-169
PUMP AND VALVE CONTROL SYSTEM	10-175
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-178
WORK EQUIPMENT SYSTEM	10-261
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-261
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-265
PPC LOCK SYSTEM	10-267
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-268
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-270
TOOL CONTROL SYSTEM	10-272
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-274
SWING SYSTEM.....	10-312
LAYOUT DRAWING OF SWING SYSTEM	10-312
SWING CONTROL SYSTEM DIAGRAM	10-315
COMPONENT PARTS OF SWING SYSTEM.....	10-319
TRAVEL SYSTEM.....	10-323
LAYOUT DRAWING OF TRAVEL SYSTEM	10-323
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-327
COMPONENT PARTS OF TRAVEL SYSTEM	10-329
UNDERCARRIAGE AND FRAME.....	10-350
LAYOUT DRAWING OF UNDERCARRIAGE	10-350
WORK EQUIPMENT.....	10-352
STRUCTURE OF WORK EQUIPMENT	10-352
FUNCTION OF WORK EQUIPMENT	10-353

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$