

Shop Manual

DUMP TRUCK

HD1500-8E0

SERIAL NUMBERS 85001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

- 00 INDEX AND FOREWORD 00-1
 - FOREWORD, SAFETY, BASIC INFORMATION 00-20
 - HOW TO READ THE SHOP MANUAL 00-20
 - SAFETY NOTICE FOR OPERATION 00-22
 - PRECAUTIONS TO PREVENT FIRE 00-30
 - ACTIONS IF FIRE OCCURS 00-31
 - PRECAUTIONS FOR REMOVAL OF DANGEROUS MATERIALS 00-31
 - STEPS NECESSARY TO MEET EXHAUST GAS REGULATIONS 00-32
 - PRECAUTIONS FOR DEF 00-33
 - PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-35
 - PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-37
 - PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-44
 - PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-46
 - PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-47
 - PRACTICAL USE OF KOMTRAX 00-48
 - DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-49
 - PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-53
 - METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-57
 - METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-58
 - METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL 00-59
 - METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH 00-60
 - METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE 00-62
 - STANDARD TIGHTENING TORQUE TABLE 00-63
 - CONVERSION TABLE 00-70
 - ABBREVIATIONS 00-75
- 01 SPECIFICATIONS 01-1
 - SPECIFICATIONS 01-3
 - SPECIFICATION DRAWING 01-3
 - SPECIFICATIONS 01-5
 - WEIGHT TABLE 01-11
 - FUEL, COOLANT, AND LUBRICATING OIL 01-13
- 10 STRUCTURE AND FUNCTION 10-1
 - UREA SCR SYSTEM 10-7
 - LAYOUT DRAWING OF UREA SCR STSTEM 10-7
 - UREA SCR SYSTEM DIAGRAM 10-10
 - FUNCTION OF UREA SCR SYSTEM 10-12
 - COMPONENT PARTS OF UREA SCR SYSTEM 10-18
 - BOOT-UP SYSTEM 10-24
 - LAYOUT DRAWING OF BOOT-UP SYSTEM 10-24
 - SYSTEM OPERATING LAMP SYSTEM 10-27
 - BATTERY DISCONNECT SWITCH 10-28
 - STARTING MOTOR DISCONNECT SWITCH 10-29
 - ENGINE SHUTDOWN SECONDARY SWITCH 10-30
 - EXTERNAL POWER SUPPLY ENGINE PREHEATER 10-32
 - ENGINE SYSTEM 10-35
 - LAYOUT DRAWING OF ENGINE SYSTEM 10-35
 - ENGINE CONTROL SYSTEM 10-37
 - COMPONENT PARTS OF ENGINE SYSTEM 10-41

COOLING SYSTEM	10-42
LAYOUT DRAWING OF COOLING SYSTEM	10-42
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-44
COMPONENT PARTS OF COOLING SYSTEM	10-45
CONTROL SYSTEM	10-73
LAYOUT DRAWING OF CONTROL SYSTEM	10-73
RETARDER AND HOIST CONTROL SYSTEM	10-75
MACHINE MONITOR SYSTEM	10-77
REARVIEW MONITOR SYSTEM	10-79
KOMTRAX Plus SYSTEM	10-80
PAYLOAD METER SYSTEM	10-85
MACHINE LOCK-OUT SYSTEM	10-97
COMPONENT PARTS OF CONTROL SYSTEM	10-101
HYDRAULIC SYSTEM	10-149
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-149
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-150
POWER TRAIN SYSTEM	10-185
LAYOUT DRAWING OF POWER TRAIN SYSTEM	10-185
TRANSMISSION CONTROL SYSTEM	10-188
GEAR SHIFT CONTROL SYSTEM	10-194
DIRECTION CONTROL SYSTEM	10-197
KOMATSU TRACTION CONTROL SYSTEM (KTCS)	10-198
TRAVEL SPEED LIMITATION SYSTEM	10-200
REAR AXLE OIL FILTRATION SYSTEM	10-204
COMPONENT PARTS OF POWER TRAIN SYSTEM	10-206
WORK EQUIPMENT SYSTEM	10-262
WORK EQUIPMENT CONTROL	10-262
HOIST CONTROL	10-263
BUDDY SYSTEM	10-265
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM	10-267
STEERING SYSTEM	10-274
LAYOUT DRAWING OF STEERING SYSTEM	10-274
FUNCTION OF STEERING SYSTEM	10-275
STEERING COLUMN	10-276
STEERING CONTROL LINKAGE	10-277
COMPONENT PARTS OF STEERING SYSTEM	10-278
BRAKE SYSTEM	10-290
LAYOUT DRAWING OF BRAKE SYSTEM	10-290
RETARDER CONTROL	10-293
ARSC SYSTEM	10-295
COMPONENT PARTS OF BRAKE SYSTEM	10-296
AUTO-GREASING SYSTEM	10-325
LAYOUT DRAWING OF AUTO-GREASING SYSTEM	10-325
AUTO-GREASING SYSTEM DIAGRAM	10-328
FUNCTION OF AUTO-GREASING SYSTEM	10-329
GREASE REFILL AUTOMATIC STOP SYSTEM	10-330
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-331
SERVICE CENTER	10-335
LAYOUT DRAWING OF SERVICE CENTER	10-335
FUNCTION OF SERVICE CENTER	10-335

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$