

# Shop Manual

DUMP TRUCK

***HD325-8***  
***HD405-8***

SERIAL NUMBERS

HD325-50001 and up  
HD405-50001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATIONS .....	00-26
FOREWORD, SAFETY, BASIC INFORMATION .....	00-31
HOW TO READ THE SHOP MANUAL .....	00-31
SAFETY NOTICE FOR OPERATION .....	00-33
PRECAUTIONS TO PREVENT FIRE .....	00-41
ACTIONS IF FIRE OCCURS .....	00-42
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-43
PRECAUTIONS FOR DEF .....	00-44
STORE DEF .....	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-48
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-57
PRACTICAL USE OF KOMTRAX .....	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .....	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .....	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .....	00-72
HOW TO READ ELECTRICAL WIRE CODE .....	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-77
STANDARD TIGHTENING TORQUE TABLE .....	00-79
CONVERSION TABLE .....	00-86
01 SPECIFICATIONS .....	01-1
ABBREVIATIONS .....	01-3
SPECIFICATIONS .....	01-8
SPECIFICATION DRAWING .....	01-8
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-22
FUEL, COOLANT, AND LUBRICATING OIL (NORTH AMERICAN SPECIFICATION) .....	01-24
FUEL, COOLANT, AND LUBRICATING OIL (EU SPECIFICATION) .....	01-26
10 STRUCTURE AND FUNCTION .....	10-1
ABBREVIATIONS .....	10-7
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-15
FUNCTION OF UREA SCR SYSTEM .....	10-16
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-33
BOOT-UP SYSTEM .....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with KOMTRAX terminal) .....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with emergency engine stop switch) (For machines equipped with KOMTRAX terminal) .....	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with gateway function controller) .....	10-46

LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with emergency engine stop switch) (For machines equipped with gateway function controller) - - - - -	10-48
SYSTEM OPERATING LAMP SYSTEM - - - - -	10-50
BATTERY DISCONNECT SWITCH - - - - -	10-52
ENGINE SHUTDOWN SECONDARY SWITCH - - - - -	10-54
ENGINE SYSTEM - - - - -	10-56
LAYOUT DRAWING OF ENGINE SYSTEM - - - - -	10-56
ENGINE CONTROL SYSTEM - - - - -	10-59
AUTOMATIC IDLE STOP SYSTEM - - - - -	10-64
COMPONENT PARTS OF ENGINE SYSTEM - - - - -	10-66
COOLING SYSTEM - - - - -	10-84
LAYOUT DRAWING OF COOLING SYSTEM - - - - -	10-84
RADIATOR FAN CONTROL SYSTEM - - - - -	10-86
COMPONENT PARTS OF COOLING SYSTEM - - - - -	10-88
CONTROL SYSTEM - - - - -	10-103
LAYOUT DRAWING OF CONTROL SYSTEM (For machines equipped with KOMTRAX terminal) - - - - -	10-103
LAYOUT DRAWING OF CONTROL SYSTEM (For machines equipped with gateway function controller) - - -	10-105
RETARDER AND HOIST CONTROL SYSTEM - - - - -	10-107
MACHINE MONITOR SYSTEM - - - - -	10-109
REARVIEW MONITOR SYSTEM - - - - -	10-113
KOMTRAX SYSTEM - - - - -	10-114
PAYLOAD METER SYSTEM - - - - -	10-116
DROWSINESS DETECTION SYSTEM - - - - -	10-128
COMPONENT PARTS OF CONTROL SYSTEM - - - - -	10-133
HYDRAULIC SYSTEM - - - - -	10-194
LAYOUT DRAWING OF HYDRAULIC SYSTEM - - - - -	10-194
COMPONENT PARTS OF HYDRAULIC SYSTEM - - - - -	10-195
POWER TRAIN SYSTEM - - - - -	10-214
LAYOUT DRAWING OF POWER TRAIN SYSTEM - - - - -	10-214
TRANSMISSION CONTROL SYSTEM - - - - -	10-217
GEAR SHIFT CONTROL SYSTEM - - - - -	10-223
DIRECTION CONTROL SYSTEM - - - - -	10-226
KOMATSU TRACTION CONTROL SYSTEM (KTCS) - - - - -	10-227
TRAVEL SPEED LIMITATION SYSTEM - - - - -	10-229
COMPONENT PARTS OF POWER TRAIN SYSTEM - - - - -	10-233
WORK EQUIPMENT SYSTEM - - - - -	10-280
WORK EQUIPMENT CONTROL - - - - -	10-280
LAYOUT DRAWING OF WORK EQUIPMENT CONTROL - - - - -	10-280
HOIST CONTROL - - - - -	10-281
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM - - - - -	10-283
STEERING SYSTEM - - - - -	10-290
LAYOUT DRAWING OF STEERING SYSTEM - - - - -	10-290
STEERING COLUMN - - - - -	10-292
STEERING CONTROL LINKAGE - - - - -	10-293
COMPONENT PARTS OF STEERING SYSTEM - - - - -	10-294
BRAKE SYSTEM - - - - -	10-312
LAYOUT DRAWING OF BRAKE SYSTEM - - - - -	10-312
RETARDER CONTROL - - - - -	10-313
ARSC SYSTEM - - - - -	10-314
COMPONENT PARTS OF BRAKE SYSTEM - - - - -	10-315

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$