

# Shop Manual

DUMP TRUCK

***HD785-8E0***

SERIAL NUMBERS 55001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-26
How to Read the Shop Manual .....	00-26
Safety Notice for Operation .....	00-28
Precautions to Prevent Fire .....	00-36
Procedures If Fire Occurs .....	00-38
Precautions for Disposing of Waste Materials .....	00-39
Engine Technology to Conform Exhaust Gas Emission .....	00-40
Precautions When You Handle Hydraulic Equipment .....	00-41
Precautions When You Disconnect and Connect Pipings .....	00-44
Precautions When You Handle Electrical Equipment .....	00-51
Precautions When You Handle Fuel System Equipment .....	00-53
Precautions When You Handle Intake System Equipment .....	00-54
Practical Use of KOMTRAX .....	00-55
Disconnect and Connect Push-Pull Type Coupler .....	00-56
Precautions for Disconnection and Connection of Connectors .....	00-60
How to Disconnect and Connect Deutsch Connector .....	00-64
How to Disconnect and Connect Slide Lock Type Connector .....	00-65
How to Disconnect and Connect Connector with Lock to Pull .....	00-67
How to Disconnect and Connect Connector with Lock to Push .....	00-68
How to Disconnect and Connect Connector with Housing to Rotate .....	00-70
Standard Tightening Torque Table .....	00-71
Conversion Table .....	00-78
Abbreviation List .....	00-83
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-5
Weight Table .....	01-10
Fuel, Coolant, Lubricant .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
NOx Control System .....	10-7
Function of NOx Control System .....	10-7
Boot-up System .....	10-10
Layout Drawing of Boot-up System .....	10-10
Pre-lubrication System .....	10-13
System Operating Lamp System .....	10-16
Battery Disconnect Switch .....	10-17
Starting Motor Disconnect Switch .....	10-18
Preheating System .....	10-19
Engine Shutdown Secondary Switch .....	10-21
Emergency Engine Stop Switch .....	10-22
Engine System .....	10-23
Layout Drawing of Engine System .....	10-23
Engine Control System .....	10-25
Engine Power Mode Selector System .....	10-27
Automatic Idle Stop System .....	10-28
Component Parts of Engine System .....	10-30
Cooling System .....	10-51
Layout Drawing of Cooling System .....	10-51
Cooling Fan Control System .....	10-53
Component Parts of Cooling System .....	10-58
Control System .....	10-71
Layout Drawing of Control System .....	10-71

Layout Drawing of Control System (Machine with Mobile Communication Terminal).....	10-73
Machine Monitor System.....	10-75
Rearview Monitor System .....	10-77
KOMTRAX Plus System .....	10-78
Payload Meter System .....	10-85
Machine Lock-out System.....	10-93
Automatic Suspension System.....	10-97
Drowsiness Detection System.....	10-100
Component Parts of Control System .....	10-105
Hydraulic System .....	10-187
Layout Drawing of Hydraulic System.....	10-187
Component Parts of Hydraulic System.....	10-188
Power Train System.....	10-211
Layout Drawing of Power Train System .....	10-211
Transmission Control System.....	10-215
Transmission Gear Shift Control System.....	10-217
Transmission Protection Function .....	10-219
Gear Shift Control System.....	10-223
Komatsu Traction Control System (KTCS) .....	10-226
Travel Speed Limitation System.....	10-228
Component Parts of Power Train System.....	10-232
Work Equipment System.....	10-284
Layout Drawing of Work Equipment System .....	10-284
Hoist Control System .....	10-286
Buddy System.....	10-288
Component Parts of Work Equipment System .....	10-290
Steering System.....	10-296
Layout Drawing of Steering System .....	10-296
Secondary Steering System.....	10-297
Steering Column .....	10-298
Steering Linkage.....	10-299
Component Parts of Steering System .....	10-300
Brake System.....	10-315
Layout Drawing of Brake System .....	10-315
Retarder Control .....	10-318
ARSC System.....	10-320
ABS .....	10-322
Component Parts of Brake System .....	10-327
Undercarriage and Frame .....	10-352
Suspension .....	10-352
Front Suspension .....	10-354
Rear Suspension .....	10-355
Front Suspension Cylinder.....	10-356
Rear Suspension Cylinder.....	10-362
Tires.....	10-364
Work Equipment .....	10-365
Structure of Work Equipment .....	10-365
Function of Work Equipment .....	10-366
CAB Related Parts.....	10-367
ROPS CAB .....	10-367
CAB Mount .....	10-368
Lifting System .....	10-369
Power Ladder System.....	10-369
Power Ladder System.....	10-372
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine HD785-8E0.....	20-3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$