

Shop Manual

HYDRAULIC
EXCAVATOR

PC135F-10MO

SERIAL NUMBERS J10001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-15
HOW TO READ THE SHOP MANUAL	00-15
SAFETY NOTICE FOR OPERATION	00-17
PRECAUTIONS TO PREVENT FIRE	00-25
ACTIONS IF FIRE OCCURS	00-26
PRECAUTIONS WHEN YOU DISPOSE OF WASTE MATERIALS	00-27
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-28
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS	00-31
PRECAUTIONS WHEN YOU HANDLE ELECTRICAL EQUIPMENT	00-38
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-40
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-41
PRACTICAL USE OF KOMTRAX	00-42
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-47
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-51
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-52
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-54
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-57
HOW TO READ ELECTRICAL WIRE CODE	00-58
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-62
STANDARD TIGHTENING TORQUE TABLE	00-65
CONVERSION TABLE	00-72
ABBREVIATION LIST	00-77
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-10
FUEL, COOLANT, LUBRICANT	01-12
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
BOOT-UP SYSTEM	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROLLER)	10-6
SYSTEM OPERATING LAMP SYSTEM	10-7
BATTERY DISCONNECT SWITCH	10-10
ENGINE SYSTEM	10-11
LAYOUT DRAWING OF ENGINE SYSTEM	10-11
ENGINE CONTROL SYSTEM	10-12
AUTO-DECELERATION SYSTEM	10-16
ENGINE AUTOMATIC WARM-UP SYSTEM	10-18
OVERHEAT PREVENTION SYSTEM	10-20
TURBOCHARGER PROTECTION SYSTEM	10-22
COMPONENT PARTS OF ENGINE SYSTEM	10-23
COOLING SYSTEM	10-24
LAYOUT DRAWING OF COOLING SYSTEM	10-24
CONTROL SYSTEM	10-26
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-26
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROLLER)	10-28

MACHINE MONITOR SYSTEM	10-30
KOMTRAX SYSTEM.....	10-33
COMPONENT PARTS OF CONTROL SYSTEM.....	10-35
HYDRAULIC SYSTEM.....	10-69
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-69
CLSS	10-71
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-74
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-80
WORK EQUIPMENT SYSTEM	10-167
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-167
STRUCTURE OF VALVE CONTROL	10-170
PPC LOCK SYSTEM	10-171
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-172
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-173
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-175
SWING SYSTEM	10-195
LAYOUT DRAWING OF SWING SYSTEM	10-195
SWING CONTROL SYSTEM DIAGRAM	10-197
COMPONENT PARTS OF SWING SYSTEM.....	10-200
TRAVEL SYSTEM.....	10-211
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-211
SYSTEM DIAGRAM OF TRAVEL CONTROL SYSTEM.....	10-213
COMPONENT PARTS OF TRAVEL SYSTEM	10-217
UNDERCARRIAGE AND FRAME	10-234
LAYOUT DRAWING OF UNDERCARRIAGE	10-234
IDLER CUSHION.....	10-235
WORK EQUIPMENT	10-236
STRUCTURE OF WORK EQUIPMENT	10-236
FUNCTION OF WORK EQUIPMENT	10-237
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-238
BUCKET CLEARANCE ADJUSTMENT SHIM	10-239
CAB AND ITS ATTACHMENTS	10-240
ROPS CAB	10-240
CAB MOUNT	10-242
CAB TIPPING STOPPER	10-244
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC135F-10M0	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-6
STANDARD VALUE TABLE FOR MACHINE: PC135F-10M0.....	20-6
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE	20-20
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-9
ENGINE AND COOLING SYSTEM.....	30-11
TEST ENGINE SPEED	30-11
TEST EXHAUST GAS COLOR.....	30-13
TEST AND ADJUST VALVE CLEARANCE	30-15
TEST COMPRESSION PRESSURE.....	30-18
TEST BLOWBY PRESSURE	30-20
TEST ENGINE OIL PRESSURE	30-22
TEST FUEL PRESSURE	30-24
TEST FUEL RETURN RATE AND LEAKAGE	30-25
BLEED AIR FROM FUEL SYSTEM	30-30
TEST FUEL CIRCUIT FOR LEAKAGE	30-32

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$