

Shop Manual

HYDRAULIC
EXCAVATOR

PC170LC-11

SERIAL NUMBERS

PC170LC-11 F40001 and up

PC170LC-11 35001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-25
HOW TO READ THE SHOP MANUAL	00-25
SAFETY NOTICE FOR OPERATION	00-27
PRECAUTIONS TO PREVENT FIRE	00-35
ACTIONS IF FIRE OCCURS	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-39
PRECAUTIONS FOR DEF	00-40
STORE AdBlue/DEF	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-55
PRACTICAL USE OF KOMTRAX	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-71
HOW TO READ ELECTRICAL WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-76
STANDARD TIGHTENING TORQUE TABLE	00-79
CONVERSION TABLE	00-86
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-36
BOOT-UP SYSTEM	10-45
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-45
SYSTEM OPERATING LAMP SYSTEM	10-47
BATTERY DISCONNECT SWITCH	10-48
ENGINE SYSTEM	10-49
LAYOUT DRAWING OF ENGINE SYSTEM	10-49
ENGINE CONTROL SYSTEM	10-51
AUTO-DECELERATION SYSTEM	10-54
ENGINE AUTOMATIC WARM-UP SYSTEM	10-56
OVERHEAT PREVENTION SYSTEM	10-58

TURBOCHARGER PROTECTION SYSTEM	10-61
AUTOMATIC IDLE STOP SYSTEM	10-63
COMPONENT PARTS OF ENGINE SYSTEM	10-66
COOLING SYSTEM.....	10-82
LAYOUT DRAWING OF COOLING SYSTEM	10-82
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-84
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-86
COMPONENT PARTS OF COOLING SYSTEM.....	10-88
CONTROL SYSTEM.....	10-89
LAYOUT DRAWING OF CONTROL SYSTEM	10-89
MACHINE MONITOR SYSTEM	10-92
KomVision SYSTEM	10-94
KOMTRAX SYSTEM.....	10-98
COMPONENT PARTS OF CONTROL SYSTEM.....	10-99
HYDRAULIC SYSTEM.....	10-137
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-137
CLSS	10-141
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-144
PUMP AND VALVE CONTROL SYSTEM	10-150
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-153
WORK EQUIPMENT SYSTEM	10-241
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-241
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-245
PPC LOCK SYSTEM	10-247
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-248
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-250
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-252
SWING SYSTEM.....	10-285
LAYOUT DRAWING OF SWING SYSTEM	10-285
SWING CONTROL SYSTEM DIAGRAM	10-289
COMPONENT PARTS OF SWING SYSTEM.....	10-292
TRAVEL SYSTEM.....	10-299
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-299
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-302
COMPONENT PARTS OF TRAVEL SYSTEM	10-304
UNDERCARRIAGE AND FRAME.....	10-325
LAYOUT DRAWING OF UNDERCARRIAGE	10-325
WORK EQUIPMENT.....	10-327
STRUCTURE OF WORK EQUIPMENT	10-327
FUNCTION OF WORK EQUIPMENT	10-328
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-329
BUCKET CLEARANCE ADJUSTMENT SHIM	10-330
CAB AND ITS ATTACHMENTS	10-331
ROPS CAB	10-331
CAB MOUNT	10-332
CAB TIPPING STOPPER	10-333
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC170LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC170LC-11	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-26
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$