

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC200 -8**  
**PC200LC-8**

SERIAL NUMBERS    PC200-    C62001    and up  
                          PC200LC-    C62001

**ecot3**

**KOMATSU**



# HYDRAULIC EXCAVATOR

## PC200-8

## PC200LC-8

Machine model	Serial number
---------------	---------------

PC200-8	C62001 and up
PC200LC-8	C62001 and up
PC220-8	-
PC220LC-8	-

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00084-21TH
00 Index and foreword	SEN00085-21
Index	SEN00093-21 ●
Foreword and general information	SEN00094-05
01 Specification	SEN00086-02
Specification and technical data	SEN00095-02
10 Structure, function and maintenance standard	SEN00087-09
Engine related parts	SEN00096-01
Power train	SEN00097-02
Undercarriage and frame	SEN00098-03
Hydraulic system, Part 1	SEN00099-04 ●
Hydraulic system, Part 2	SEN00100-06 ●
Hydraulic system, Part 3	SEN00160-04 ●
Work equipment	SEN00101-01
Cab and its attachments	SEN00102-01
Electrical system	SEN00103-05
20 Standard value table	SEN00088-03
Standard service value table	SEN00227-03
30 Testing and adjusting	SEN00089-09
Testing and adjusting, Part 1	SEN00228-06
Testing and adjusting, Part 2	SEN00229-07
Testing and adjusting, Part 3	SEN00230-04

---

40 Troubleshooting	SEN00090-11
Failure code table and fuse locations	SEN03308-02
General information on troubleshooting	SEN00231-05
Troubleshooting by failure code (Display of code), Part 1	SEN00240-08 ●
Troubleshooting by failure code (Display of code), Part 2	SEN00241-07 ●
Troubleshooting by failure code (Display of code), Part 3	SEN00242-06 ●
Troubleshooting by failure code (Display of code), Part 4	SEN00243-05 ●
Troubleshooting of electrical system (E-mode)	SEN00244-05 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00245-04 ●
Troubleshooting of engine (S-mode)	SEN00246-02
50 Disassembly and assembly	SEN00658-09
General information on disassembly and assembly	SEN00659-06
Engine and cooling system	SEN00660-06 ●
Power train	SEN00661-04 ●
Undercarriage and frame	SEN00662-06 ●
Hydraulic system	SEN00663-05 ●
Work equipment	SEN00664-04 ●
Cab and its attachments	SEN00665-04 ●
Electrical system	SEN00666-06 ●
90 Diagrams and drawings	SEN00092-11
Hydraulic diagrams and drawings	SEN00112-04 ●
Electrical diagrams and drawings	SEN00113-10 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$