

Shop Manual

HYDRAULIC
EXCAVATOR

PC2000-11 EO

SERIAL NUMBERS 30015 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-23
Foreword, Safety, Basic Information.....	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire.....	00-36
Procedures If Fire Occurs	00-38
Precautions When You Discard Waste Materials.....	00-39
Precautions When You Handle Hydraulic Equipment	00-40
Precautions When You Disconnect and Connect Pipings.....	00-43
Precautions When You Handle Electrical Equipment	00-49
Precautions When You Handle Fuel System Equipment	00-51
Precautions When You Handle Intake System Equipment	00-52
Practical Use of KOMTRAX	00-53
Disconnect and Connect Push-Pull Type Coupler	00-54
Precautions for Disconnection and Connection of Connectors	00-58
How to Disconnect and Connect Deutsch Connector	00-62
How to Disconnect and Connect Slide Lock Type Connector	00-63
How to Disconnect and Connect Connector with Lock to Pull	00-65
How to Disconnect and Connect Connector with Lock to Push	00-66
How to Disconnect and Connect Connector with Housing to Rotate	00-68
How to Disconnect and Connect Molex Connector	00-69
How to Read the Codes for Electric Cable	00-70
Explanation of Terms for Maintenance Standard	00-74
Standard Tightening Torque Table.....	00-77
Conversion Table	00-84
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing.....	01-3
Working Range Drawings.....	01-6
Specifications.....	01-8
Weight Table	01-15
Fuel, Coolant, Lubricants (For European Union)	01-22
10 Structure and Function	10-1
Table of Contents	10-2
NOx Control System	10-6
Function of NOx Control System	10-6
Boot-up System	10-9
Layout Drawing of Boot-up System	10-9
System Operating Lamp System.....	10-10
Battery Isolator.....	10-12
Engine System.....	10-14
Layout Drawing of Engine System	10-14
Engine Control System	10-16
Auto-Deceleration System.....	10-18
Automatic Low Idle System	10-20
Engine Automatic Warm-up System.....	10-22
Overheat Prevention System	10-24
Turbocharger Protection System.....	10-26
Multiple Injection Control System	10-28
Component Parts of Engine System	10-29
Cooling System	10-50
Layout Drawing of Cooling System	10-50
Fan Speed Control System of Hydraulic Fan	10-52
Engine Output Control System of Hydraulic Fan	10-54

Fan Reverse Rotation System of Hydraulic Fan.....	10-55
Component Parts of Cooling System	10-56
Control System	10-77
Layout Drawing of Control System	10-77
Machine Monitor System.....	10-79
KOMTRAX Plus System	10-81
Component Parts of Control System	10-86
Hydraulic System	10-137
Layout Drawing of Hydraulic System.....	10-137
Electronic OLSS.....	10-140
Engine and Pump Combined Control System	10-143
Component Parts of Hydraulic System.....	10-147
Work Equipment System.....	10-203
Layout Drawing of Work Equipment System	10-203
Layout Drawing of Work Equipment System (Loading Shovel Specification).....	10-209
Work Equipment System Diagram	10-215
Machine Push-up System	10-216
Heavy Lift System	10-218
Boom Shockless Control Function	10-220
PPC Lock System	10-221
Work Equipment and Travel Automatic Lock System	10-222
Component Parts of Work Equipment System	10-224
Swing System	10-243
Layout Drawing of Swing System.....	10-243
Swing Control System Diagram	10-246
Swing Priority System Diagram.....	10-249
Component Parts of Swing System.....	10-251
Travel System	10-263
Layout Drawing of Travel System.....	10-263
System Diagram of Travel Control System.....	10-267
Travel Straight System Diagram.....	10-268
HIC System.....	10-271
Component Parts of Travel System.....	10-275
Accumulator for HIC System	10-294
Lifting System	10-295
Hydraulically Operated Stairway System.....	10-295
Component Parts of Lifting System	10-297
Service Center System	10-299
Layout Drawing of Service Center System	10-299
Service Center System Diagram	10-301
Component Parts of Service Center System	10-303
Grease Lubrication System	10-308
Grease Lubrication System Diagram.....	10-308
Component Parts of Grease Lubrication System.....	10-312
Undercarriage and Frame	10-318
Layout Drawing of Undercarriage	10-318
Work Equipment	10-319
Structure of Work Equipment	10-319
Structure of Work Equipment (Loading Shovel Specification).....	10-320
Function of Work Equipment	10-321
Work Equipment Clearance Adjustment Shim	10-322
CAB Related Parts	10-323
CAB	10-323
Wiper System.....	10-324
CAB Mount	10-328
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$