

# Shop Manual

HYDRAULIC  
EXCAVATOR

PC200-11

PC80LC-11

D7 & B@ !%%

D7 & \$B< 8 !%%

SERIAL NUMBER G? +\$\$\$%UbX'i d



---

# 00 INDEX AND FOREWORD

---

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD ..... 00-1

    ABBREVIATION LIST ..... 00-20

    FOREWORD, SAFETY, BASIC INFORMATION ..... 00-26

        HOW TO READ THE SHOP MANUAL ..... 00-26

        SAFETY NOTICE FOR OPERATION ..... 00-28

        PRECAUTIONS TO PREVENT FIRE ..... 00-36

        ACTIONS IF FIRE OCCURS ..... 00-38

        PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS ..... 00-39

        ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS ..... 00-40

        PRECAUTIONS FOR DEF ..... 00-41

        STORE AdBlue/DEF ..... 00-42

        PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT ..... 00-43

        PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS ..... 00-46

        PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT ..... 00-53

        PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT ..... 00-55

        PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT ..... 00-56

        PRACTICAL USE OF KOMTRAX ..... 00-57

        DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER ..... 00-58

        PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS ..... 00-62

        METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR ..... 00-66

        METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR ..... 00-67

        METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-69

        METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-70

        METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .  
..... 00-72

        HOW TO READ ELECTRICAL WIRE CODE ..... 00-73

        EXPLANATION OF TERMS FOR MAINTENANCE STANDARD ..... 00-77

        STANDARD TIGHTENING TORQUE TABLE ..... 00-80

        CONVERSION TABLE ..... 00-87

01 SPECIFICATIONS ..... 01-1

    CONTENTS ..... 01-2

    ABBREVIATION LIST ..... 01-3

    SPECIFICATIONS ..... 01-9

        SPECIFICATION DRAWING ..... 01-9

        WORKING RANGE DRAWINGS ..... 01-11

        SPECIFICATIONS ..... 01-12

        WEIGHT TABLE ..... 01-15

        TABLE OF FUEL, COOLANT, AND LUBRICANTS ..... 01-18

10 STRUCTURE AND FUNCTION ..... 10-1

    CONTENTS ..... 10-2

    ABBREVIATION LIST ..... 10-6

    UREA SCR SYSTEM ..... 10-12

        LAYOUT DRAWING OF UREA SCR SYSTEM ..... 10-13

        UREA SCR SYSTEM DIAGRAM ..... 10-18

        FUNCTION OF UREA SCR SYSTEM ..... 10-19

        COMPONENT PARTS OF UREA SCR SYSTEM ..... 10-29

    BOOT-UP SYSTEM ..... 10-38

        LAYOUT DRAWING OF BOOT-UP SYSTEM ..... 10-38

        SYSTEM OPERATING LAMP SYSTEM ..... 10-40

        BATTERY DISCONNECT SWITCH ..... 10-42

    ENGINE SYSTEM ..... 10-43

        LAYOUT DRAWING OF ENGINE SYSTEM ..... 10-43

        ENGINE CONTROL SYSTEM ..... 10-45

        AUTO-DECELERATION SYSTEM ..... 10-48

        ENGINE AUTOMATIC WARM-UP SYSTEM ..... 10-50

        OVERHEAT PREVENTION SYSTEM ..... 10-52

TURBOCHARGER PROTECTION SYSTEM .....	10-55
AUTOMATIC IDLE STOP SYSTEM .....	10-57
COMPONENT PARTS OF ENGINE SYSTEM .....	10-60
COOLING SYSTEM.....	10-78
LAYOUT DRAWING OF COOLING SYSTEM .....	10-78
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH .....	10-80
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-85
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-85
MACHINE MONITOR SYSTEM .....	10-88
KomVision SYSTEM .....	10-89
KOMTRAX SYSTEM.....	10-103
PPC LEVERS .....	10-104
AUTOMATIC GREASE SYSTEM.....	10-106
COMPONENT PARTS OF CONTROL SYSTEM.....	10-121
SENSOR.....	10-156
HYDRAULIC SYSTEM.....	10-160
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-160
CLSS .....	10-166
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-184
PUMP AND VALVE CONTROL SYSTEM .....	10-190
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-193
WORK EQUIPMENT SYSTEM .....	10-278
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-278
STRUCTURE OF VALVE CONTROL.....	10-283
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-285
PPC LOCK SYSTEM .....	10-287
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-288
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-291
TOOL CONTROL SYSTEM .....	10-294
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-296
SWING SYSTEM.....	10-326
LAYOUT DRAWING OF SWING SYSTEM .....	10-326
SWING CONTROL SYSTEM DIAGRAM .....	10-330
COMPONENT PARTS OF SWING SYSTEM.....	10-334
TRAVEL SYSTEM.....	10-348
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-348
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-352
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-354
UNDERCARRIAGE AND FRAME.....	10-375
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-375
WORK EQUIPMENT.....	10-377
STRUCTURE OF WORK EQUIPMENT .....	10-377
FUNCTION OF WORK EQUIPMENT .....	10-378
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-379
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-380
CAB AND ITS ATTACHMENTS .....	10-381
ROPS CAB .....	10-381
CAB MOUNT .....	10-382
CAB TIPPING STOPPER .....	10-383
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC210-11, PC210LC-11, PC210NLC-11, PC230NHD-11.....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$