

Shop Manual

HYDRAULIC
EXCAVATOR

PC210LC-11

SERIAL NUMBERS C80001 and up

ecot3

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-24
HOW TO READ THE SHOP MANUAL.....	00-24
SAFETY NOTICE FOR OPERATION.....	00-26
PRECAUTIONS TO PREVENT FIRE.....	00-34
ACTIONS IF FIRE OCCURS	00-36
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-37
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-38
PRECAUTIONS FOR DEF.....	00-39
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-40
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-43
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-49
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-51
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-52
PRACTICAL USE OF KOMTRAX	00-53
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-54
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-58
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-62
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-63
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-68
HOW TO READ ELECTRICAL WIRE CODE	00-69
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-73
STANDARD TIGHTENING TORQUE TABLE.....	00-76
CONVERSION TABLE	00-83
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-8
SPECIFICATION DRAWING.....	01-8
WORKING RANGE DRAWINGS	01-9
SPECIFICATIONS	01-10
WEIGHT TABLE	01-13
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-15
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM.....	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-34
BOOT-UP SYSTEM	10-43
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-43
SYSTEM OPERATING LAMP SYSTEM	10-45
BATTERY DISCONNECT SWITCH	10-46
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-47
ENGINE CONTROL SYSTEM	10-49
AUTO-DECELERATION SYSTEM.....	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-54
OVERHEAT PREVENTION SYSTEM.....	10-56
TURBOCHARGER PROTECTION SYSTEM.....	10-59

AUTOMATIC IDLE STOP SYSTEM	10-61
COMPONENT PARTS OF ENGINE SYSTEM	10-64
COOLING SYSTEM.....	10-83
LAYOUT DRAWING OF COOLING SYSTEM	10-83
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-85
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-87
COMPONENT PARTS OF COOLING SYSTEM.....	10-89
CONTROL SYSTEM.....	10-90
LAYOUT DRAWING OF CONTROL SYSTEM	10-90
MACHINE MONITOR SYSTEM	10-93
KOMTRAX SYSTEM.....	10-94
COMPONENT PARTS OF CONTROL SYSTEM.....	10-95
HYDRAULIC SYSTEM.....	10-127
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-127
CLSS	10-133
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-153
PUMP AND VALVE CONTROL SYSTEM	10-159
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-162
WORK EQUIPMENT SYSTEM	10-248
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-248
STRUCTURE OF VALVE CONTROL.....	10-253
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-255
PPC LOCK SYSTEM	10-257
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-258
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-260
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-262
SWING SYSTEM.....	10-295
LAYOUT DRAWING OF SWING SYSTEM	10-295
SWING CONTROL SYSTEM DIAGRAM	10-299
COMPONENT PARTS OF SWING SYSTEM.....	10-303
TRAVEL SYSTEM.....	10-318
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-318
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-322
COMPONENT PARTS OF TRAVEL SYSTEM	10-324
UNDERCARRIAGE AND FRAME.....	10-345
LAYOUT DRAWING OF UNDERCARRIAGE	10-345
WORK EQUIPMENT.....	10-347
STRUCTURE OF WORK EQUIPMENT	10-347
FUNCTION OF WORK EQUIPMENT	10-347
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-348
BUCKET CLEARANCE ADJUSTMENT SHIM	10-348
CAB AND ITS ATTACHMENTS	10-349
ROPS CAB	10-349
CAB MOUNT	10-350
CAB TIPPING STOPPER	10-351
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-8
STANDARD VALUE TABLE FOR ENGINE: PC210LC-11	20-8
STANDARD VALUE TABLE FOR MACHINE.....	20-12
STANDARD VALUE TABLE FOR MACHINE: PC210LC-11	20-12
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-25
STANDARD VALUE TABLE FOR ELECTRICAL	20-29
STANDARD VALUE TABLE FOR ELECTRICAL	20-29
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$