

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210LCI-11

SERIAL NUMBERS **500470 and up**
 K75001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-23
FOREWORD, SAFETY, BASIC INFORMATION	00-29
HOW TO READ THE SHOP MANUAL	00-29
SAFETY NOTICE FOR OPERATION	00-31
PRECAUTIONS TO PREVENT FIRE	00-39
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-43
PRECAUTIONS FOR DEF	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-80
STANDARD TIGHTENING TORQUE TABLE	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-18
FUNCTION OF UREA SCR SYSTEM	10-19
COMPONENT PARTS OF UREA SCR SYSTEM	10-29
BOOT-UP SYSTEM	10-38
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-38
SYSTEM OPERATING LAMP SYSTEM	10-40
BATTERY DISCONNECT SWITCH	10-42
ENGINE SYSTEM	10-43
LAYOUT DRAWING OF ENGINE SYSTEM	10-43
ENGINE CONTROL SYSTEM	10-45
AUTO-DECELERATION SYSTEM	10-48
ENGINE AUTOMATIC WARM-UP SYSTEM	10-50
OVERHEAT PREVENTION SYSTEM	10-52

TURBOCHARGER PROTECTION SYSTEM	10-55
AUTOMATIC IDLE STOP SYSTEM	10-57
COMPONENT PARTS OF ENGINE SYSTEM	10-60
COOLING SYSTEM.....	10-77
LAYOUT DRAWING OF COOLING SYSTEM	10-77
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-79
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-81
COMPONENT PARTS OF COOLING SYSTEM.....	10-83
CONTROL SYSTEM.....	10-84
LAYOUT DRAWING OF CONTROL SYSTEM	10-84
MACHINE MONITOR SYSTEM	10-87
KomVision SYSTEM	10-89
KOMTRAX SYSTEM.....	10-93
PPC LEVERS	10-94
AUTOMATIC GREASE SYSTEM.....	10-96
COMPONENT PARTS OF CONTROL SYSTEM.....	10-111
SENSOR.....	10-146
HYDRAULIC SYSTEM.....	10-150
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-150
CLSS	10-156
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-175
PUMP AND VALVE CONTROL SYSTEM	10-181
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-184
WORK EQUIPMENT SYSTEM	10-269
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-269
STRUCTURE OF VALVE CONTROL.....	10-274
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-276
PPC LOCK SYSTEM	10-278
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-279
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-282
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-285
ICT SYSTEM	10-310
LAYOUT DRAWING OF ICT SYSTEM.....	10-310
ICT CONTROL SYSTEM DIAGRAM.....	10-314
BUCKET EDGE POSITION DETECTION SYSTEM.....	10-315
THE INTELLIGENT MACHINE CONTROL SYSTEM.....	10-317
CUSHION SYSTEM FOR ARM IN END.....	10-338
BOOM SECONDARY DRIVE SWITCH.....	10-340
COMPONENT PARTS OF ICT SYSTEM	10-341
SWING SYSTEM.....	10-371
LAYOUT DRAWING OF SWING SYSTEM	10-371
SWING CONTROL SYSTEM DIAGRAM	10-375
COMPONENT PARTS OF SWING SYSTEM.....	10-379
TRAVEL SYSTEM.....	10-393
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-393
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-397
COMPONENT PARTS OF TRAVEL SYSTEM	10-399
UNDERCARRIAGE AND FRAME.....	10-420
LAYOUT DRAWING OF UNDERCARRIAGE	10-420
WORK EQUIPMENT.....	10-422
STRUCTURE OF WORK EQUIPMENT	10-422
FUNCTION OF WORK EQUIPMENT	10-423
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-424
BUCKET CLEARANCE ADJUSTMENT SHIM	10-425
CAB AND ITS ATTACHMENTS	10-426
ROPS CAB	10-426
CAB MOUNT	10-427
CAB TIPPING STOPPER	10-428

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$