

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210LCI-11E0

SERIAL NUMBERS K77001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-24
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL.....	00-27
SAFETY NOTICE FOR OPERATION.....	00-29
PRECAUTIONS TO PREVENT FIRE.....	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-41
PRECAUTIONS FOR DEF.....	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-78
STANDARD TIGHTENING TORQUE TABLE.....	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING.....	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-9
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-11
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM.....	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM	10-7
UREA SCR SYSTEM DIAGRAM	10-12
FUNCTION OF UREA SCR SYSTEM.....	10-13
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-23
BOOT-UP SYSTEM	10-32
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-32
SYSTEM OPERATING LAMP SYSTEM	10-34
BATTERY DISCONNECT SWITCH	10-36
ENGINE SYSTEM	10-37
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-37
ENGINE CONTROL SYSTEM	10-39
AUTO-DECELERATION SYSTEM.....	10-42
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-44
OVERHEAT PREVENTION SYSTEM.....	10-46
TURBOCHARGER PROTECTION SYSTEM.....	10-49
AUTOMATIC IDLE STOP SYSTEM	10-51

COMPONENT PARTS OF ENGINE SYSTEM	10-54
COOLING SYSTEM.....	10-72
LAYOUT DRAWING OF COOLING SYSTEM	10-72
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-74
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-76
COMPONENT PARTS OF COOLING SYSTEM.....	10-78
CONTROL SYSTEM.....	10-79
LAYOUT DRAWING OF CONTROL SYSTEM PARTS	10-79
MACHINE MONITOR SYSTEM	10-82
KomVision SYSTEM	10-84
KOMTRAX SYSTEM.....	10-88
PPC LEVERS	10-89
AUTOMATIC GREASE SYSTEM	10-91
COMPONENT PARTS OF CONTROL SYSTEM.....	10-106
SENSOR.....	10-144
STRUCTURE OF ENGINE OIL PRESSURE SWITCH	10-144
FUNCTION OF ENGINE OIL PRESSURE SWITCH	10-145
STRUCTURE OF QUICK COUPLER LOW PRESSURE WARNING SWITCH	10-146
SPECIFICATIONS - QUICK COUPLER LOW PRESSURE WARNING SWITCH.....	10-147
FUNCTION OF QUICK COUPLER LOW PRESSURE WARNING SWITCH	10-148
STRUCTURE OF AUTO GREASE PRESSURE SWITCH	10-149
SPECIFICATIONS - AUTO GREASE PRESSURE SWITCH.....	10-150
FUNCTION OF AUTO GREASE PRESSURE SWITCH.....	10-151
STRUCTURE OF OVERLOAD CAUTION SENSOR.....	10-152
SPECIFICATIONS - OVERLOAD CAUTION SENSOR.....	10-153
FUNCTION OF OVERLOAD CAUTION SENSOR	10-154
HYDRAULIC SYSTEM.....	10-155
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-155
CLSS	10-161
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-180
PUMP AND VALVE CONTROL SYSTEM	10-186
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-189
WORK EQUIPMENT SYSTEM	10-274
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-274
STRUCTURE OF VALVE CONTROL	10-279
BUCKET CONTROL SYSTEM	10-281
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-282
PPC LOCK SYSTEM	10-284
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-285
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-287
TOOL CONTROL SYSTEM	10-289
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-291
ICT SYSTEM	10-322
LAYOUT DRAWING OF ICT SYSTEM.....	10-322
ICT CONTROL SYSTEM DIAGRAM.....	10-326
BUCKET EDGE POSITION DETECTION SYSTEM.....	10-327
THE INTELLIGENT MACHINE CONTROL SYSTEM.....	10-329
CUSHION SYSTEM FOR ARM IN END.....	10-355
BOOM SECONDARY DRIVE SWITCH.....	10-357
COMPONENT PARTS OF ICT SYSTEM	10-358
SWING SYSTEM	10-387
LAYOUT DRAWING OF SWING SYSTEM	10-387
SWING CONTROL SYSTEM DIAGRAM	10-391
COMPONENT PARTS OF SWING SYSTEM.....	10-395
TRAVEL SYSTEM.....	10-409
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-409
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-413
COMPONENT PARTS OF TRAVEL SYSTEM	10-415

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$