

Shop Manual

HYDRAULIC
EXCAVATOR

PC210i-10

PC210LCi-10

SERIAL NUMBERS 451080 and up
 K65001 and up

KOMATSU

HYDRAULIC EXCAVATOR

PC210I-10 PC210LCi-10

Model	Serial Number
-------	---------------

PC210i-10	451080 and up
PC210LCi-10	451080 and up

PC210i-10	K65001 and up
PC210LCi-10	K65001 and up

00 Index and foreword

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-16
Important safety notice	00-16
How to read the shop manual	00-23
Explanation of terms for maintenance standard	00-25
Handling equipment of fuel system devices	00-27
Handling of intake system parts	00-28
Handling of hydraulic equipment	00-29
Method of disconnecting and connecting of push-pull type coupler	00-31
Handling of electrical equipment	00-34
How to read electric wire code	00-42
Precautions when performing operation	00-45
Practical use of KOMTRAX	00-50
Standard tightening torque table	00-51
List of abbreviation	00-57
Conversion table	00-62
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Working range drawings	01-5
Specifications	01-7
Weight table	01-13
Table of fuel, coolant, and lubricants	01-17
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
KVTG	10-5
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-16
EGR cooler	10-18
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Cooling system	10-27
Power train	10-29
Power train system	10-29
Swing circle	10-31
Swing machinery	10-32
Final drive	10-34
Undercarriage and frame	10-36
Track frame and idler cushion	10-36
Hydraulic system	10-38
Hydraulic component layout	10-38
Valve control	10-40
Hydraulic tank	10-42
CLSS	10-44
Main pump	10-49
Control valve	10-74
Swing motor	10-129
Travel motor	10-140
PPC valve	10-153
Solenoid valve	10-174
Attachment circuit selector valve (for high pressure circuit)	10-177

Attachment circuit selector valve (for low pressure circuit).....	10-179
Anti-drop valve.....	10-182
Center swivel joint.....	10-186
Accumulator.....	10-188
ATT EPC valve assembly.....	10-189
Return oil filter.....	10-191
Quick coupler control valve.....	10-192
EPC valve for intelligent Machine Control.....	10-195
Work equipment.....	10-200
Work equipment.....	10-200
Work equipment shim.....	10-201
Bucket play adjustment shim.....	10-202
Cab and its attachments.....	10-203
Cab mount and cab tipping stopper.....	10-203
ROPS cab.....	10-204
Electrical system.....	10-205
Electrical control system.....	10-205
Machine monitor system.....	10-266
KOMTRAX system.....	10-287
Sensor.....	10-289
Auto grease system.....	10-320
20 Standard value tables.....	20-1
Table of contents.....	20-2
Standard service value table.....	20-3
Standard value table for engine.....	20-3
Standard value table for machine.....	20-5
Standard value table for electrical system.....	20-23
30 Testing and adjusting.....	30-1
Table of contents.....	30-2
Related information on testing and adjusting.....	30-3
Tools for testing and adjusting.....	30-3
Sketch of tools for testing and adjusting.....	30-8
Engine and cooling system.....	30-9
Testing engine speed.....	30-9
Testing boost pressure.....	30-10
Testing exhaust gas color.....	30-12
Testing and adjusting valve clearance.....	30-14
Testing compression pressure.....	30-17
Testing blowby pressure.....	30-21
Testing engine oil pressure.....	30-22
Testing EGR valve and KVG T oil pressures.....	30-23
Measuring fuel pressure.....	30-24
Measuring fuel delivery, return and leakage.....	30-30
Bleeding air from fuel system.....	30-35
Testing fuel circuit for leakage.....	30-37
Handling cylinder cutout mode operation.....	30-38
Handling no-injection cranking operation.....	30-39
Testing and adjusting air conditioner compressor belt tension.....	30-40
Replacing fan belt.....	30-42
Power train.....	30-43
Testing swing circle bearing clearance.....	30-43
Undercarriage and frame.....	30-44
Testing and adjusting track tension.....	30-44
Hydraulic system.....	30-45
Releasing remaining pressure from hydraulic circuit.....	30-45
Testing and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-49
Testing oil pressure of control circuit.....	30-53
Testing and adjusting oil pressure in pump PC control circuit.....	30-56
Testing and adjusting oil pressure in pump LS control circuit.....	30-59

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$