

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**PC228USLC-11**

**SERIAL NUMBERS**

**5002 and up**

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

**INDEX**

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD ..... 00-1

    ABBREVIATION LIST ..... 00-19

    FOREWORD, SAFETY, BASIC INFORMATION ..... 00-25

        HOW TO READ THE SHOP MANUAL ..... 00-25

        SAFETY NOTICE FOR OPERATION ..... 00-27

        PRECAUTIONS TO PREVENT FIRE ..... 00-35

        ACTIONS IF FIRE OCCURS ..... 00-37

        PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS ..... 00-38

        ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS ..... 00-39

        PRECAUTIONS FOR DEF ..... 00-40

        PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT ..... 00-41

        PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS ..... 00-44

        PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT ..... 00-51

        PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT ..... 00-53

        PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT ..... 00-54

        PRACTICAL USE OF KOMTRAX ..... 00-55

        DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER ..... 00-56

        PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS ..... 00-60

        METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR ..... 00-64

        METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR ..... 00-65

        METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-67

        METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-68

        METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .  
..... 00-70

        HOW TO READ ELECTRICAL WIRE CODE ..... 00-71

        EXPLANATION OF TERMS FOR MAINTENANCE STANDARD ..... 00-75

        STANDARD TIGHTENING TORQUE TABLE ..... 00-78

        CONVERSION TABLE ..... 00-85

01 SPECIFICATIONS ..... 01-1

    CONTENTS ..... 01-2

    ABBREVIATION LIST ..... 01-3

    SPECIFICATIONS ..... 01-9

        SPECIFICATION DRAWING ..... 01-9

        WORKING RANGE DRAWINGS ..... 01-11

        SPECIFICATIONS ..... 01-12

        WEIGHT TABLE ..... 01-15

        FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION) ..... 01-17

10 STRUCTURE AND FUNCTION ..... 10-1

    CONTENTS ..... 10-2

    ABBREVIATION LIST ..... 10-5

    UREA SCR SYSTEM ..... 10-11

        LAYOUT DRAWING OF UREA SCR SYSTEM ..... 10-11

        UREA SCR SYSTEM DIAGRAM ..... 10-16

        FUNCTION OF UREA SCR SYSTEM ..... 10-17

        COMPONENT PARTS OF UREA SCR SYSTEM ..... 10-27

    BOOT-UP SYSTEM ..... 10-36

        LAYOUT DRAWING OF BOOT-UP SYSTEM ..... 10-36

        SYSTEM OPERATING LAMP SYSTEM ..... 10-38

        BATTERY DISCONNECT SWITCH ..... 10-39

    ENGINE SYSTEM ..... 10-40

        LAYOUT DRAWING OF ENGINE SYSTEM ..... 10-40

        ENGINE CONTROL SYSTEM ..... 10-42

        AUTO-DECELERATION SYSTEM ..... 10-45

        ENGINE AUTOMATIC WARM-UP SYSTEM ..... 10-47

        OVERHEAT PREVENTION SYSTEM ..... 10-49

        TURBOCHARGER PROTECTION SYSTEM ..... 10-52

AUTOMATIC IDLE STOP SYSTEM .....	10-54
COMPONENT PARTS OF ENGINE SYSTEM .....	10-57
COOLING SYSTEM.....	10-74
LAYOUT DRAWING OF COOLING SYSTEM .....	10-74
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH .....	10-76
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-78
COMPONENT PARTS OF COOLING SYSTEM.....	10-80
CONTROL SYSTEM.....	10-81
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-81
MACHINE MONITOR SYSTEM .....	10-84
KomVision SYSTEM .....	10-86
KOMTRAX SYSTEM.....	10-90
COMPONENT PARTS OF CONTROL SYSTEM.....	10-91
HYDRAULIC SYSTEM.....	10-125
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-125
CLSS .....	10-129
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-148
PUMP AND VALVE CONTROL SYSTEM .....	10-154
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-157
WORK EQUIPMENT SYSTEM .....	10-242
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-242
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-247
PPC LOCK SYSTEM .....	10-249
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-250
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-253
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-255
SWING SYSTEM.....	10-286
LAYOUT DRAWING OF SWING SYSTEM .....	10-286
SWING CONTROL SYSTEM DIAGRAM .....	10-290
COMPONENT PARTS OF SWING SYSTEM.....	10-294
TRAVEL SYSTEM.....	10-308
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-308
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-312
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-314
UNDERCARRIAGE AND FRAME.....	10-335
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-335
WORK EQUIPMENT.....	10-337
STRUCTURE OF WORK EQUIPMENT .....	10-337
FUNCTION OF WORK EQUIPMENT .....	10-338
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-339
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-340
CAB AND ITS ATTACHMENTS .....	10-341
ROPS CAB .....	10-341
CAB MOUNT .....	10-342
CAB TIPPING STOPPER .....	10-343
TAKE WIRING HARNESS OUT OF CAB.....	10-344
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC228USLC-11 .....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14
STANDARD VALUE TABLE FOR MACHINE: PC228USLC-11.....	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-28
30 TESTING AND ADJUSTING.....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$