

Shop Manual

HYDRAULIC
EXCAVATOR

PC240LC-11

SERIAL NUMBERS C70001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-17
FUNCTION OF UREA SCR SYSTEM	10-18
COMPONENT PARTS OF UREA SCR SYSTEM	10-34
BOOT-UP SYSTEM	10-43
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-43
SYSTEM OPERATING LAMP SYSTEM	10-45
BATTERY DISCONNECT SWITCH	10-46
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM	10-47
ENGINE CONTROL SYSTEM	10-49
AUTO-DECELERATION SYSTEM	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM	10-54
OVERHEAT PREVENTION SYSTEM	10-56

TURBOCHARGER PROTECTION SYSTEM	10-59
AUTOMATIC IDLE STOP SYSTEM	10-61
COMPONENT PARTS OF ENGINE SYSTEM	10-64
COOLING SYSTEM.....	10-82
LAYOUT DRAWING OF COOLING SYSTEM	10-82
CONTROL SYSTEM.....	10-84
LAYOUT DRAWING OF CONTROL SYSTEM PARTS	10-84
MACHINE MONITOR SYSTEM	10-87
KomVision SYSTEM	10-89
KOMTRAX SYSTEM.....	10-93
COMPONENT PARTS OF CONTROL SYSTEM.....	10-94
HYDRAULIC SYSTEM.....	10-131
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-131
CLSS	10-137
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-159
PUMP AND VALVE CONTROL SYSTEM	10-165
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-168
WORK EQUIPMENT SYSTEM	10-257
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-257
STRUCTURE OF VALVE CONTROL.....	10-262
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-264
PPC LOCK SYSTEM	10-266
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-267
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-269
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-271
SWING SYSTEM.....	10-303
LAYOUT DRAWING OF SWING SYSTEM	10-303
SWING CONTROL SYSTEM DIAGRAM	10-307
COMPONENT PARTS OF SWING SYSTEM.....	10-311
TRAVEL SYSTEM.....	10-326
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-326
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-330
COMPONENT PARTS OF TRAVEL SYSTEM	10-332
UNDERCARRIAGE AND FRAME.....	10-353
LAYOUT DRAWING OF UNDERCARRIAGE	10-353
WORK EQUIPMENT.....	10-355
STRUCTURE OF WORK EQUIPMENT	10-355
FUNCTION OF WORK EQUIPMENT	10-356
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-357
BUCKET CLEARANCE ADJUSTMENT SHIM	10-358
CAB AND ITS ATTACHMENTS	10-359
ROPS CAB	10-359
CAB MOUNT	10-360
CAB TIPPING STOPPER	10-361
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC240LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC240LC-11	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-26
STANDARD VALUE TABLE FOR ELECTRICAL	20-30
STANDARD VALUE TABLE FOR ELECTRICAL	20-30
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$