

Shop Manual

**HYDRAULIC
EXCAVATOR**

**PC290LCi-11E0
PC290NLCi-11E0**

SERIAL NUMBERS 35152 and up
 K77001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-24
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL.....	00-27
SAFETY NOTICE FOR OPERATION.....	00-29
PRECAUTIONS TO PREVENT FIRE.....	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-43
PRECAUTIONS FOR DEF.....	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-49
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS	00-56
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-63
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-65
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-66
PRACTICAL USE OF KOMTRAX	00-67
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-68
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-72
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-76
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-77
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-79
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-80
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-82
HOW TO READ ELECTRICAL WIRE CODE	00-83
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-87
STANDARD TIGHTENING TORQUE TABLE.....	00-90
CONVERSION TABLE	00-97
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING.....	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-9
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-11
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM.....	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM	10-7
UREA SCR SYSTEM DIAGRAM	10-12
FUNCTION OF UREA SCR SYSTEM.....	10-13
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-23
BOOT-UP SYSTEM	10-32
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-32
SYSTEM OPERATING LAMP SYSTEM	10-34
BATTERY DISCONNECT SWITCH	10-36
ENGINE SYSTEM	10-37
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-37
ENGINE CONTROL SYSTEM	10-39
AUTO-DECELERATION SYSTEM.....	10-42
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-44

OVERHEAT PREVENTION SYSTEM	10-46
TURBOCHARGER PROTECTION SYSTEM	10-49
AUTOMATIC IDLE STOP SYSTEM	10-51
COMPONENT PARTS OF ENGINE SYSTEM	10-54
COOLING SYSTEM.....	10-72
LAYOUT DRAWING OF COOLING SYSTEM	10-72
CONTROL SYSTEM.....	10-74
LAYOUT DRAWING OF CONTROL SYSTEM PARTS	10-74
MACHINE MONITOR SYSTEM	10-77
KomVision SYSTEM	10-79
KOMTRAX SYSTEM.....	10-83
PPC LEVERS	10-84
AUTOMATIC GREASE SYSTEM	10-86
COMPONENT PARTS OF CONTROL SYSTEM.....	10-98
SENSOR.....	10-136
STRUCTURE OF ENGINE OIL PRESSURE SWITCH	10-136
FUNCTION OF ENGINE OIL PRESSURE SWITCH	10-137
STRUCTURE OF QUICK COUPLER LOW PRESSURE WARNING SWITCH	10-138
SPECIFICATIONS - QUICK COUPLER LOW PRESSURE WARNING SWITCH.....	10-139
FUNCTION OF QUICK COUPLER LOW PRESSURE WARNING SWITCH	10-140
STRUCTURE OF AUTO GREASE PRESSURE SWITCH	10-141
SPECIFICATIONS - AUTO GREASE PRESSURE SWITCH.....	10-142
FUNCTION OF AUTO GREASE PRESSURE SWITCH.....	10-143
STRUCTURE OF OVERLOAD CAUTION SENSOR.....	10-144
SPECIFICATIONS - OVERLOAD CAUTION SENSOR.....	10-145
FUNCTION OF OVERLOAD CAUTION SENSOR	10-146
HYDRAULIC SYSTEM.....	10-147
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-147
CLSS	10-153
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-172
PUMP AND VALVE CONTROL SYSTEM	10-178
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-181
WORK EQUIPMENT SYSTEM	10-258
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-258
STRUCTURE OF VALVE CONTROL	10-263
BUCKET CONTROL SYSTEM	10-265
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-266
PPC LOCK SYSTEM	10-268
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-269
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-271
TOOL CONTROL SYSTEM	10-273
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-275
ICT SYSTEM	10-306
LAYOUT DRAWING OF ICT SYSTEM.....	10-306
ICT CONTROL SYSTEM DIAGRAM.....	10-310
BUCKET EDGE POSITION DETECTION SYSTEM.....	10-311
THE INTELLIGENT MACHINE CONTROL SYSTEM.....	10-313
CUSHION SYSTEM FOR ARM IN END.....	10-339
BOOM SECONDARY DRIVE SWITCH.....	10-341
COMPONENT PARTS OF ICT SYSTEM	10-342
SWING SYSTEM	10-371
LAYOUT DRAWING OF SWING SYSTEM	10-371
SWING CONTROL SYSTEM DIAGRAM	10-374
COMPONENT PARTS OF SWING SYSTEM.....	10-378
TRAVEL SYSTEM.....	10-393
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-393
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-397
COMPONENT PARTS OF TRAVEL SYSTEM	10-399

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$