

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**PC360 -11**

**PC360LC -11**

**PC360NLC-11**

**PC390HRD-11**

SERIAL NUMBERS K70001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-20
FOREWORD, SAFETY, BASIC INFORMATION .....	00-26
HOW TO READ THE SHOP MANUAL .....	00-26
SAFETY NOTICE FOR OPERATION .....	00-28
PRECAUTIONS TO PREVENT FIRE .....	00-36
ACTIONS IF FIRE OCCURS .....	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-40
PRECAUTIONS FOR DEF .....	00-41
STORE AdBlue/DEF .....	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-56
PRACTICAL USE OF KOMTRAX .....	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE .....	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-77
STANDARD TIGHTENING TORQUE TABLE .....	00-80
CONVERSION TABLE .....	00-87
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
SPECIFICATIONS - PC390HRD-11 .....	01-18
SPECIFICATION DRAWING .....	01-18
SPECIFICATIONS .....	01-20
WEIGHT TABLE .....	01-22
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-16
FUNCTION OF UREA SCR SYSTEM .....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-33
BOOT-UP SYSTEM .....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-42
SYSTEM OPERATING LAMP SYSTEM .....	10-44
BATTERY DISCONNECT SWITCH .....	10-46
ENGINE SYSTEM .....	10-47
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-47

ENGINE CONTROL SYSTEM .....	10-49
AUTO-DECELERATION SYSTEM .....	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-54
OVERHEAT PREVENTION SYSTEM .....	10-56
TURBOCHARGER PROTECTION SYSTEM .....	10-58
AUTOMATIC IDLE STOP SYSTEM .....	10-60
COMPONENT PARTS OF ENGINE SYSTEM .....	10-63
COOLING SYSTEM.....	10-79
LAYOUT DRAWING OF COOLING SYSTEM .....	10-79
CONTROL SYSTEM.....	10-81
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-81
MACHINE MONITOR SYSTEM .....	10-84
KomVision SYSTEM .....	10-86
KOMTRAX SYSTEM.....	10-90
PPC LEVERS .....	10-91
AUTOMATIC GREASE SYSTEM.....	10-93
COMPONENT PARTS OF CONTROL SYSTEM.....	10-108
SENSOR.....	10-147
HYDRAULIC SYSTEM.....	10-159
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-159
CLSS .....	10-162
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-181
PUMP AND VALVE CONTROL SYSTEM .....	10-187
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-190
HYDRAULIC SYSTEM - PC390HRD-11 .....	10-277
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-277
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-280
WORK EQUIPMENT SYSTEM .....	10-297
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-297
STRUCTURE OF VALVE CONTROL.....	10-303
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-305
MACHINE PUSH-UP SYSTEM.....	10-307
PPC LOCK SYSTEM .....	10-309
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-310
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-312
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-314
WORK EQUIPMENT SYSTEM - PC390HRD-11.....	10-334
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-334
SWING SYSTEM.....	10-338
LAYOUT DRAWING OF SWING SYSTEM .....	10-338
SWING CONTROL SYSTEM DIAGRAM .....	10-341
COMPONENT PARTS OF SWING SYSTEM.....	10-345
TRAVEL SYSTEM.....	10-359
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-359
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-363
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-365
UNDERCARRIAGE AND FRAME.....	10-385
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-385
WORK EQUIPMENT.....	10-387
STRUCTURE OF WORK EQUIPMENT .....	10-387
FUNCTION OF WORK EQUIPMENT .....	10-388
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-389
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-390
CAB AND ITS ATTACHMENTS .....	10-391
ROPS CAB .....	10-391
CAB MOUNT .....	10-392
CAB TIPPING STOPPER .....	10-393
TILTING CAB SYSTEM.....	10-394

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$