

Shop Manual

HYDRAULIC
EXCAVATOR

PC360LC -10

PC360NLC-10

SERIAL NUMBERS 70001 and up
K60001

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC360LC-10
PC360NLC-10

Model Serial Number

PC360LC-10 70001 and up,
PC360NLC-10 K60001 and up

00 Index and foreword

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts	00-26
Handling of hydraulic equipment	00-27
Method of disconnecting and connecting of push-pull type coupler	00-29
Handling of electrical equipment	00-32
How to read electric wire code	00-40
Precautions when performing operation	00-43
Practical use of KOMTRAX	00-47
Standard tightening torque table	00-48
List of abbreviation	00-52
Conversion table	00-57
01 Specifications	01-1
Table of contents	01-2
Specifications	01-3
Specification drawings	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-9
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
Cooling system	10-5
Power train	10-7
Power train	10-7
Swing circle	10-8
Swing machinery	10-9
Final drive	10-11
Undercarriage and frame	10-13
Track frame and idler cushion	10-13
Hydraulic system	10-15
Hydraulic component layout	10-15
Valve control	10-17
Hydraulic tank	10-19
CLSS	10-21
Main pump	10-26
Control valve	10-50
Swing motor	10-105
Travel motor	10-116
PPC valve	10-131
Solenoid valve	10-152
Attachment circuit selector valve	10-156
Variable pressure compensation valve	10-159
Center swivel joint	10-161
Accumulator	10-163
Hydraulic drift prevention valve	10-164
ATT EPC valve assembly	10-169
Return oil filter	10-171
Quick coupler control valve	10-172
Work equipment	10-175

Work equipment shims	10-175
Bucket play adjustment shim.....	10-177
Cab and its attachments	10-178
Cab mount and cab tipping stopper	10-178
ROPS cab	10-179
Electrical system	10-180
Electrical control system	10-180
Machine monitor system.....	10-225
KOMTRAX system.....	10-244
Sensor	10-247
PPC levers	10-267
Auto grease system	10-269
20 Standard value table	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine related parts	20-3
Standard value table for machine	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
General information on testing and adjusting.....	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-8
Engine and cooling system.....	30-10
Checking engine speed	30-10
Measuring boost pressure.....	30-11
Measuring exhaust gas color.....	30-14
Measuring and adjusting valve clearance	30-16
Measuring compression pressure.....	30-20
Measuring blowby pressure	30-28
Measuring engine oil pressure.....	30-30
Measuring EGR valve and KVGT oil pressure	30-32
Measuring fuel pressure	30-33
Measuring fuel delivery, return and leakage	30-39
Bleeding air from fuel system	30-45
Checking fuel circuit for leakage	30-46
Handling cylinder cutout mode operation.....	30-47
Handling no injection cranking operation	30-48
Checking and adjusting air conditioner compressor belt tension	30-49
Replacing fan belt	30-50
Replacing alternator belt	30-51
Power train.....	30-52
Testing swing circle bearing clearance	30-52
Undercarriage and frame.....	30-53
Testing and adjusting track shoe tension	30-53
Hydraulic system	30-54
Releasing remaining pressure from hydraulic circuit.....	30-54
Measuring and adjusting oil pressure in work equipment, swing and travel circuits.....	30-55
Measuring oil pressure in control circuit.....	30-61
Measuring and adjusting oil pressure in pump PC control circuit.....	30-64
Measuring and adjusting oil pressure in pump LS control circuit	30-74
Measuring solenoid valve output pressure.....	30-89
Measuring PPC valve output pressure	30-93
Adjusting play of work equipment and swing PPC valves.....	30-95
Measuring and adjusting quick coupler control valve output pressure	30-96
Testing pump swash plate sensor	30-97
Isolating the parts causing hydraulic drift in work equipment.....	30-98
Measuring oil leakage.....	30-99
Bleeding air from hydraulic circuit	30-101
Cab and its attachments	30-104

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$