

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC360LC-11E0

PC360NLC-11E0

PC390HRD-11E0

SERIAL NUMBERS **PC360LC-11E0** **K75001 ~ K75200**
PC360NLC-11E0 **K75001 ~ K75197**
PC390HRD-11E0 **K75001 ~ K75355**

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL.....	00-27
SAFETY NOTICE FOR OPERATION.....	00-29
PRECAUTIONS TO PREVENT FIRE.....	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-41
METHOD FOR CHECKING ENGINE TYPE	00-42
PRECAUTIONS FOR DEF.....	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-80
STANDARD TIGHTENING TORQUE TABLE.....	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
SPECIFICATIONS - PC390HRD-11E0.....	01-18
SPECIFICATION DRAWING.....	01-18
SPECIFICATIONS	01-21
WEIGHT TABLE	01-23
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-38
BOOT-UP SYSTEM.....	10-47
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-47
SYSTEM OPERATING LAMP SYSTEM	10-49
BATTERY DISCONNECT SWITCH	10-51
ENGINE SYSTEM	10-52

LAYOUT DRAWING OF ENGINE SYSTEM	10-52
ENGINE CONTROL SYSTEM	10-54
AUTO-DECELERATION SYSTEM	10-57
ENGINE AUTOMATIC WARM-UP SYSTEM	10-59
OVERHEAT PREVENTION SYSTEM	10-61
TURBOCHARGER PROTECTION SYSTEM	10-63
AUTOMATIC IDLE STOP SYSTEM	10-65
AUTOMATIC IDLE STOP SYSTEM	10-68
COMPONENT PARTS OF ENGINE SYSTEM	10-71
COOLING SYSTEM.....	10-87
LAYOUT DRAWING OF COOLING SYSTEM	10-87
CONTROL SYSTEM.....	10-89
LAYOUT DRAWING OF CONTROL SYSTEM	10-89
MACHINE MONITOR SYSTEM	10-92
KomVision SYSTEM	10-94
KOMTRAX SYSTEM.....	10-98
PPC LEVERS	10-99
AUTOMATIC GREASE SYSTEM.....	10-101
COMPONENT PARTS OF CONTROL SYSTEM.....	10-115
SENSOR.....	10-151
HYDRAULIC SYSTEM.....	10-163
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-163
CLSS	10-166
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-186
PUMP AND VALVE CONTROL SYSTEM	10-192
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-195
HYDRAULIC SYSTEM - PC390HRD-11E0	10-282
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-282
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-285
WORK EQUIPMENT SYSTEM	10-302
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-302
STRUCTURE OF VALVE CONTROL	10-308
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-310
MACHINE PUSH-UP SYSTEM.....	10-312
PPC LOCK SYSTEM	10-314
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-315
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-317
TOOL CONTROL SYSTEM	10-319
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-321
WORK EQUIPMENT SYSTEM - PC390HRD-11E0	10-347
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-347
SWING SYSTEM.....	10-351
LAYOUT DRAWING OF SWING SYSTEM	10-351
SWING CONTROL SYSTEM DIAGRAM	10-354
COMPONENT PARTS OF SWING SYSTEM.....	10-358
TRAVEL SYSTEM.....	10-372
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-372
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-376
COMPONENT PARTS OF TRAVEL SYSTEM	10-378
UNDERCARRIAGE AND FRAME.....	10-399
LAYOUT DRAWING OF UNDERCARRIAGE	10-399
WORK EQUIPMENT.....	10-401
STRUCTURE OF WORK EQUIPMENT	10-401
FUNCTION OF WORK EQUIPMENT	10-402
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-403
BUCKET CLEARANCE ADJUSTMENT SHIM	10-404
CAB AND ITS ATTACHMENTS	10-405
ROPS CAB	10-405

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$