

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC360LC-11E0

PC360NLC-11E0

PC390HRD-11E0

SERIAL NUMBERS	PC360LC-11E0	K75201~K75573
	PC360NLC-11E0	K75198~K75573
	PC360HRD-11E0	K75356 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
METHOD FOR CHECKING ENGINE TYPE	00-42
PRECAUTIONS FOR DEF	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-80
STANDARD TIGHTENING TORQUE TABLE	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
SPECIFICATIONS - PC390HRD-11E0	01-18
SPECIFICATION DRAWING	01-18
SPECIFICATIONS	01-21
WEIGHT TABLE	01-23
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-38
BOOT-UP SYSTEM	10-47
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-47
SYSTEM OPERATING LAMP SYSTEM	10-49
BATTERY DISCONNECT SWITCH	10-51
ENGINE SYSTEM	10-52

LAYOUT DRAWING OF ENGINE SYSTEM	10-52
ENGINE CONTROL SYSTEM	10-54
AUTO-DECELERATION SYSTEM	10-57
ENGINE AUTOMATIC WARM-UP SYSTEM	10-59
OVERHEAT PREVENTION SYSTEM	10-61
TURBOCHARGER PROTECTION SYSTEM	10-63
AUTOMATIC IDLE STOP SYSTEM	10-65
COMPONENT PARTS OF ENGINE SYSTEM	10-68
COOLING SYSTEM.....	10-84
LAYOUT DRAWING OF COOLING SYSTEM	10-84
CONTROL SYSTEM.....	10-86
LAYOUT DRAWING OF CONTROL SYSTEM PARTS	10-86
MACHINE MONITOR SYSTEM	10-89
KomVision SYSTEM	10-90
KOMTRAX SYSTEM.....	10-94
PPC LEVERS	10-95
AUTOMATIC GREASE SYSTEM.....	10-97
COMPONENT PARTS OF CONTROL SYSTEM.....	10-111
SENSOR.....	10-152
HYDRAULIC SYSTEM.....	10-164
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-164
CLSS	10-167
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-187
PUMP AND VALVE CONTROL SYSTEM	10-193
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-196
HYDRAULIC SYSTEM - PC390HRD-11E0	10-283
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-283
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-286
WORK EQUIPMENT SYSTEM	10-303
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-303
STRUCTURE OF VALVE CONTROL	10-309
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-311
MACHINE PUSH-UP SYSTEM.....	10-313
PPC LOCK SYSTEM	10-315
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-316
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-318
TOOL CONTROL SYSTEM	10-320
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-322
WORK EQUIPMENT SYSTEM - PC390HRD-11E0	10-348
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-348
SWING SYSTEM.....	10-352
LAYOUT DRAWING OF SWING SYSTEM	10-352
SWING CONTROL SYSTEM DIAGRAM	10-355
COMPONENT PARTS OF SWING SYSTEM.....	10-359
TRAVEL SYSTEM.....	10-373
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-373
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-377
COMPONENT PARTS OF TRAVEL SYSTEM	10-379
UNDERCARRIAGE AND FRAME.....	10-400
LAYOUT DRAWING OF UNDERCARRIAGE	10-400
WORK EQUIPMENT.....	10-402
STRUCTURE OF WORK EQUIPMENT	10-402
FUNCTION OF WORK EQUIPMENT	10-403
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-404
BUCKET CLEARANCE ADJUSTMENT SHIM	10-405
CAB AND ITS ATTACHMENTS	10-406
ROPS CAB	10-406
CAB MOUNT	10-407

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$