

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC360LCI-11E0

PC360NLCI-11E0

SERIAL NUMBERS 91258 and up
 K77001 and up

00 INDEX AND FOREWORD

INDEX

| | |
|--|-------|
| 00 INDEX AND FOREWORD | 00-1 |
| ABBREVIATION LIST | 00-24 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-27 |
| HOW TO READ THE SHOP MANUAL..... | 00-27 |
| SAFETY NOTICE FOR OPERATION..... | 00-29 |
| PRECAUTIONS TO PREVENT FIRE..... | 00-37 |
| ACTIONS IF FIRE OCCURS | 00-39 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-40 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS..... | 00-41 |
| PRECAUTIONS FOR DEF..... | 00-42 |
| STORE AdBlue/DEF | 00-43 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-44 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS..... | 00-47 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT..... | 00-54 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-56 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-57 |
| PRACTICAL USE OF KOMTRAX | 00-58 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-59 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-63 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-67 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-68 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... | 00-70 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-71 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-73 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-74 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD..... | 00-78 |
| STANDARD TIGHTENING TORQUE TABLE..... | 00-81 |
| CONVERSION TABLE | 00-88 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| SPECIFICATIONS | 01-3 |
| SPECIFICATION DRAWING..... | 01-3 |
| WORKING RANGE DRAWINGS | 01-5 |
| SPECIFICATIONS | 01-6 |
| WEIGHT TABLE | 01-9 |
| TABLE OF FUEL, COOLANT, AND LUBRICANTS | 01-11 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| UREA SCR SYSTEM..... | 10-7 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-7 |
| UREA SCR SYSTEM DIAGRAM | 10-11 |
| FUNCTION OF UREA SCR SYSTEM..... | 10-12 |
| COMPONENT PARTS OF UREA SCR SYSTEM..... | 10-22 |
| BOOT-UP SYSTEM | 10-31 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM..... | 10-31 |
| SYSTEM OPERATING LAMP SYSTEM | 10-33 |
| BATTERY DISCONNECT SWITCH | 10-35 |
| ENGINE SYSTEM | 10-36 |
| LAYOUT DRAWING OF ENGINE SYSTEM..... | 10-36 |
| ENGINE CONTROL SYSTEM | 10-38 |
| AUTO-DECELERATION SYSTEM..... | 10-41 |
| ENGINE AUTOMATIC WARM-UP SYSTEM..... | 10-43 |
| OVERHEAT PREVENTION SYSTEM..... | 10-45 |
| TURBOCHARGER PROTECTION SYSTEM..... | 10-47 |
| AUTOMATIC IDLE STOP SYSTEM | 10-49 |

| | |
|--|--------|
| COMPONENT PARTS OF ENGINE SYSTEM | 10-52 |
| COOLING SYSTEM..... | 10-69 |
| LAYOUT DRAWING OF COOLING SYSTEM | 10-69 |
| CONTROL SYSTEM..... | 10-71 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-71 |
| MACHINE MONITOR SYSTEM | 10-74 |
| KomVision SYSTEM | 10-76 |
| KOMTRAX SYSTEM..... | 10-80 |
| PPC LEVERS | 10-81 |
| AUTOMATIC GREASE SYSTEM..... | 10-83 |
| COMPONENT PARTS OF CONTROL SYSTEM..... | 10-95 |
| SENSOR..... | 10-133 |
| STRUCTURE OF AMBIENT PRESSURE SENSOR..... | 10-133 |
| FUNCTION OF AMBIENT PRESSURE SENSOR | 10-134 |
| STRUCTURE OF ENGINE OIL PRESSURE SWITCH | 10-135 |
| FUNCTION OF ENGINE OIL PRESSURE SWITCH | 10-136 |
| STRUCTURE OF CHARGE (BOOST) PRESSURE AND TEMPERATURE SENSOR..... | 10-137 |
| FUNCTION OF CHARGE (BOOST) PRESSURE AND TEMPERATURE SENSOR..... | 10-138 |
| STRUCTURE OF COOLANT TEMPERATURE SENSOR..... | 10-139 |
| FUNCTION OF COOLANT TEMPERATURE SENSOR..... | 10-140 |
| STRUCTURE OF NE (CRANKSHAFT) SPEED SENSOR..... | 10-141 |
| FUNCTION OF NE (CRANKSHAFT) SPEED SENSOR | 10-142 |
| STRUCTURE OF Bkup (CAMSHAFT) SPEED SENSOR | 10-143 |
| FUNCTION OF Bkup (CAMSHAFT) SPEED SENSOR..... | 10-144 |
| STRUCTURE OF COMMON RAIL PRESSURE SENSOR | 10-145 |
| FUNCTION OF COMMON RAIL PRESSURE SENSOR..... | 10-146 |
| STRUCTURE OF EGR VALVE LIFT SENSOR | 10-147 |
| FUNCTION OF EGR VALVE LIFT SENSOR..... | 10-148 |
| STRUCTURE OF VGT SPEED SENSOR..... | 10-149 |
| FUNCTION OF KVGT SPEED SENSOR | 10-150 |
| STRUCTURE OF KVGT POSITION SENSOR..... | 10-151 |
| FUNCTION OF KVGT POSITION SENSOR..... | 10-152 |
| STRUCTURE OF MASS AIR FLOW AND TEMPERATURE SENSOR..... | 10-153 |
| STRUCTURE OF KDPF DIFFERENTIAL PRESSURE AND OUTLET PRESSURE SENSOR | 10-154 |
| FUNCTION OF KDPF DIFFERENTIAL PRESSURE AND OUTLET PRESSURE SENSOR..... | 10-155 |
| STRUCTURE OF CRANKCASE PRESSURE SENSOR..... | 10-156 |
| FUNCTION OF CRANKCASE PRESSURE SENSOR..... | 10-157 |
| STRUCTURE OF ENGINE OIL LEVEL SENSOR..... | 10-158 |
| STRUCTURE OF AIR CLEANER CLOGGING SENSOR | 10-159 |
| FUNCTION OF AIR CLEANER CLOGGING SENSOR..... | 10-160 |
| STRUCTURE OF WATER-IN-FUEL SENSOR..... | 10-161 |
| FUNCTION OF WATER-IN-FUEL SENSOR | 10-162 |
| STRUCTURE OF QUICK COUPLER LOW PRESSURE WARNING SWITCH | 10-163 |
| SPECIFICATIONS - QUICK COUPLER LOW PRESSURE WARNING SWITCH..... | 10-164 |
| FUNCTION OF QUICK COUPLER LOW PRESSURE WARNING SWITCH..... | 10-165 |
| STRUCTURE OF AUTO GREASE PRESSURE SWITCH | 10-166 |
| SPECIFICATIONS - AUTO GREASE PRESSURE SWITCH..... | 10-167 |
| FUNCTION OF AUTO GREASE PRESSURE SWITCH..... | 10-168 |
| STRUCTURE OF OVERLOAD CAUTION SENSOR..... | 10-169 |
| SPECIFICATIONS - OVERLOAD CAUTION SENSOR..... | 10-170 |
| FUNCTION OF OVERLOAD CAUTION SENSOR | 10-171 |
| HYDRAULIC SYSTEM..... | 10-172 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-172 |
| CLSS | 10-175 |
| ENGINE AND PUMP COMBINED CONTROL SYSTEM..... | 10-194 |
| PUMP AND VALVE CONTROL SYSTEM | 10-200 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-203 |
| WORK EQUIPMENT SYSTEM | 10-286 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$