

Shop Manual

HYDRAULIC
EXCAVATOR

PC490 -10
PC490LC-10

SERIAL NUMBERS 80001
 K60001 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

**PC490-10
PC490LC-10**

Model **Serial Number**

PC490-10 80001 and up,
PC490LC-10 K60001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts	00-26
Handling of hydraulic equipment	00-27
Method of disconnecting and connecting of push-pull type coupler	00-29
Handling of electrical equipment	00-32
How to read electric wire code	00-40
Precautions when performing operation	00-43
Practical use of KOMTRAX	00-47
Standard tightening torque table	00-48
List of abbreviation	00-52
Conversion table	00-57
01 Specifications	01-1
Table of contents	01-2
Specifications	01-3
Specification drawings	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-9
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine-related parts	10-3
Cooling system	10-5
Cooling fan pump	10-8
Cooling fan motor	10-18
Power train	10-26
Power train	10-26
Swing circle	10-28
Swing machinery	10-29
Final drive	10-31
Undercarriage and frame	10-33
Track frame and idler cushion	10-33
Hydraulic system	10-35
Hydraulic component layout	10-35
Valve control	10-37
Hydraulic tank	10-39
CLSS	10-42
Main pump	10-47
Control valve	10-71
Swing motor	10-125
Travel motor	10-136
PPC valve	10-151
Solenoid valve	10-170
Attachment circuit selector valve	10-173
Variable pressure compensation valve	10-176
Center swivel joint	10-178
Accumulator	10-180
Hydraulic drift prevention valve	10-181
ATT EPC valve assembly	10-186
Return oil filter	10-188

Quick coupler control valve	10-189
Work equipment	10-192
Work equipment.....	10-192
Work equipment shims	10-193
Bucket play adjustment shim.....	10-194
Cab and its attachments	10-195
Cab mount and cab tipping stopper	10-195
ROPS cab	10-196
Electrical system	10-197
Electrical control system	10-197
Machine monitor system.....	10-246
KOMTRAX system.....	10-264
Sensor	10-266
PPC levers	10-287
Auto grease system	10-289
20 Standard value table	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
General information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-6
Engine and cooling system	30-9
Checking engine speed	30-9
Measuring boost pressure.....	30-10
Measuring exhaust gas temperature	30-11
Measuring exhaust gas color.....	30-12
Measuring and adjusting valve clearance	30-14
Measuring compression pressure.....	30-17
Measuring blowby pressure	30-20
Measuring engine oil pressure.....	30-21
Measuring EGR valve and KVGT oil pressure.....	30-23
Measuring fuel pressure	30-24
Measuring fuel leakage and return	30-26
Bleeding air from fuel system	30-29
Checking fuel circuit for leakage	30-31
Handling cylinder cutout mode operation.....	30-32
Handling no injection cranking operation	30-33
Checking and adjusting air conditioner compressor belt tension	30-34
Replacing alternator belt	30-35
Fuel doser cleaning procedure	30-36
Writing compensation values at replacement of injector and engine controller	30-39
Power train.....	30-43
Testing swing circle bearing clearance	30-43
Undercarriage and frame.....	30-44
Testing and adjusting track shoe tension	30-44
Hydraulic system	30-45
Releasing remaining pressure from hydraulic circuit.....	30-45
Measuring and adjusting oil pressure in work equipment, swing and travel circuits.....	30-46
Measuring oil pressure in control circuit.....	30-51
Measuring and adjusting oil pressure in pump PC control circuit.....	30-52
Measuring and adjusting oil pressure in pump LS control circuit	30-55
Measuring solenoid valve output pressure.....	30-60
Measuring PPC valve output pressure	30-64
Adjusting play of work equipment and swing PPC valves.....	30-66
Measuring and adjusting quick coupler control valve output pressure	30-67

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$