

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC490 -11

PC490LC -11

**SERIAL NUMBERS 85006 and up
 K70001 and up**

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-27
BOOT-UP SYSTEM	10-36
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-36
SYSTEM OPERATING LAMP SYSTEM	10-38
BATTERY DISCONNECT SWITCH	10-40
ENGINE SYSTEM	10-41
LAYOUT DRAWING OF ENGINE SYSTEM	10-41
ENGINE CONTROL SYSTEM	10-44
AUTO-DECELERATION SYSTEM	10-47
ENGINE AUTOMATIC WARM-UP SYSTEM	10-49
OVERHEAT PREVENTION SYSTEM	10-51

TURBOCHARGER PROTECTION SYSTEM	10-54
AUTOMATIC IDLE STOP SYSTEM	10-56
COMPONENT PARTS OF ENGINE SYSTEM	10-59
COOLING SYSTEM.....	10-75
LAYOUT DRAWING OF COOLING SYSTEM	10-75
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-78
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-80
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-83
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-98
LAYOUT DRAWING OF CONTROL SYSTEM	10-98
MACHINE MONITOR SYSTEM	10-101
KomVision SYSTEM	10-102
KOMTRAX SYSTEM.....	10-106
PPC LEVERS	10-107
AUTOMATIC GREASE SYSTEM.....	10-109
COMPONENT PARTS OF CONTROL SYSTEM.....	10-124
SENSOR.....	10-160
HYDRAULIC SYSTEM.....	10-163
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-163
CLSS	10-165
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-184
PUMP AND VALVE CONTROL SYSTEM	10-191
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-194
WORK EQUIPMENT SYSTEM	10-284
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-284
STRUCTURE OF VALVE CONTROL.....	10-289
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-290
MACHINE PUSH-UP SYSTEM.....	10-292
PPC LOCK SYSTEM	10-294
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-295
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-297
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-299
SWING SYSTEM.....	10-318
LAYOUT DRAWING OF SWING SYSTEM	10-318
SWING CONTROL SYSTEM DIAGRAM	10-324
COMPONENT PARTS OF SWING SYSTEM.....	10-328
TRAVEL SYSTEM.....	10-343
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-343
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-347
COMPONENT PARTS OF TRAVEL SYSTEM	10-349
UNDERCARRIAGE AND FRAME.....	10-371
LAYOUT DRAWING OF UNDERCARRIAGE	10-371
WORK EQUIPMENT.....	10-372
STRUCTURE OF WORK EQUIPMENT	10-372
FUNCTION OF WORK EQUIPMENT	10-373
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-374
BUCKET CLEARANCE ADJUSTMENT SHIM	10-375
CAB AND ITS ATTACHMENTS	10-376
ROPS CAB	10-376
CAB MOUNT	10-377
CAB TIPPING STOPPER	10-378
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC490LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$