

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC700LC-11

**SERIAL NUMBERS 80013 and up
 K70001 and up**

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-12
SPECIFICATIONS	01-14
WEIGHT TABLE	01-20
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-23
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-27
BOOT-UP SYSTEM	10-36
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-36
SYSTEM OPERATING LAMP SYSTEM	10-37
BATTERY DISCONNECT SWITCH	10-39
ENGINE SYSTEM	10-40
LAYOUT DRAWING OF ENGINE SYSTEM	10-40
ENGINE CONTROL SYSTEM	10-42
AUTO-DECELERATION SYSTEM	10-45
AUTOMATIC LOW IDLE SYSTEM	10-47
ENGINE AUTOMATIC WARM-UP SYSTEM	10-49

OVERHEAT PREVENTION SYSTEM	10-52
TURBOCHARGER PROTECTION SYSTEM	10-54
AUTOMATIC IDLE STOP SYSTEM	10-56
COMPONENT PARTS OF ENGINE SYSTEM	10-59
COOLING SYSTEM.....	10-77
LAYOUT DRAWING OF COOLING SYSTEM	10-77
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-79
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-81
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-83
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-99
LAYOUT DRAWING OF CONTROL SYSTEM	10-99
MACHINE MONITOR SYSTEM	10-101
KomVision SYSTEM	10-103
KOMTRAX SYSTEM.....	10-107
COMPONENT PARTS OF CONTROL SYSTEM.....	10-108
HYDRAULIC SYSTEM.....	10-144
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-144
OLSS	10-147
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-159
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-164
WORK EQUIPMENT SYSTEM	10-216
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-216
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-222
MACHINE PUSH-UP SYSTEM.....	10-224
PPC LOCK SYSTEM	10-226
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-227
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-229
SWING SYSTEM.....	10-248
LAYOUT DRAWING OF SWING SYSTEM	10-248
SWING CONTROL SYSTEM DIAGRAM	10-251
COMPONENT PARTS OF SWING SYSTEM.....	10-255
TRAVEL SYSTEM.....	10-269
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-269
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-273
COMPONENT PARTS OF TRAVEL SYSTEM	10-276
UNDERCARRIAGE AND FRAME.....	10-294
LAYOUT DRAWING OF UNDERCARRIAGE	10-294
WORK EQUIPMENT.....	10-295
STRUCTURE OF WORK EQUIPMENT	10-295
FUNCTION OF WORK EQUIPMENT	10-296
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-297
BUCKET CLEARANCE ADJUSTMENT SHIM	10-298
CAB AND ITS ATTACHMENTS	10-299
ROPS CAB	10-299
CAB MOUNT	10-300
CAB TIPPING STOPPER	10-301
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC700LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14
STANDARD VALUE TABLE FOR MACHINE: PC700LC-11	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-31
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$