

Shop Manual

HYDRAULIC EXCAVATOR

PC88MR-11E0 SERIAL NUMBERS 10001 and up
F20001 and up

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-16
HOW TO READ THE SHOP MANUAL	00-16
SAFETY NOTICE FOR OPERATION	00-18
PRECAUTIONS TO PREVENT FIRE	00-26
ACTIONS IF FIRE OCCURS	00-28
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-29
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-30
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-33
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-40
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-42
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-43
PRACTICAL USE OF KOMTRAX	00-44
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-45
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-49
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-53
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-54
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-56
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-59
HOW TO READ ELECTRICAL WIRE CODE	00-60
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-64
STANDARD TIGHTENING TORQUE TABLE	00-67
CONVERSION TABLE	00-74
ABBREVIATION LIST	00-79
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-8
WEIGHT TABLE	01-13
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-15
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
BOOT-UP SYSTEM	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-5
SYSTEM OPERATING LAMP SYSTEM	10-6
BATTERY DISCONNECT SWITCH	10-8
ENGINE SYSTEM	10-9
LAYOUT DRAWING OF ENGINE SYSTEM	10-9
ENGINE CONTROL SYSTEM	10-11
AUTO-DECELERATION SYSTEM	10-14
ENGINE AUTOMATIC WARM-UP SYSTEM	10-16
OVERHEAT PREVENTION SYSTEM	10-18
TURBOCHARGER PROTECTION SYSTEM	10-19
AUTOMATIC IDLE STOP SYSTEM	10-20
COMPONENT PARTS OF ENGINE SYSTEM	10-23
COOLING SYSTEM	10-40
LAYOUT DRAWING OF COOLING SYSTEM	10-40
CONTROL SYSTEM	10-42
LAYOUT DRAWING OF CONTROL SYSTEM	10-42
MACHINE MONITOR SYSTEM	10-44
KOMTRAX SYSTEM	10-46
COMPONENT PARTS OF CONTROL SYSTEM	10-47

HYDRAULIC SYSTEM.....	10-78
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-78
CLSS	10-81
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-84
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-88
WORK EQUIPMENT SYSTEM	10-173
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-173
PPC LOCK SYSTEM	10-175
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-176
OVERLOAD CAUTION SYSTEM.....	10-178
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-180
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-182
SWING SYSTEM	10-210
LAYOUT DRAWING OF SWING SYSTEM	10-210
SWING CONTROL SYSTEM DIAGRAM	10-212
COMPONENT PARTS OF SWING SYSTEM.....	10-214
TRAVEL SYSTEM.....	10-227
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-227
SYSTEM DIAGRAM OF TRAVEL CONTROL SYSTEM.....	10-229
COMPONENT PARTS OF TRAVEL SYSTEM	10-232
UNDERCARRIAGE AND FRAME.....	10-246
LAYOUT DRAWING OF UNDERCARRIAGE	10-246
IDLER CUSHION	10-248
WORK EQUIPMENT.....	10-249
STRUCTURE OF WORK EQUIPMENT	10-249
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-251
BUCKET CLEARANCE ADJUSTMENT SHIM	10-252
CAB AND ITS ATTACHMENTS	10-253
ROPS CAB	10-253
CAB MOUNT	10-254
TAKE WIRING HARNESS OUT OF CAB	10-256
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC88MR-11E0.....	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-5
STANDARD VALUE TABLE FOR MACHINE: PC88MR-11E0	20-5
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE	20-21
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-10
ENGINE AND COOLING SYSTEM.....	30-12
TEST ENGINE SPEED	30-12
TEST EXHAUST GAS COLOR.....	30-16
TEST AND ADJUST VALVE CLEARANCE	30-19
TEST COMPRESSION PRESSURE.....	30-21
TEST BLOWBY PRESSURE	30-24
TEST ENGINE OIL PRESSURE	30-26
VISUAL CHECK INSIDE OF EGR VALVE.....	30-28
CLEAN INSIDE OF EGR VALVE.....	30-30
TEST FUEL PRESSURE	30-33
TEST FUEL RETURN RATE AND LEAKAGE.....	30-35
BLEED AIR FROM FUEL SYSTEM	30-40
TEST FUEL SYSTEM FOR LEAKAGE	30-42
CYLINDER CUT-OUT MODE OPERATION.....	30-44
NO-INJECTION CRANKING OPERATION	30-45

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$