

KOMATSU

HYDRAULIC
EXCAVATOR

PW118MR-11

SERIAL NUMBERS PW118MR-11 F30003 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR PW118MR-11

Machine model	Serial number
PW118MR-11	F30003 and up

00 INDEX AND FOREWORD

TABLE OF CONTENTS

00 INDEX AND FOREWORD

TABLE OF CONTENTS	2
FOREWORD, SAFETY AND GENERAL INFORMATION	22
IMPORTANT SAFETY NOTICE	22
FIRE PREVENTION	27
DISPOSE OF WASTE MATERIALS	28
HOW TO READ THE SHOP MANUAL	29
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	31
HANDLING EQUIPMENT OF FUEL SYSTEM DEVICES	33
HANDLING OF INTAKE SYSTEM PARTS	34
HANDLING OF HYDRAULIC EQUIPMENT	35
METHOD OF DISCONNECTING AND CONNECTING OF PUSH-PULL TYPE COUPLER	37
HANDLING OF ELECTRICAL EQUIPMENT	40
HOW TO READ ELECTRIC WIRE CODE	48
PRECAUTIONS WHEN PERFORMING OPERATION	51
PRACTICAL USE OF KOMTRAX	56
STANDARD TIGHTENING TORQUE TABLE	57
ABBREVIATION	63
CONVERSION TABLE	70

01 SPECIFICATION

SPECIFICATIONS	3
OVERALL DIMENSIONS	3
WORKING RANGE DRAWINGS	4
SPECIFICATIONS	5
WEIGHT TABLE	10
TABLE OF FUEL, COOLANT, AND LUBRICANTS	12

10 STRUCTURE AND FUNCTION

ABBREVIATION LIST	4
UREA SCR SYSTEM	11
LAYOUT DRAWING OF UREA SCR SYSTEM	11
COMPONENT PARTS OF UREA SCR SYSTEM	24
DEF TANK	27
DEF PUMP	29
DEF INJECTOR	30
DEF HOSE	31
DEF TANK HEATING VALVE	32
BOOT-UP SYSTEM	33
LAYOUT DRAWING OF BOOT-UP SYSTEM	33
ENGINE SYSTEM	34
LAYOUT DRAWING OF ENGINE SYSTEM	34
COMPONENT PARTS OF ENGINE SYSTEM	35
EGR SYSTEM	39
EGR VALVE	41
EGR COOLER	43
KCCV SYSTEM	44
KCCV VENTILATOR	47
CDR VALVE	48
EXHAUST THROTTLE VALVE	49

KDOC	50
COOLING SYSTEM.....	52
POWER TRAIN.....	54
POWER TRAIN OVERVIEW	54
SWING CIRCLE	56
SWING MACHINERY	57
UNDERCARRIAGE AND FRAME	59
FRONT AXLE	59
TRANSMISSION	65
HYDRAULIC SYSTEM	67
LAYOUT DRAWING OF HYDRAULIC SYSTEM.....	67
HYDRAULIC TANK	69
HYDRAULIC PUMP.....	71
CONTROL VALVE.....	95
CLSS	106
WORK EQUIPMENT SYSTEM.....	125
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM.....	125
UNDERCARRIAGE PART	127
VALVE CONTROL.....	128
SELF-REDUCING PRESSURE VALVE	129
SWING MOTOR	135
TRAVEL MOTOR	142
WORK EQUIPMENT AND SWING PPC VALVE.....	146
BOOM SWING AND 2-PIECE BOOM PPC VALVE	152
TRAVEL PPC VALVE	153
BRAKES PUMP	154
SWIVEL JOINT.....	156
SOLENOID VALVE.....	158
STEERING CONTROL SOLENOID VALVE GROUP.....	160
1-ATTACHMENT FLOW ADJUSTMENT EPC VALVE.....	161
2-ATTACHMENT FLOW ADJUSTMENT EPC VALVE.....	162
TRAVEL SPEED AND DIRECTION CONTROL SOLENOID VALVE.....	163
BOOM/OUTRIGGER SCHEMATIC.....	164
UNDERCARRIAGE ATTACHMENT SCHEMATIC.....	165
ACCUMULATOR	166
HOLDING VALVE.....	168
2-PIECE BOOM SAFETY VALVE	172
BLADE/OUTRIGGERS SAFETY VALVE	173
BOOM SWING SAFETY VALVE	174
HYDRAULIC QUICK COUPLER	175
WORK EQUIPMENT	178
WORK EQUIPMENT	178
WORK EQUIPMENT SHIM	179
ELECTRICAL SYSTEM.....	180
ELECTRICAL CONTROL SYSTEM	180
ENGINE CONTROL SYSTEM.....	181
FUNCTION OF ENGINE CONTROL SYSTEM	182
AUTO-DECELERATION SYSTEM.....	185
ENGINE AUTOMATIC WARM-UP SYSTEM.....	187
OVERHEAT PREVENTION SYSTEM.....	189
TURBOCHARGER PROTECTION SYSTEM.....	191
AUTOMATIC IDLE STOP SYSTEM	192

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$