



PW168-11E1

MACHINE MODEL

PW168-11E1

SERIAL NUMBER

H68051 AND UP

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
- Materials and specifications are subject to change without notice.
- PW168-11E1 mount the SAA4D107E-5 engine.
- For details of the engine, see the 107 Series Engine Shop Manual.

Contents

00 Foreword	0-1
Content	1-1
Abbreviation List	0-1
Foreword, Safety, Basic Information	0-6
How to Read the Shop Manual	0-6
Safety Notice for Operation	0-8
General Precautions	0-9
Preparations for Work	0-9
Precautions During Work	0-10
Hoisting Instructions	0-11
Hoisting	0-11
Coating Materials	0-12
Standard Tightening Torque	0-14
Standard Tightening Torque of Bolts and Nuts	0-14
Tightening Torque of Hose Nuts	0-15
Tightening Torque of Split Flange Bolts	0-15
Tightening Torques for Hoses (Taper Seal Type and Face Seal Type)	0-15
Tightening Torque for 107 Engine Series (bolts and nuts)	0-16
Tightening Torque for 107 Engine Series (Eye Joints)	0-16
Tightening Torque for 107 Engine Series (Tapered Screws)	0-16
Electric Wire Code	0-17
Classification by Thickness	0-17
Classification by Color and Code	0-17
Conversion Tables	0-18
Method of Using the Conversion Table	0-18
Units	0-24
01 Specification	1-1
Specification Dimension Drawings	1-2
Dimensions	1-2
Working Ranges	1-4
Working Range: 1-Piece Boom	1-4
Working Range: 2-Piece Boom	1-5
Weight Table	1-9
1-Piece Boom	1-10
2-Piece Boom	1-11
Fuel, Coolant, Lubricant	1-12
10 Structure and Function	10-1
UREA SCR System	10-4
Layout Drawing of UREA SCR System	10-4
UREA SCR System Diagram	10-8
Component Parts of ATS System	10-30
SCR Assembly	10-31
KDPF	10-32
BOOT-UP system	10-44
Layout Drawing of BOOT-UP System	10-44
System Operating Lamp System	10-45
Battery Disconnect Switch	10-46
Engine System	10-48
Layout Drawing of Engine System	10-48
Engine Control System	10-49
Auto-Deceleration System	10-53
Engine Automatic Warm-up System	10-55
Overheat Prevention System	10-57
Turbocharger Protection System	10-59

Automatic Idle Stop System	10-61
Component Parts of Engine System	10-65
Crankcase Ventilation System	10-67
Exhaust Throttle Valve	10-69
Cooling system	10-70
Engine Output Control System of Fan Clutch	10-73
Component Parts of Cooling System	10-75
Control System	10-76
Machine Monitor System	10-76
KomVision System	10-78
KOMTRAX System	10-82
Component Parts of Control System	10-83
KomVision Controller	10-112
Machine Controller	10-122
Machine Control System Diagram	10-132
PPC Levers	10-158
Power Train System	10-160
Layout Drawing of Power Train System	10-160
Component Parts of Power Train System	10-162
Travel Motor	10-169
Travel System	10-175
Swivel Joint	10-180
Braking System	10-182
Power Brake Valve	10-188
Steering System	10-193
Suspension Lock Cylinder (Axle Lock)	10-202
Swing System	10-204
Swing Circle	10-204
Swing Machinery & Motor	10-205
Operation of Swing Lock	10-210
Relief Valve Portion	10-211
Work Equipment – Swing PPC Valve	10-212
Undercarriage	10-216
Trailer	10-218
Calculation of Maximum Coupling Load	10-218
Automatic Trailer Coupling for Blade	10-219
Automatic Trailer Coupling for Outrigger	10-223
Inspection	10-228
Hydraulic System	10-230
Layout Drawing of Hydraulic System	10-230
CLSS	10-232
Component Parts of Hydraulic System	10-235
Pilot Pressure Control (PPC) System	10-258
Control Valve	10-260
Hydraulic Circuit Diagram and Name of Valves	10-275
Solenoid Valve Block	10-291
ATT EPC Assembly	10-293
2nd Auxiliary Circuit in the Undercarriage	10-323
Hydraulic Quick Coupler	10-325
Full Hydraulic Quick Coupler	10-328
ECSS	10-330
Work Equipment	10-336
Dimension of Arm	10-338
Hydraulic Cylinder	10-340
Air Conditioner Unit	10-346
Air Conditioner Component	10-346
Specifications of Air Conditioner	10-347
Sensors	10-348

Ambient Pressure Sensor	10-350
Charge (Boost) Pressure and Temperature Sensor	10-351
Coolant Temperature Sensor	10-352
Ne (Crankshaft) Speed Sensor	10-352
Bkup (Camshaft) Speed Sensor	10-353
Common Rail Pressure Sensor	10-353
Exhaust manifold Pressure Sensor	10-354
TBAP Ambient Pressure and Temperature Sensor	10-355
KDPF Differential Pressure and Outlet Pressure Sensor	10-356
KDOC Inlet Temperature Sensor	10-357
Engine Oil Level Sensor	10-358
Fuel Level Sensor	10-359
WIF (Water-In-Fuel Detection) Sensor	10-360
Coolant Level Sensor	10-361
Hydraulic Oil Temperature Sensor	10-362
Air Cleaner Clogging Sensor	10-362
Overload Caution Sensor	10-363
Swing Proximity Sensor	10-364
Brake Sensors	10-364
Main Valve Sensor	10-367
Block Pressure Sensors and Switches	10-367
Lubrication	10-369
Auto-Grease Pump	10-369
Lubrication Diagrams	10-374
Additional Preparations	10-378
20 Standard Value Table	20-1
Standard Value Table for Engine Related Parts	20-2
Standard Value Table for Chassis Related Parts	20-10
PM Clinic Service	20-24
30 Testing and Adjusting	30-1
Engine and Cooling System	30-4
Examine Engine Speed	30-4
Examine Boost Pressure	30-7
Examine Exhaust Gas Color	30-9
Examine and Adjust Valve Clearance	30-12
Examine Compression Pressure	30-14
Examine Blowby Pressure	30-20
Examine Engine Oil Pressure	30-22
Examine Fuel Pressure	30-23
How to Examine Fuel Pressure	30-25
Examine Fuel Discharge, Return and Leakage	30-29
How to Examine Fuel Discharge, Return, and Leakage	30-31
Bleed Air from Fuel System	30-35
Examine Fuel Circuit for Leakage	30-36
Examine and Adjust Air Conditioner Compressor Belt Tension	30-40
Replace the Fan Belt	30-42
Examine cooling fan speed	30-43
Write Correction for Ash in Soot Accumulation to Engine Controller	30-44
Examine SCR Related Functions	30-45
Examine DEF Pump Raised Pressure	30-48
How to Examine DEF Pump Raised Pressure	30-49
Examine Injection Volume from DEF Injector	30-52
How to Examine Injection Volume from DEF Injector	30-53
Examine DEF Line Heater Relay 1	30-57
How to Examine DEF Line Heater Relay 1	30-57
Examine DEF Line Heater Relay 2	30-60
Examine DEF Pump Heater Relay	30-63

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$